


BURNER CONFIGURATION COOKTOP





Each of your burners has a specific BTU (British Thermal Unit) rating. Before disassembly, note the location of each burner. If a burner is replaced in the wrong position it may not function correctly.






Become familiar with the location of your burners. Below are the standard burner configurations.

Platinum Series Ranges: 24", 30", 36", 48" and 60"



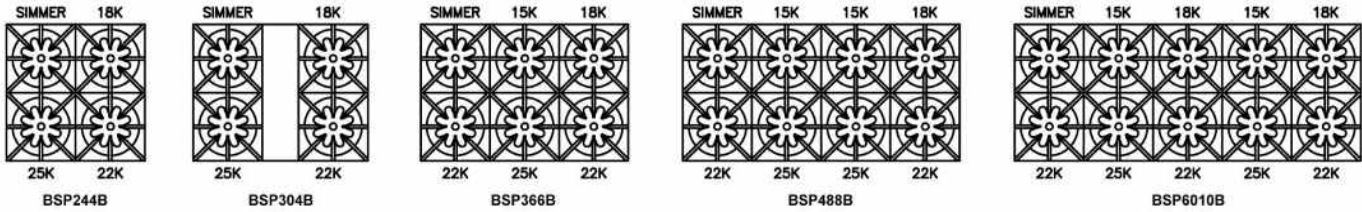


RNB Series Ranges: 24", 30", 36", 48" and 60"


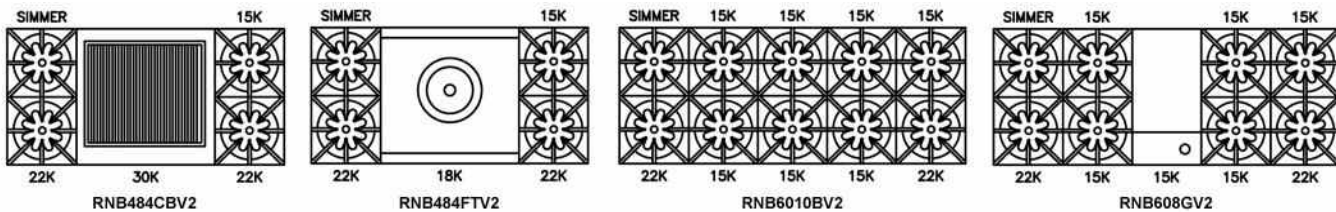
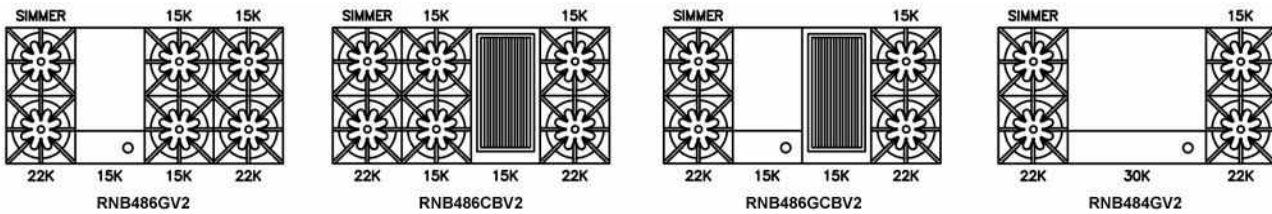
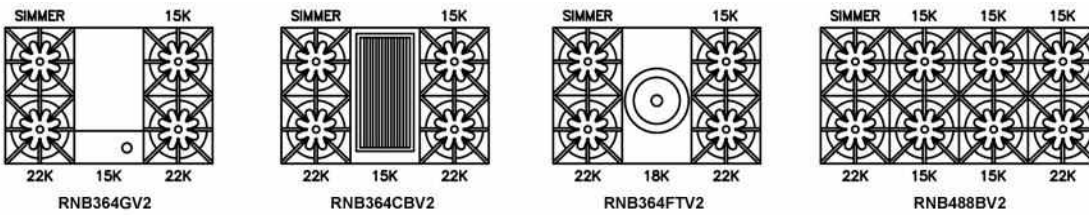
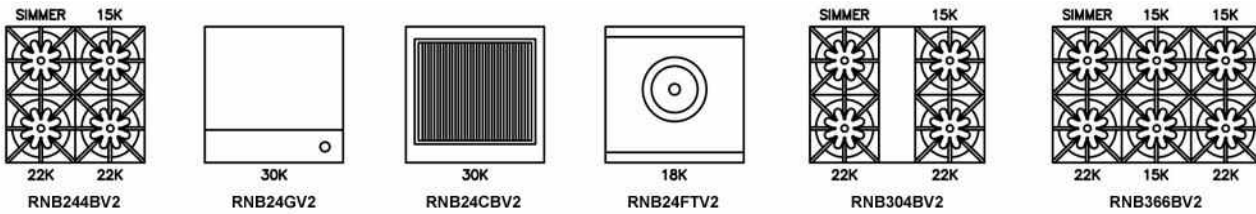


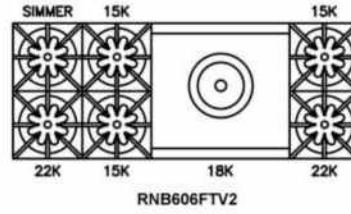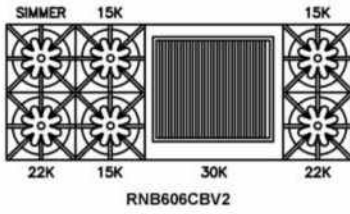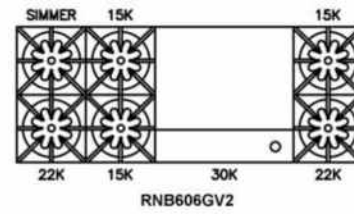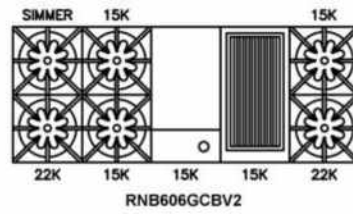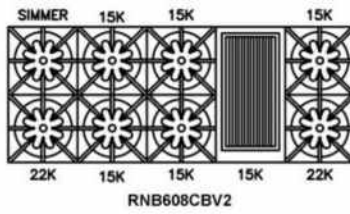



Heritage Classic Series Ranges: 36", 48" and 60"

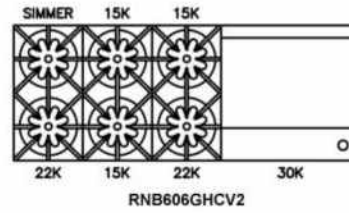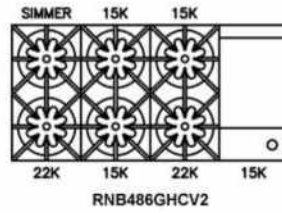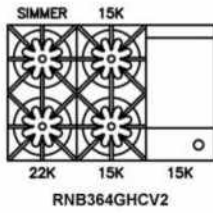

Precious Metals Series Ranges: 30" and 36"

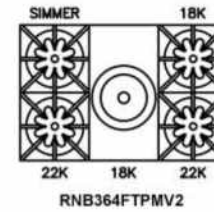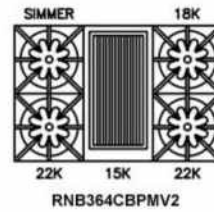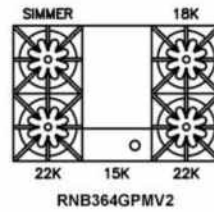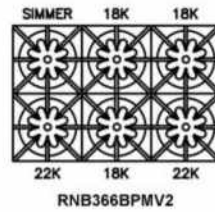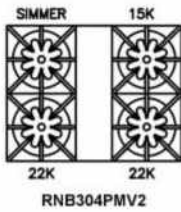

RCS Series Ranges (Open Burner): 30" and 36"

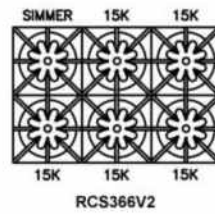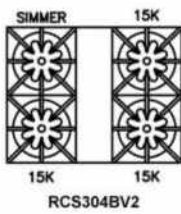

RCS Series Ranges (Sealed Burner): 24", 30" and 36"

