



The Life of the Kitchen.®


PARTS CATALOG

DDW24S Dishwasher

Page	Description
2	Base Assembly
3	Drain and Filter Assembly
4	Door Assembly
5	Upper Chassis Assembly/ Wash Compartment
6	Wash System
7	Control Panel

Revised 04-10-2012


DDW24S Dishwasher - Base Assembly

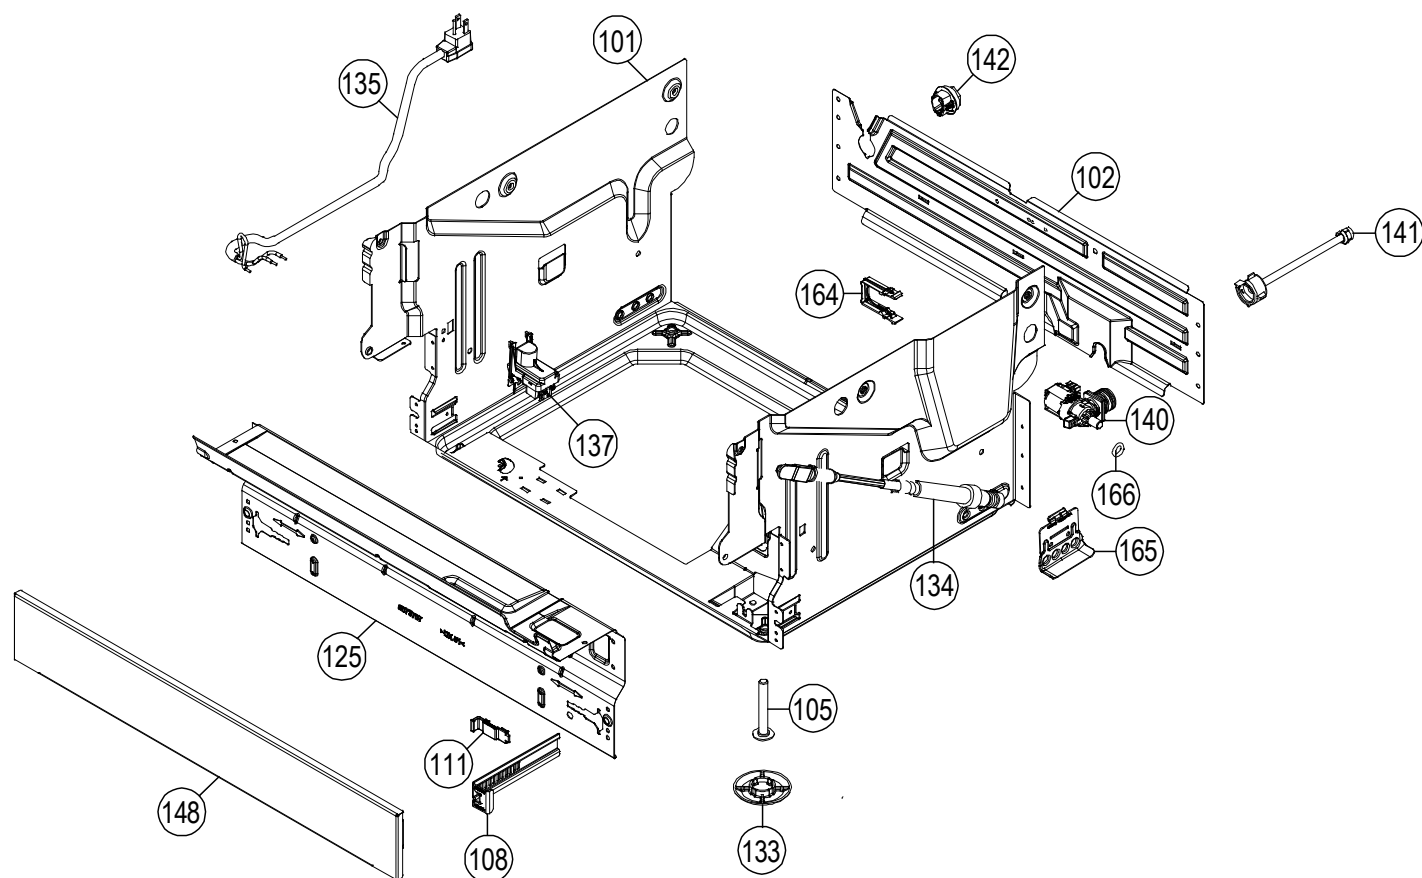

Item	Part #	Description
101	105220	BOTTOM OUTER COMPLETE
101-a	105267	SCREW M4 x 8 A4 MRT VAXED T20
101-b	105813	SCREW O-RING A2-M6 X 12 T30
102	105167	REAR PANEL
102-a	105231	SCREW RTS 4.2 X 13 FZB T20 SORT.
105	105153	FOOT M10 X 75 T30 8.8 FZB
108	105142	BRACKET KICKING PLATE
111	105143	SPRING KICKING PLATE L-GREY
125	105168	GUARD PLATE STRAIGHT
125-a	105231	SCREW RTS 4.2 X 13 FZB T20 SORT.
133	105103	SLIDE FOOT DM-14
134	105208	DOOR SPRING CPL HARD DAMPER YEL

Item	Part #	Description
135	105201	CORD SET 15A
137	105199	FILTER WITH SCREW PLINT
137-a	105226	SCREW MRT-TT 4 X 10 FZB T20
140	105218	KIT INL.VALVE/LOCK ARM SING 120V
141	105111	CONNECTIONS PIPE 9/16-3/4 UL4
142	105102	GROMMET Z13
148	105145	KICK-PLATE USA XXL MET.GREY
164	105193	LOCK ARM INLET VALVE
165	105169	HOLDER DOOR SPRING OUT. BOTTOM
165-a	105232	SCREW RTK ST 4,2 X 9.5 FZB WAX.
166	105820	O-RING 10 X 3.5


DDW24S - Drain and Filter Assembly

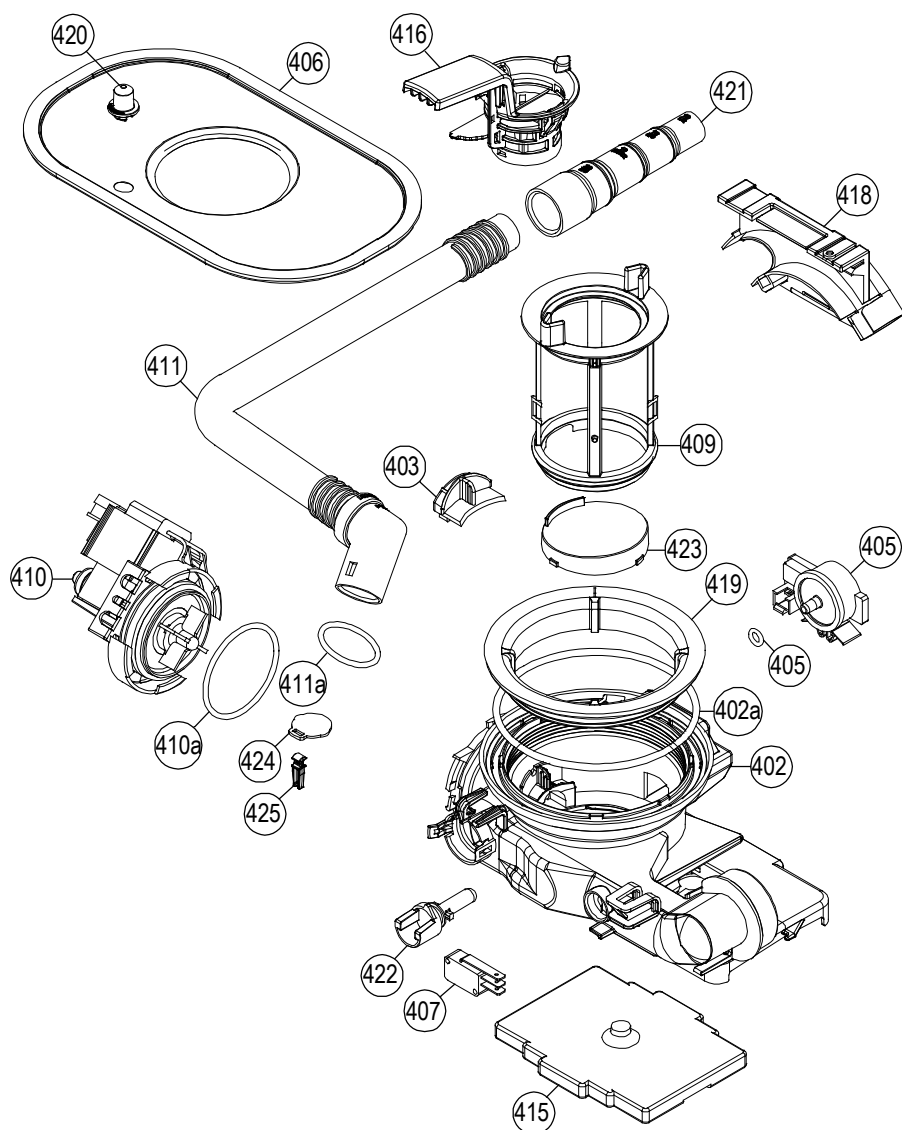

Item	Part #	Description
402	105207	BOTTOM WELL PRESSURE SENS.
402-a	105137	O-RING 110 x 4
403	105171	RINSE BOTTOM WELL YELLOW
405	105149	PRESSURE SENSOR *ESD*
405-a	105152	O-RING 6.3 X 2.4
406	105128	STRAINER DW20
407	105147	MICROSWITCH FLOAT
409	105163	PIPE FILTER ELECTRO POLISH CPL
410	105181	DRAIN PUMP 120V 60Hz
410-a	105115	O-RING 49.5 X 3.0
411	105821	OUTLET W HARD END CUFF
411-a	105233	O-RING 32.2 X 3
415	105170	FLOAT

Item	Part #	Description
416	105164	STRAINER BASKET GREY
418	105127	HOLDER OUTLET HOSE
418-a	105101	CABLE STRIP
418-b	105227	SCREW PT KB40 X 10
419	105129	LOCK RING BOTTOM WELL
420	105135	VENTILATOR
421	105144	END CUFF
422	105178	THERMISTOR
423	105197	BOTTOM LID TUBE FILTER
424	105195	SEALING FLAT NON RETURN VALVE
425	105200	HOOK NON RETURN VALVE


DDW24S Dishwasher - Door Assembly

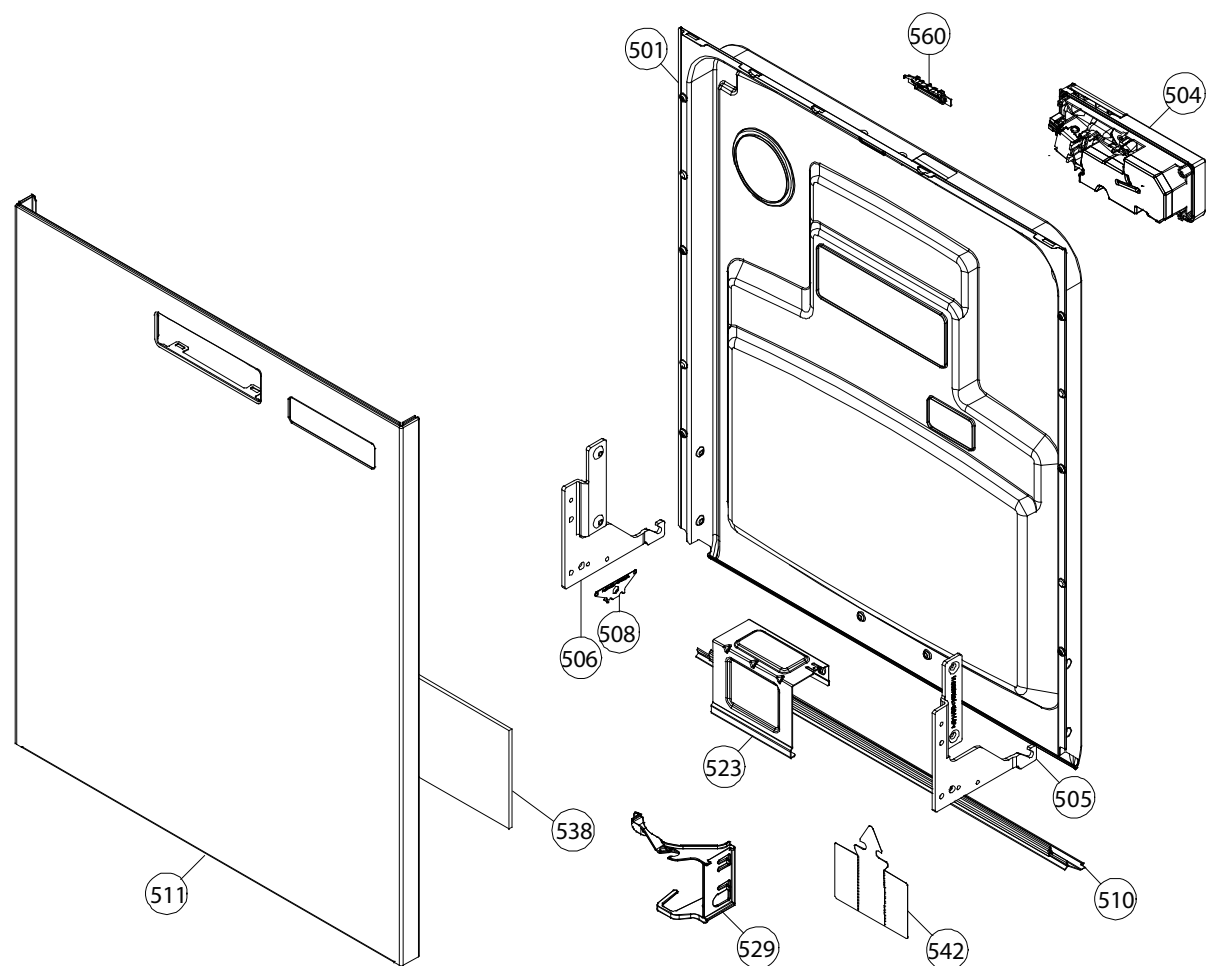

Item	Part #	Description
501	105224	DOOR INNER WITHOUT FAN
501-b	105229	SCREW A2 MKFT 5 x 10
504	105823	COMBI DISP
505	105824	HINGE RIGHT
506	105825	HINGE LEFT
507	105110	HINGE SCREW
507-a	105100	NUT M4 (LOCKING)
508	105248	WASHER HINGE BEARING
510	105118	DOOR SEAL LOWER
511	105827	DOOR OUTER

Item	Part #	Description
523	105116	BRACE 86 cm
523-a	105225	SCREW A4 RTS 4.2 x 13 T20 Sort.
523-b	105231	SCREW RTS 4.2 x 13 T20 Sort.
529	105155	BRACKET FOR HARNESS
538	105826	INSULATION
542	105257	COVER, CABLES
560	105828	LOCK HEEL

DDW24S Upper Chassis/Wash Compartment

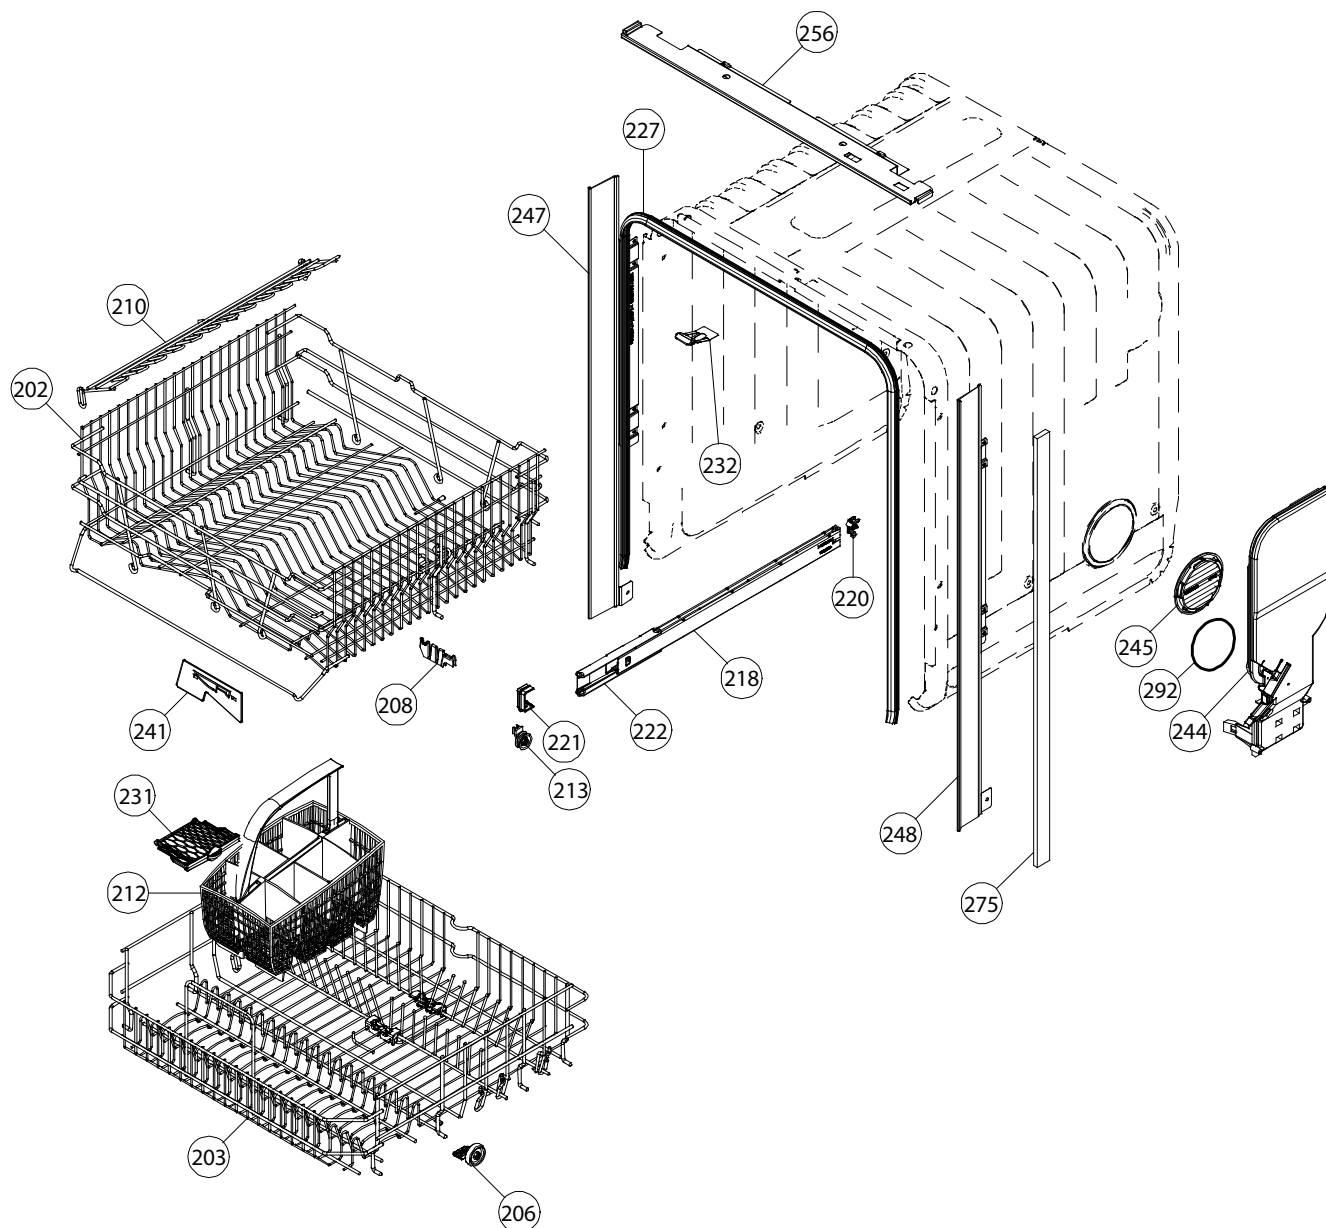


Item	Part #	Description
202	105222	UPPER BASKET STD COMPLETE
203	105112	LOWER BASKET STD COMPLETE
206	105184	WHEEL FOR LOWER BASKET
208	105120	HOLDER, CARVING KNIVES
210	105122	WINE GLASS SHELF
212	105215	CUTLERY BASKET
213	105117	BASKET WHEEL COMPLETE
218	105107	KIT, GUIDE RAIL, COMPLETE
220	105114	BALL CATCH GREY COMPLETE
221	105209	BASKET STOP
222	105217	KIT BALL HOLDER INCLUDING BALLS
227	105108	DOOR STRIP


Item	Part #	Description
231	105183	DOOR CUTLERY BASKET
232	105214	LOCK CATCH WITH SCREW/NUT
241	105109	KNIFE STOP PLATE
244	105182	AIR BREAK STD.
245	105179	LOCK RING AIR BREAKER
247	105156	TRIM STRIP LEFT
248	105157	TRIM STRIP RIGHT
256	105158	TRIM RAIL LOW
275	105119	SEALING STRIP, TRIM STRIP
292	105270	O-RING

DDW24S Dishwasher - Wash System

Item	Part #	Description
303	105180	CIRC. PUMP 120 V 60 Hz
303-a	105206	CAPACITOR 7.0 UF 400 V
304	105194	RUBBER DAMPER CIRC. PUMP
305	105829	HEATER WITH INSERT
306	105191	SEALING HEATER
307	105192	INSERT FOR HEATER
308	105139	CUP DRAINAGE GREY
310	105221	KIT HOSE INCL .CLAMPS
312	105161	SPRAY ARM BEARING
313	105106	KIT SPRAY ARM BEARING UPPER
318	105140	SPRAY PIPE
323	105161	KIT SPRAY ARM BEAR
325	105131	SPRAY ARM LOWER COMPLETE
326	105132	SPRAY ARM UPPER COMPLETE
327	105275	TUBE POT RINSE
327-a	105228	SCREW PT KB 40 X 10
328	105123	LOCK RING SPRAY TOWER
329	105177	WATER FLOW CHANNEL
331	105276	SPRAY NOZZLE
357	105204	SEALING HEATER BOTTOM SUMP
359	105268	O-RING 69.5 X 3

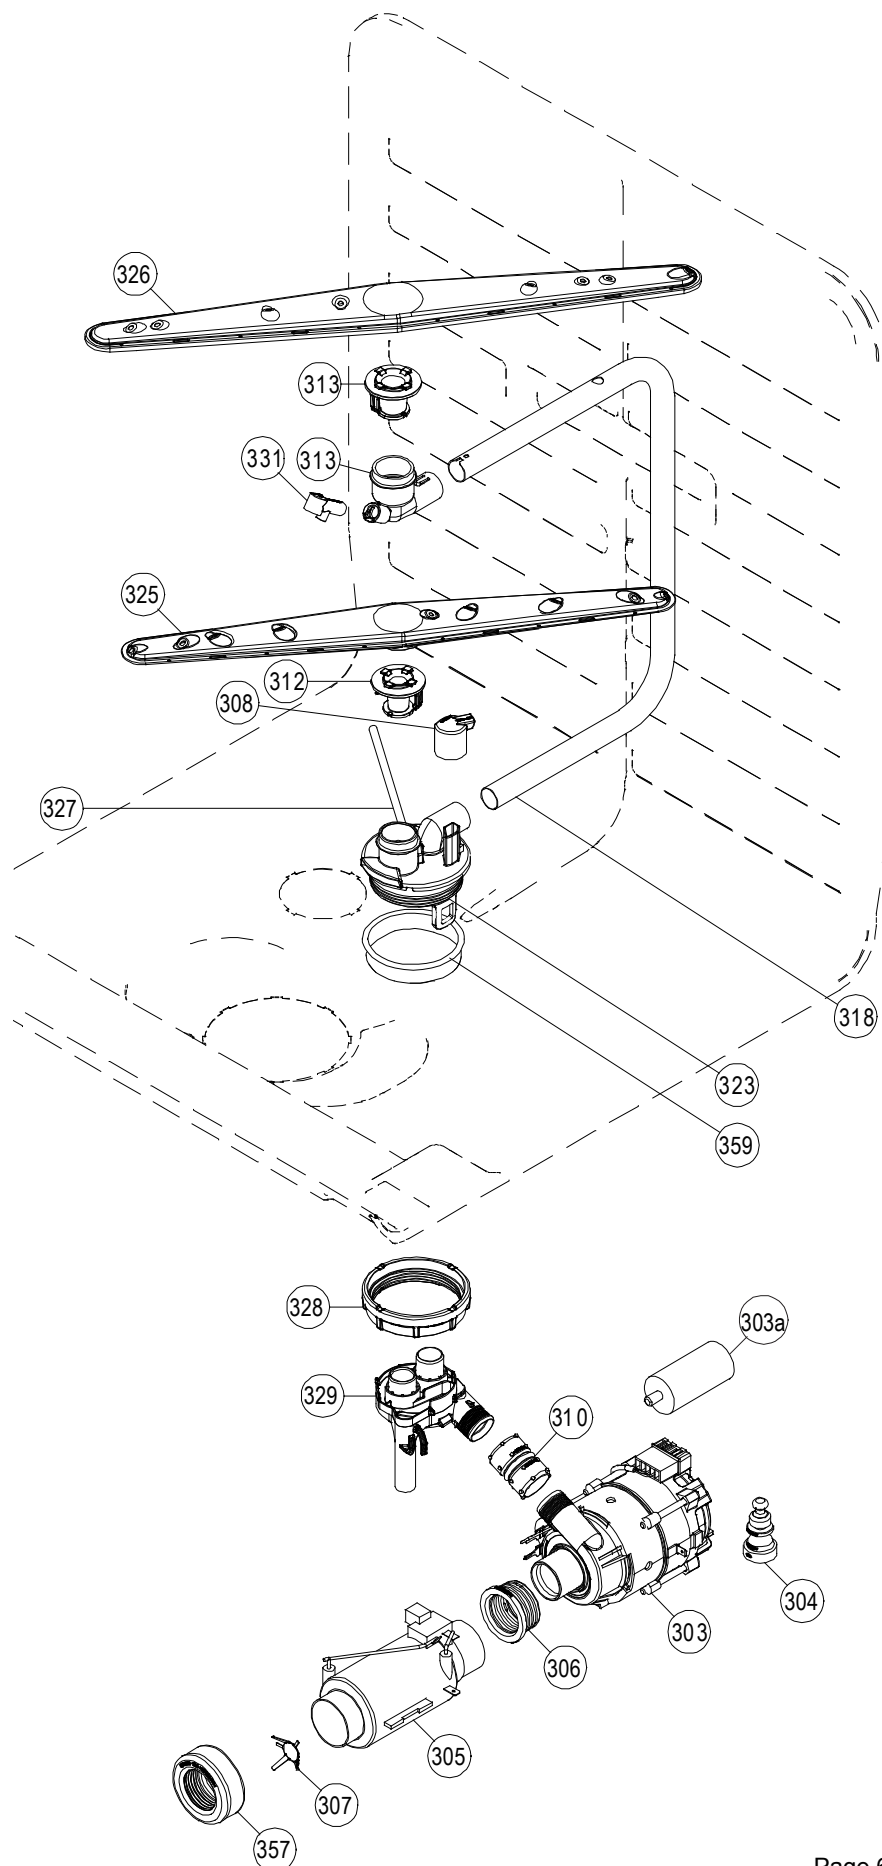

DDW24S Dishwasher - Control Panel

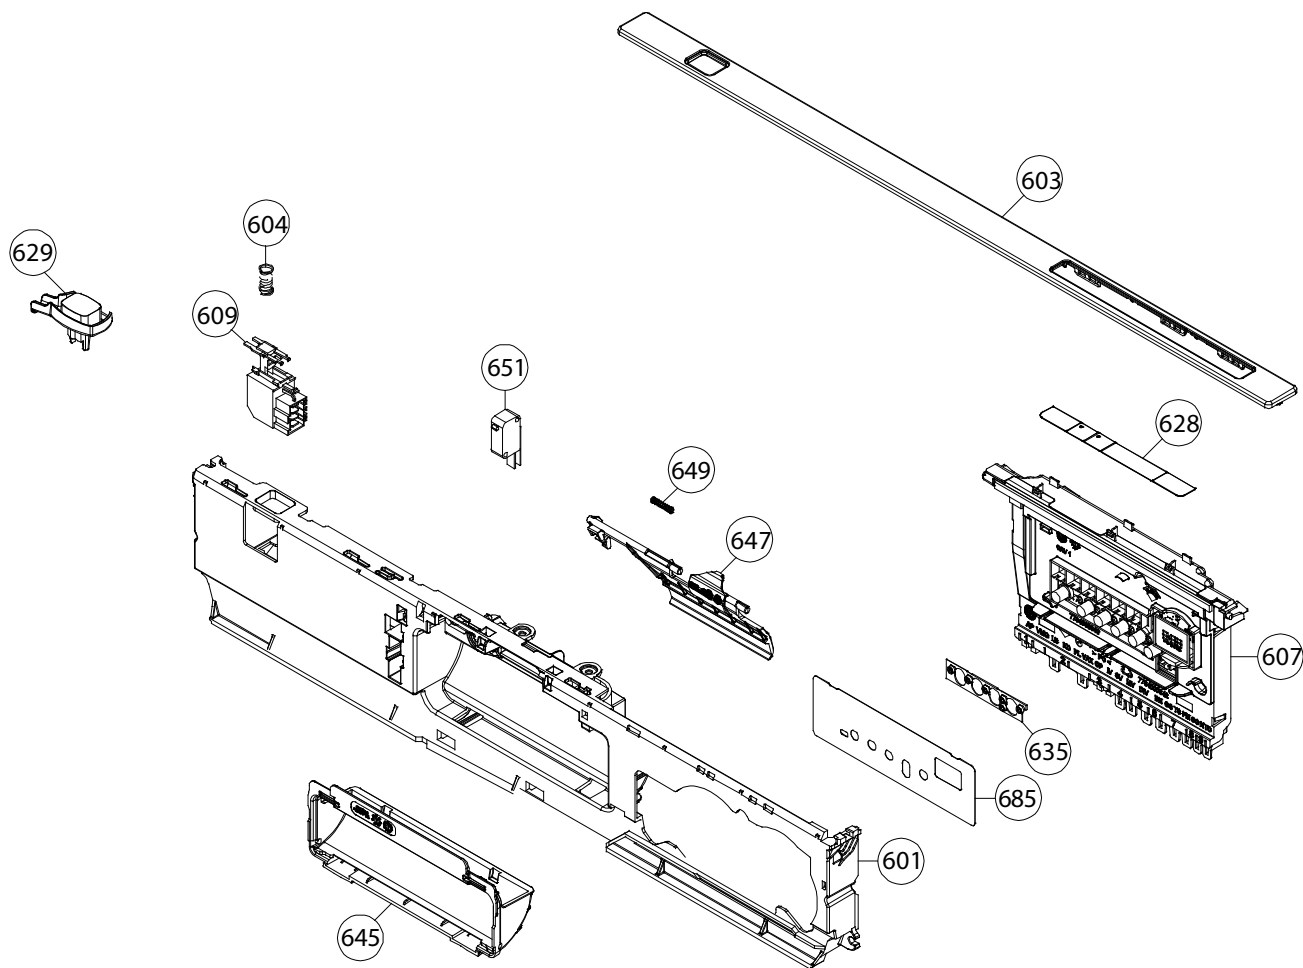

Item	Part #	Description
601	105832	PANEL
602	105833	PROG INFO LABEL DACOR
603	105831	LENS DACOR
604	105154	SPRING MAIN SWITCH
607	105840	CONTROL UNIT, COMPLETE
609	105146	MAIN PUSH SWITCH
610	105281	CABLE SET THERMISTOR
614	105175	CABLE SET CIRC PUMP IN VALVE
616	105174	CABLE SET FLOW AND PRESSURE
618	105176	CABLE SET POWER

Item	Part #	Description
619	105841	CABLE SET DOOR WITH REED
622	105172	CABLE SET DRAIN
628	105842	TOUCH LENS
629	105843	BUTTON MAIN SWITCH
635	105844	LIGHT SCREENING
645	105845	INTEGRATED HANDLE
647	105846	DOOR LOCK HANDLE
649	105847	SPRING LOCK
651	105148	MICROSWITCH DOOR
685	105848	DACOR LENS INSERT