




The Life of the Kitchen.®

PARTS CATALOG

DMW2420

Page #	Sheet Title
2	Oven Parts
4	Control Panel / Door Parts

DMW2420 - Oven Parts

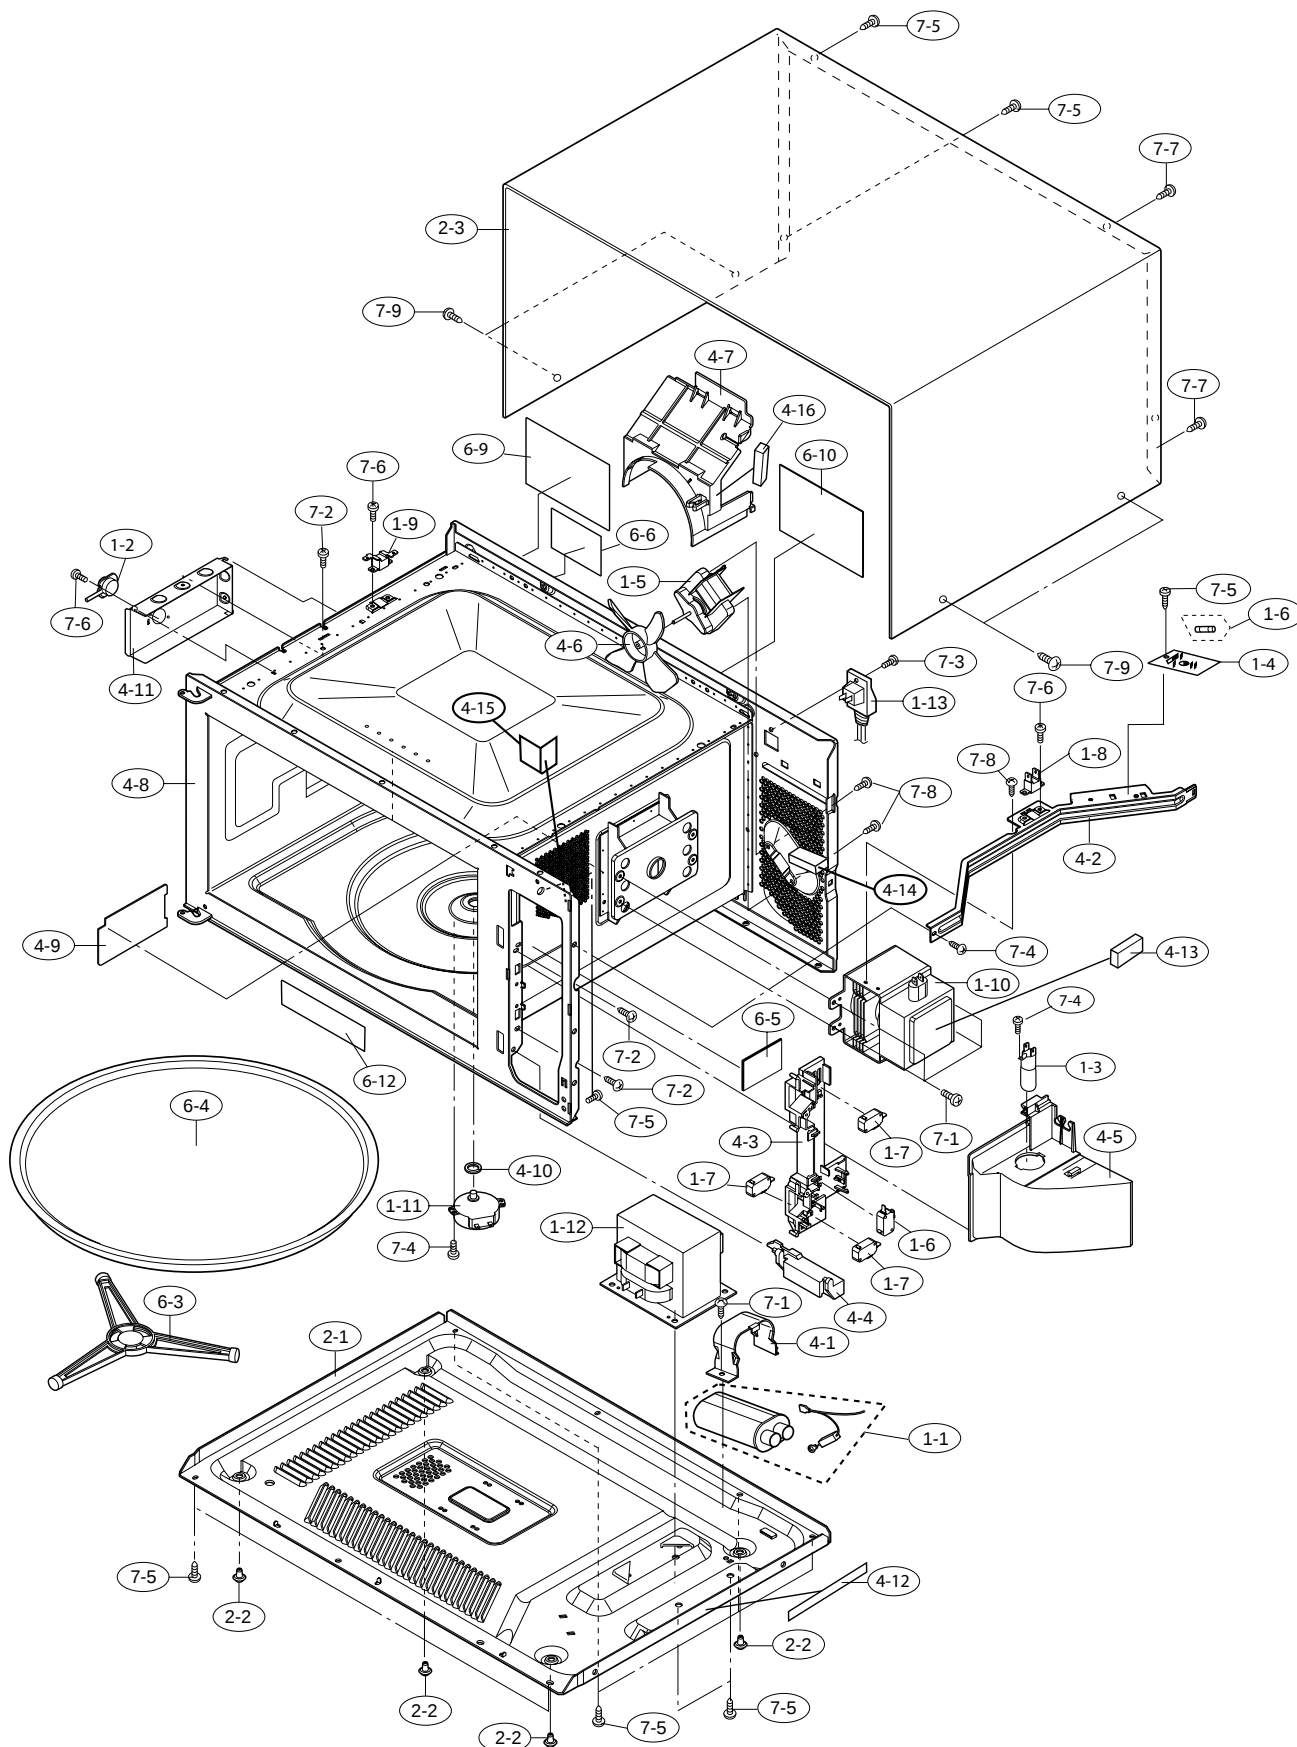


DMW2420 - Oven Parts


Ref #	Part #	Description
1-1	105418	High Voltage Assembly
1-2	105419	AH Sensor
1-3	105420	Oven Lamp
1-4	101937	Noise Filter
1-5	86805	Fan Motor
1-6	66179	Monitor Switch & Fuse Assembly
1-7	66236	Secondary Interlock Switch
1-8	86794	Magnetron Temperature Fuse
1-9	86795	Cavity Temperature Fuse
1-10	105421	Magnetron
1-11	66245	Turntable Motor
1-12	105422	Power Transformer
1-13	105423	Power Supply Cord
2-1	105424	Base Plate
2-2	105425	Foot
2-3	105426	Outer Case Cabinet
3-1	105427	CPU Unit
3-2	105428	Control Panel Frame Assy
3-3	66337B	Open Button Assy
3-4	76170	Open Button Spring
3-5	86780	Screw, 3mm x 10mm
4-1	105429	H.V. Capacitor Band
4-2	105430	Chassis Support
4-3	105431	Latch Hook
4-4	86824	Switch Lever
4-5	105432	Magnetron Duct
4-6	105433	Fan Blade
4-7	105434	Fan Duct
4-8	N/A	Oven Cavity (Not Replaceable)
4-9	105435	Waveguide Cover
4-10	105436	Turntable Motor Packing
4-11	105437	Sensor Duct
4-12	105438	Cushion

DMW2420 - Control Panel / Door Parts


CONTROL PANEL PARTS

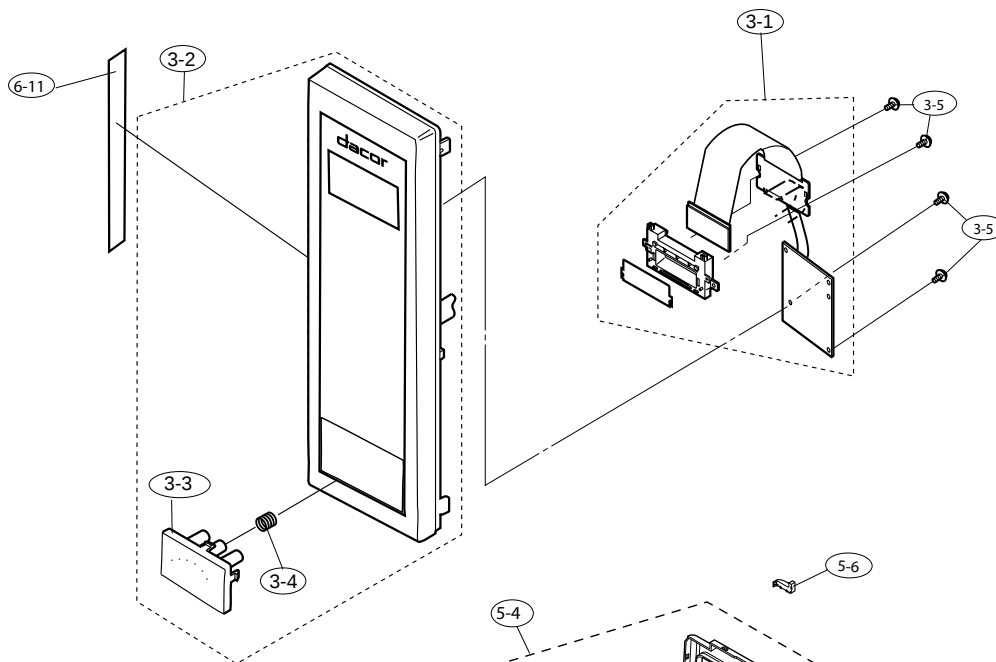

DOOR PARTS

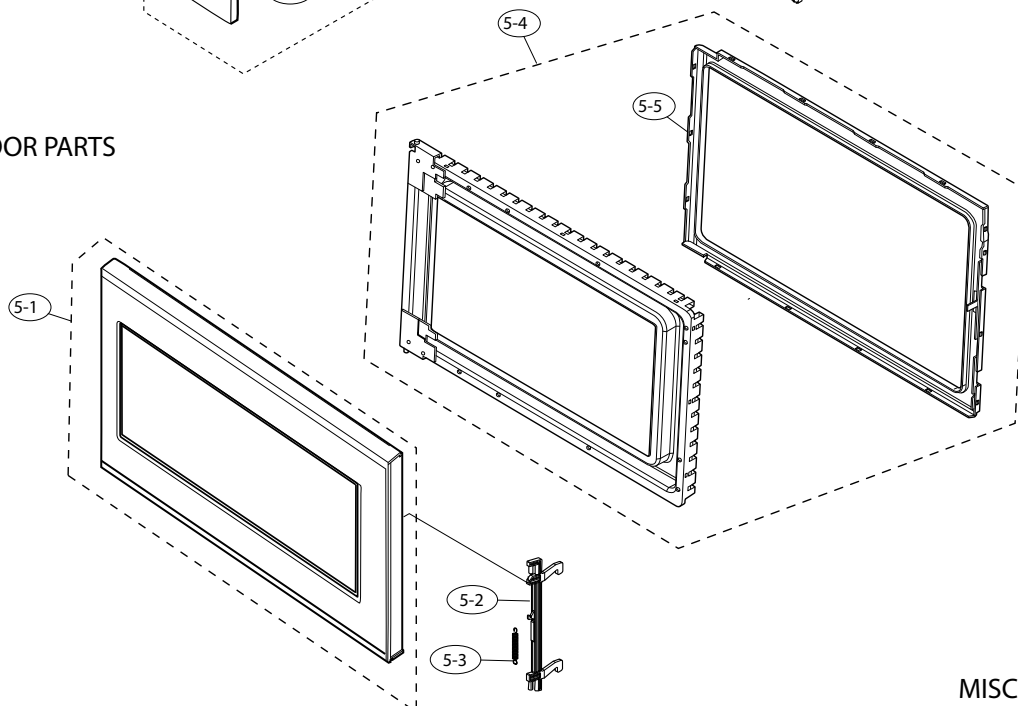

MISCELLANEOUS

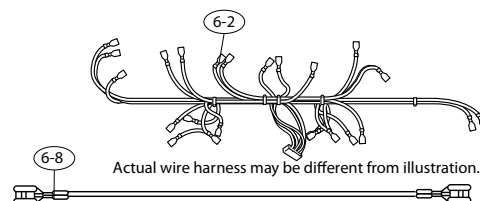

DMW2420 - Control Panel / Door Parts

Ref #	Part #	Description
5-1	105439	Door Frame Assy
5-2	86785	Latch Head
5-3	86786	Latch Spring
5-4	105440	Door Panel
5-5	105441	Choke Cover
5-6	105442	Door Stopper
6-1	N/A	Recipe Card
6-2	105443	Main Wire Harness
6-3	105444	Turntable Support
6-4	66344	Turntable Tray
6-5	N/A	Monitor Caution Label
6-6	86845	DHHS/Screw Caution Label
6-7	N/A	Operation Manual
6-8	86799	High Voltage Wire A
6-9	101273	DHHS/GRD/BIK Caution
6-10	N/A	Health Canada Label
6-11	N/A	User Caution Label
6-12	N/A	Menu Label
7-1	105445	Special Screw
7-2	86820	Special Screw (Latch Hook)
7-3	86902	Screw, 4mm x12mm
7-4	86847	Screw
7-5	86905	Screw, 4mm x 12mm
7-6	101233	Screw, 3mm x 8mm
7-7	66866	Special Screw
7-8	86901	Screw, 4mm x 8mm
7-9	105446	Screw, 4mm x 12mm