 
 
 
 
 
 


(Note: Elmira part numbers may differ from Heartland part numbers)
(Parts illustrated for both cone and sealed burner variations)



PAGE ID	MODEL 7000 (DISCONTINUED)	
PART# / ITEM #	DESCRIPTION	NOTES
1115	Oven Door Handle (Wood)	
1125	Oven Door Thermometer (Non-Functional)	
1156	Oven Door Spring - Right And Left	ORDER #R1156 5/6/7/8/9000 DOOR SPRING KIT
1170	Cabinet Spring Catch	
1307	Fire Door Frame	
1311	Ash Pan Door - Complete	Subs to Part# 1312
1316	Ash Door Hinge - Pins	Subs to Part# H-306
1320	Wire Spring Handle	
1325	Bell Damper Handle Assembly	
1327	Cast Bell Damper Handle	
1330	Bell Dampers	
1546	Heartland Nameplate w/ Clips	Subs to Part# 3599
1550	Right Cabinet Bracket	This Part No Longer Available, May Be Replaced With 1551, 1556 And 15211-# Splashback. Some Drilling For Mounting Holes May Be Required.
1555	Left Cabinet Bracket	This Part No Longer Available, May Be Replaced With 1551, 1556 And 15211-# Splashback. Some Drilling For Mounting Holes May Be Required.
1570	Lower Cabinet Strip	
1575	Upper Cabinet Strip	
1585	Right Cabinet Cast Corner	Subs To 6015-# Assembly - Refer To Colour Legend For Colour Options
1590	Left Cabinet Cast Corner	Subs To 6015-# Assembly - Refer To Colour Legend For Colour Options
1595	Right Cast Cresting Corner	
1600	Left Cast Cresting Corner	
1610	Cabinet Door Handle	Subs to Part# R1609
1620	Left Cabinet Hinge	Subs To 6015-# Assembly - Refer To Colour Legend For Colour Options
1625	Right Cabinet Hinge	Subs To 6015-# Assembly - Refer To Colour Options For Colour Options
2455	Front Of Base	
2456	Rear Of Base	Subs to Part# 2455
2460	Right And Left Of Base	
4011	Base Legs	Subs to Part# 4012
5203	Reservoir Front	
6029	Ash Catch	
6107	Utility Drawer Frame	
6149	Right Hinge Cover	
6150	Left Hinge Cover	
6176	Hinge - Ash Door	
6177	Striker - Ash Door	
6197	2 Speed Blower Control Switch	
6198	Oven And Cabinet Light Switch	
6199	Oven Light Socket With Leads	
6200	Closet Light Socket With Tabs	
6202	Oven Light Bulb - 40w	
6203	Oven Lens Frame	
6204	Oven Lens	
6212	Snap In Push Switch	
6223	Closet Bracket Gasket-Left	
6226	Closet Bracket Gasket-Right	
6227	Oven Door Gasket With Clips	Subs to Part# 9144
6300	Frame Assembly - Oven Door	
6306	Curved Band - Reservoir	N/A
6307	Curved Band - Cooking Surface	N/A
6309	Curved Band - Reservoir	N/A

File: Non current parts list4.xls

Tab: 7000.061009

PAGE ID	MODEL 7000 (DISCONTINUED)	
PART# / ITEM #	DESCRIPTION	NOTES
6312	Front Band	N/A
6352	Oven Door Hinge Gasket	
6372	Strain Relief .472 Dia	
6373	Closet Power Cord (Gas)	
6452	Oven Rack	
6455	Broiler Pan & Cover 2 Pc	Replaces 6453/6454
6522	Exhaust Deflector	
6536	Cabinet Wrap Weldment	
6641	Electric Control Panel	Subs to Part# 6640
6665	Blower Wrapper	
6676	Exhaust Filter	
6677	Exhaust Adapter Boot To 3 1/4 X 10	
6679	Exhaust Blower	
6680	Exhaust Blower	
6681	Exhaust Adapter Boot To 4" Round	Subs to Part# 6677
6682	Mesh Filter	Subs to Part# 6676
6683	Charcoal Filter	Subs to Part# 6676
6689	Blower Receptacle - 3 Wire	
6690	Blower Speed Control With Knob & Nut	
7073	Broiler Drawer Rack	
7090	Deflector - Oven Flue	
7114	Roller - Steel -	
7123	Spring - Broiler Drawer	
7136	11.75" .25 Aluminum Tube	Subs to Part# 7148
7138	Oven Burner Gas Line 3/8	
7141	16.5" .25 Aluminum Tube	Subs to Part# 7148
7142	30.00" .25 Aluminum Tubing	Subs to Part# 7149
7143	10.00" 3/16 Aluminum Tube Control To Timer	
7144	36.00" 3/16 Aluminum Tube Timer To Pilot	
7150	Cast Street Elbow- 1/2" 90°	
7153	Valve Mounting Screw 1/4-20 X 5/16	Sealed Burner
7154	Valve Screw 10-24 X 1" & Gasket	
7156	Gasket-Small Burner Base	Sealed Burner
7157	Gasket-Medium Burner Base	Sealed Burner
7158	Gasket- Large Burner Base	Sealed Burner
7182	Spark Module-2+1	Sealed Burner Style
7183	Top Burner Control Knob	
7184	Oven Burner Control Knob	
4380 7185	Gas Regulator (H-W #4670)	Subs to Part# 3556
7186	Top Burner - Rear (H-W)	
7187	Top Burner - Front (H-W)	
7188	Ignition Switch Top Burner (H-W #S-18)	
7189	Control Valve - Top Burner (H-W #S1854)	
7192	Oven Burner (H-W #2802)	
7193	Ignition Switch - Oven (H-W)	
7194	Thermostat Oven Burner (H-W #5397)	
R7203 7195	Igniter With Wire - Oven (H-W)	
7196	Igniter With Wire - Top L.H. (H-W)	
7197	Igniter With Wire - Top Center (H-W)	
7198	Igniter With Wire - R.H. (H.W. #6514)	
7200	Spark Module (H-W #6514) 3+1	Cone Burner Style
7201	Safety Shut-Off (H-W #5817)	
7203	Oven Pilot	Subs to Part# R7203
7207	Oven Bottom Pan Assembly	
7212	Gas Solenoid Valve	
7216	Manifold (H-W #7060)	
7254	Burner Bowl	

PAGE ID	MODEL 7000 (DISCONTINUED)	
PART# / ITEM #	DESCRIPTION	NOTES
7255	Grate - Cast	
7258	1.25 I.D. Burner Washer	Sealed Burner
7259	1.06 I.D. Burner Washer	Sealed Burner
7272	Reservoir Top Plate Assembly	Cone Burner Style
7275	Cabinet Bolting Plate	Na
7301	Stove Top	Cone Burner Style
7308	48" Gas Top	Sealed Burner Style
7309	48" Burner Valve Cover-Gas	Sealed Burner Style
7351	Compression Sleeve 1/4"	Harper Wyman / Isphording
7352	Compression Nut 1/4"	Harper Wyman / Isphording
7401	Spark Module (4+0)	Sealed Burner Style
7405	24" High Voltage Wire	Sealed Burner
7406	36" High Voltage Wire	Sealed Burner
7407	48" High Voltage Wire	Sealed Burner
7408	Electrode - Sealed Burners	Sealed Burner
7410	Small Burner	Sealed Burner
7411	Medium Burner	Sealed Burner
7412	Large Burner	Sealed Burner
7413	3/4" Burner Mixer Tube	Sealed Burner
7414	1" Burner Mixer Tube (Lg)	Sealed Burner
7415	Small Burner Cap	Sealed Burner
7416	Medium Burner Cap	Sealed Burner
7417	Large Burner Cap	Sealed Burner
7420	Small Orifice (Red)	Sealed Burner
7421	Medium Orifice (Black)	Sealed Burner
7422	Large Orifice (Clear)	Sealed Burner
8200	Light Socket & Housing	Part of 8202 Assembly
8202	Oven Light Assembly W/Light Bulb	Assembly
8204	Oven Lens	Part of 8202 Assembly
9106	Utility Drawer Frame	
9129	Oven Door Gasket With Clips	Subs to Part# 9144
9139	Oven Door Frame Weldment	
9156	Large Oven Door Hinge	
9236	Electronic Timer	Subs to Part# 9235
9237	Electronic Minute Minder	
8449	Oven Rack Support(3 Position)	
8452	Oven Rack	
61981	Switch Hole Plug	
H-222	3/4" Locknut - Mixer Tube	Cone Burner Style
H-223	1" Locknut- Mixer Tube	Cone Burner Style
H-306	Ash Door Hinge Pin	
H-307	Hinge Pin Cap	
H-418	Fitting 3/16 Tube Breakaway Nut (For 7194)	
H-432	Fitting-3/8 Tube Breakaway-Nut (For 7194)	
H-666	Easy Glide Castor 1" Diameter Assembly	Subs to Part# H-695
1120-#	Outer Oven Door Panel	Subs To 11201-# - Refer To Colour Legend For Colour Options
1301-#	Firedoor Assembly	Subs To 6103-# Refer To Colour Legend For Colour Options
1302-#	Fire Door Panel	Subs To 13021-# - Refer To Colour Legend For Colour Options
1520-#	Splashback	No Longer Available, May Be Replaced With 1551, 1556 And 15211 # Splashback. Some Drilling For Mounting Holes May Be Required.
1545-#	Cresting Panel	Subs To 15451-# - Refer To Colour Legend For Colour Options
1605-#	Front Cabinet Door Panel	Subs To 6015-# Assembly- Refer To Colour Legend For Colour Options
1660-#	Reservoir Front Insert Panel	Subs To 16601-# - Refer To Colour Legend For Colour Options
6059-#	Reservoir Front	Refer To Colour Legend For Colour Options
6109-#	Drawer - Front Panel	Subs To 91051-# - Refer To Colour Legend For Colour Options

File: Non current parts list4.xls

Tab: 7000.061009

PAGE ID	MODEL 7000 (DISCONTINUED)	
PART# / ITEM #	DESCRIPTION	NOTES
6195-#	Complete Oven Door	Refer To Colour Legend For Colour Options
7916-#	Broiler Drawer Assembly	Sub To 7917 Refer To Colour Legend For Colour Options
Code	COLOUR LEGEND	
-1	ALMOND	
-2	WHITE	
-3	RED	
-4	GREEN	
-5	BLUE	
-6	BLACK	
-7	JADE - DISCONTINUED	
-9	YELLOW - DISCONTINUED	
-S	STAINLESS STEEL	

rev 061009