


KitchenAid®

**30" INDUCTION SLIDE-IN RANGE
(Even-Heat True Convection)**

MODELS:

KSIB900ESS2 (Stainless)


COOKTOP PARTS

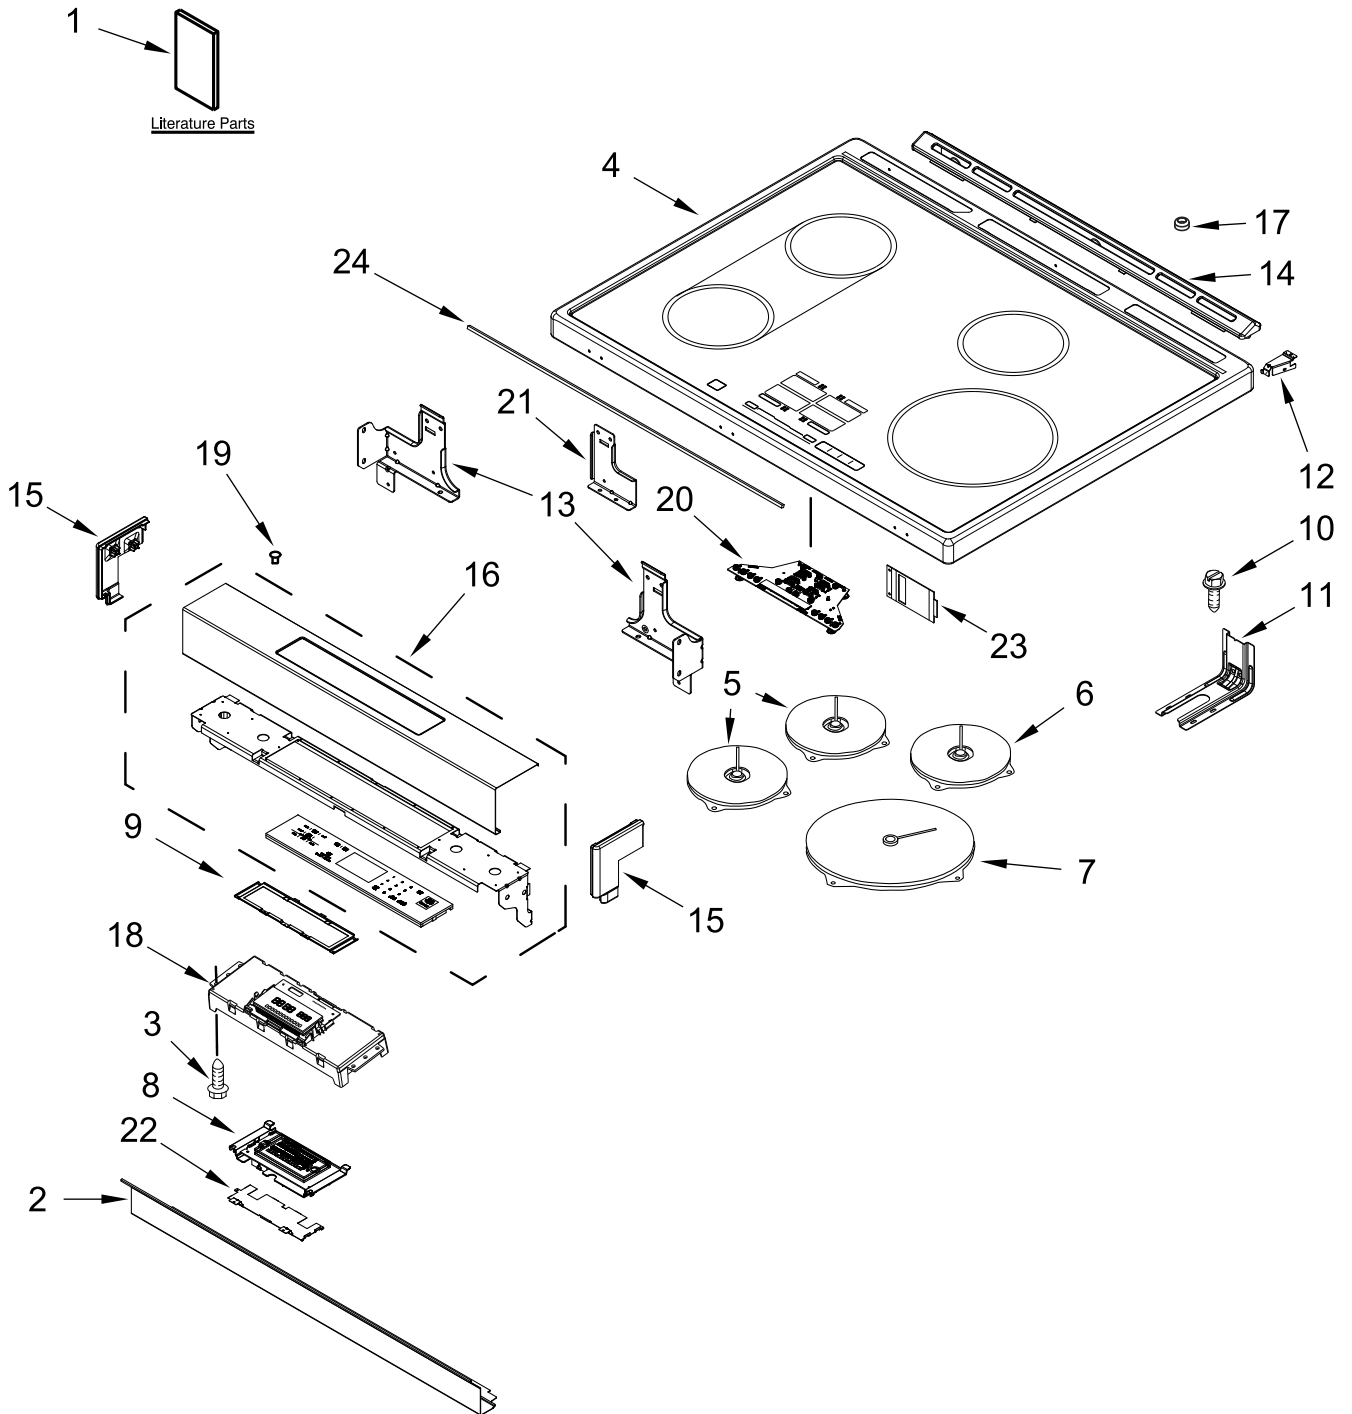

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	W10555923	Bracket, User Interface	21	W10598048	Bracket, Console (Center)
	W10744014	Installation, Instructions	10	7101P485-60	Screw, Anti-Tip Kit	22	W10558372	Bracket, Control
	W10896674	Use and Care Guide	11	W10606241	Bracket, Anti-Tip	23	W10757531	Keypad, Shield
	W10844271	Sheet, Tech	12	W10162253	Brace, Corner (Left)	24	W10612719	Gasket, Console/ Cooktop
	W10400064	Guide, Quick Start (English)		W10162252	Brace, Corner (Right)			FOLLOWING PARTS NOT ILLUSTRATED
	W10400065	Guide, Quick Start (French)	13	W10289169	Support, Cooktop (Right)	W11171883		Harness, Main
	W10903850	Wiring Diagram		W10289170	Support, Cooktop (Left)	W11172426		Harness, Display
2		Console, Lower Panel			Vent, Trim Top	W10575120		Harness, Keypad
	W10743276	Stainless	14		Stainless	W11172530		Harness, Bake Drawer
3	3196178	Screw		W10636529	Endcap	W10653092		Suppressor
4		Cooktop	15		Stainless (Left)	3196520		Clip, Wire
	W10536317	Black		W10555937	Stainless (Right)	7103P027-60		Nut
5	W10636723	Element (Left Front and Left Rear)	16		Console			
				W10901127	Stainless			
6	W10410580	Hotplate (Right Rear)	17	W10664705	Bumper			
7	W10410578	Element (Right Front)	18	W10759304	Control, Electronic (Maxwell)			
8	W10759323	Assembly, Display	19	3196068	Lens, Indicator			
			20	W10808070	Interface, User			


INTERIOR PARTS

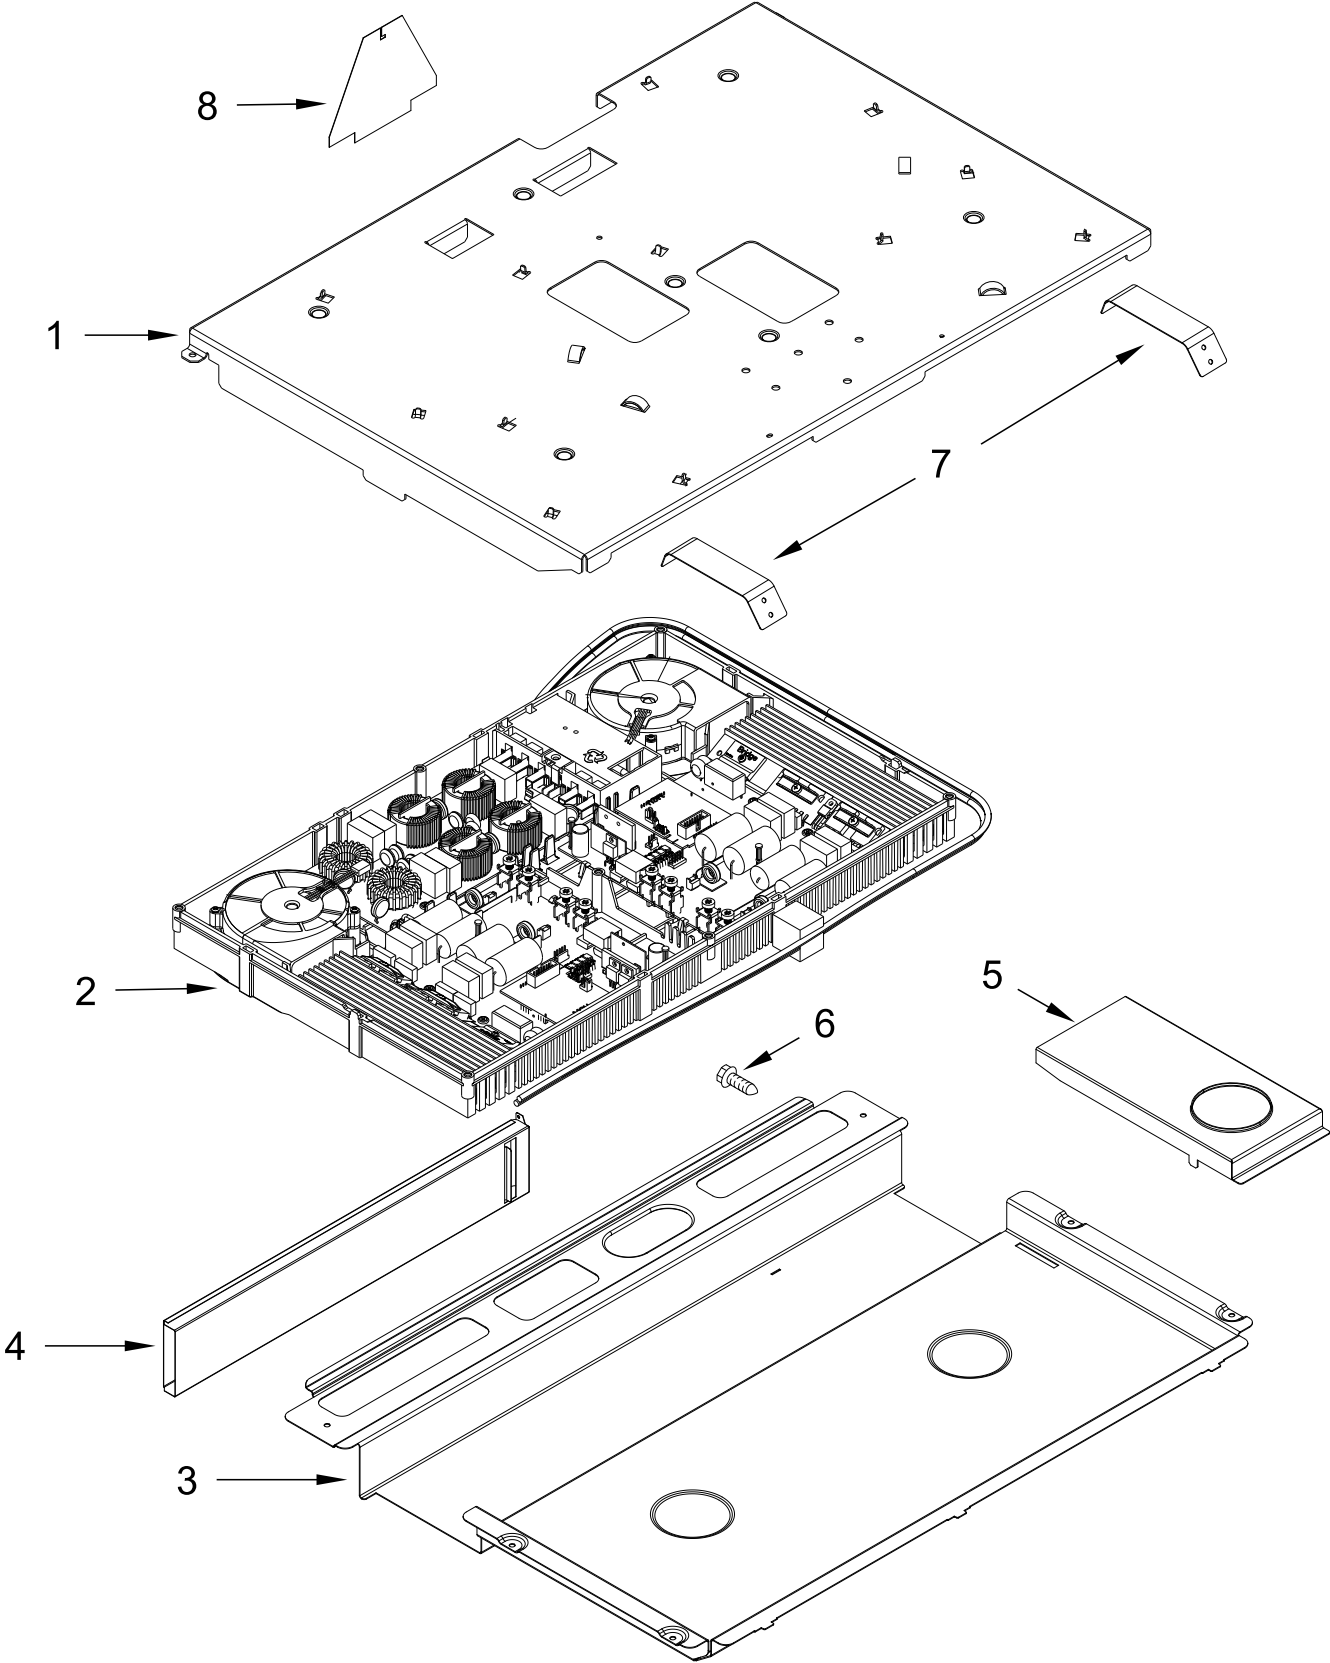

INTERIOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10854048	Pan, Induction (Upper)	5	W10606133	Duct, Recirculation Plate	7	W10854045	Spring (Cantilever)
2	W10873520	Assembly, Induction Module	6	3196169	Screw	8	W10884792	Insulation, Shield
3	W10536319	Pan, Induction (Lower)						
4	W10719194	Assembly, Induction Side Duct						


CHASSIS PARTS

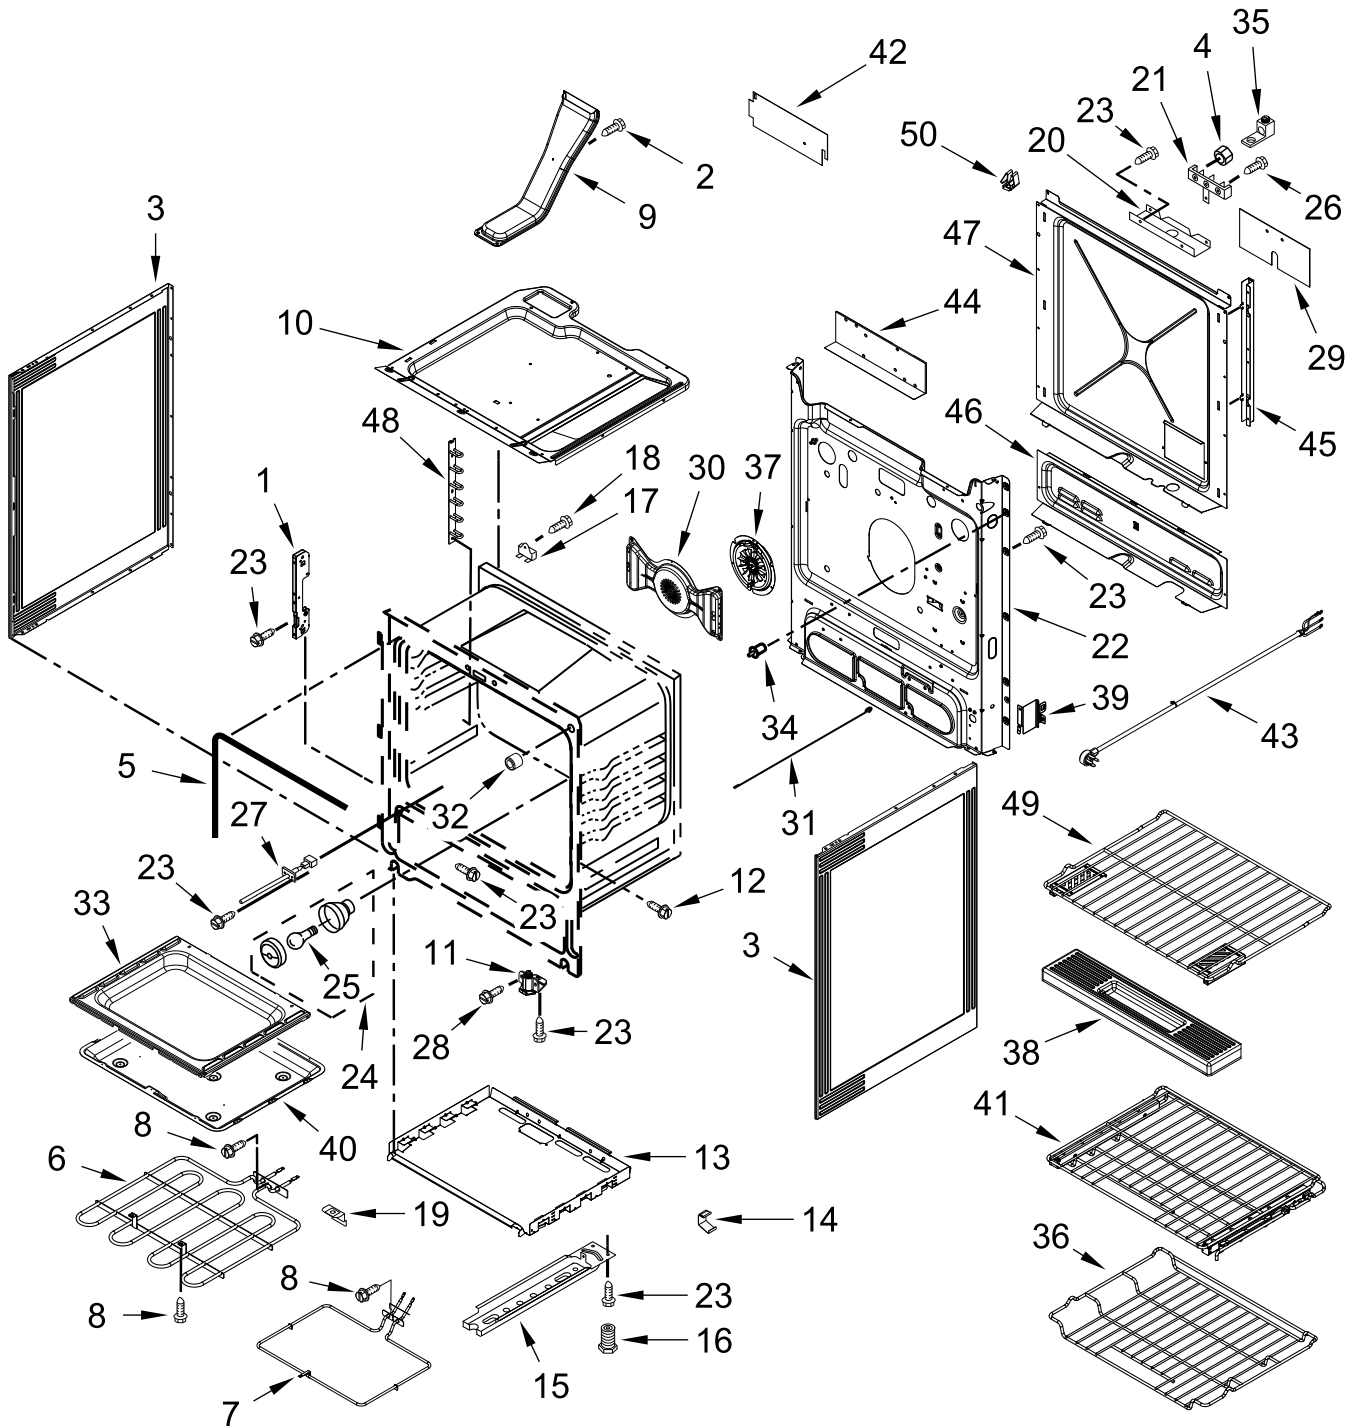

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	21	W10246624	Block, Terminal	40	W10346147	Pan, Bake
2	W10362924	Screw	22		Back, Main (Not Serviced)	41	W10911366	Rack, Sliding
3		Panel, Side	23	3196178	Screw	42	W11117035	Shield, Wire
	W10162245	Black	24	W11175594	Assembly, Light	43	W10624592	Cord, Power
4	3400029	Nut	25	W10571723	Bulb, Halogen 40 Watts	44	W10162260	Shield, Heat
5	W10162385	Gasket, Door	26	3400016	Screw	45	W10162241	Channel, Rear
6	W10544952	Element, Broil	27	W10586204	Sensor	46	W10162248	Cover, Wire
7	W10774342	Element, Bake	28	3196169	Screw	47	W10289172	Cover, Back
8	W10362924	Screw	29	W10655441	Shield, Power Cord	48	W10603482	Rack, Ladder
9	W11122085	Assembly, Flue	30	W10346153	Baffle, Full Convection	49	W10554007	Rack, Steam
10	W10289168	Box, Burner SI	31	W10273192	Rod, Door Switch	50	W10645947	Grommet
11	W10341186	Assembly, Front Foot	32	9758701	Spacer, Door			FOLLOWING PARTS NOT ILLUSTRATED
12	W10067840	Screw	33	W10774446	Bottom, Oven		W10655489	Insulation, Wrapper
13	W10541959	Shield, Bake	34	W10627802	Switch, Door		W10655490	Insulation, Main Back
14	W10137382	Clip, Panel	35	W10281322	Kit, Bare Wire Adapter Block		W10655442	Insulation, Heat Shield
15	W10390008	Assembly, Base Rail (Left)	36	W10554006	Rack, Maximum Capacity		W10575374	Insulation, Bottom
	W10390007	Assembly, Base Rail (Right)	37	W10874472	Assembly, Convection		4820F015-59	Insulation, Strap
16	W10058460	Foot, Leveling	38	W10686408	Kit, Reservoir (Steam Rack)		7111P017-60	Clamp, Wire
17	3196548	Fuse, Thermal	39	W10273002	Bracket, Oven Support			
18	3196172	Screw						
19	W10035900	Support, Oven Bottom						
20	3186034	Bracket, Service						

DOOR PARTS

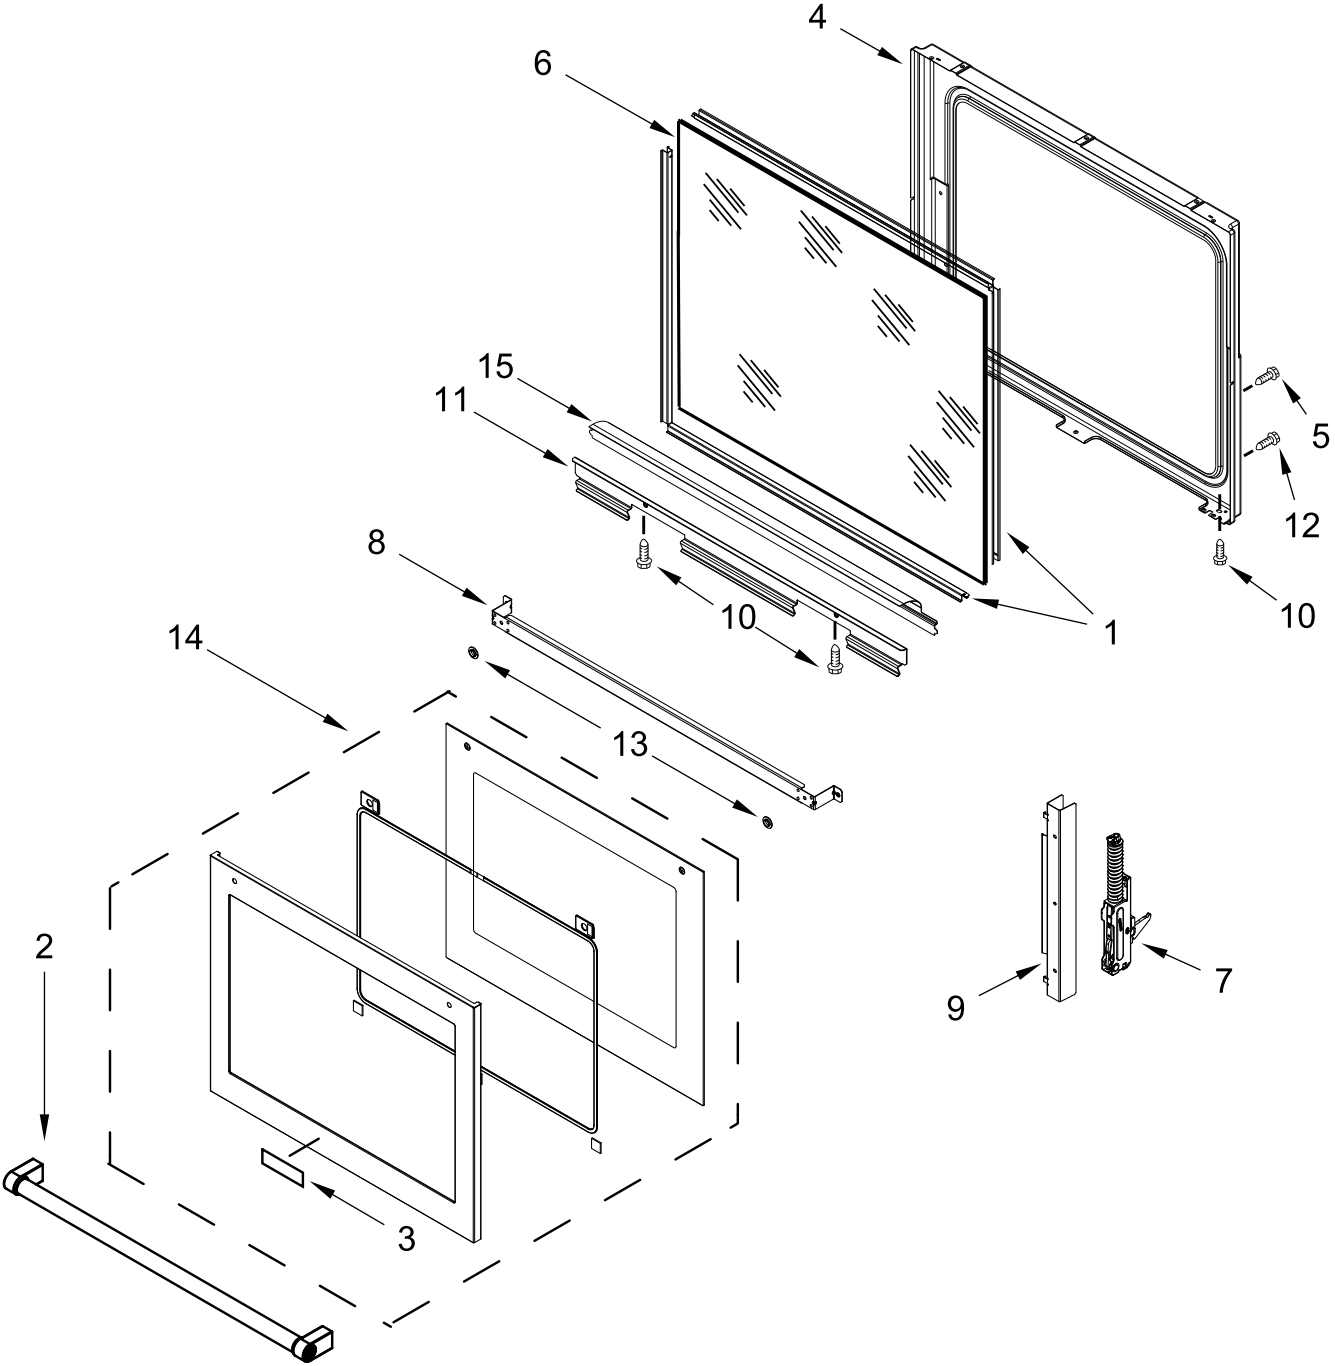


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10813142	Spacer, Glass
2		Assembly, Door Handle
	W10551000	Stainless
3	W10518672	Badge
4	W10826568	Liner, Door
5	W10031790	Screw
6	W11223202	Glass, Inner
7	W10885519	Hinge, Door (Active)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10541911	Bracket, Glass Upper Handle
9	W10813139	Rail, Vertical Support
10	9780274	Screw
11	W10813140	Rail, Horizontal Support
12	W10031780	Screw
13	W10319024	Washer, Door

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
14		Assembly, Outer Door
	W10634271	Stainless
15		Scoop, Door
	W10551024	Stainless

DRAWER PARTS

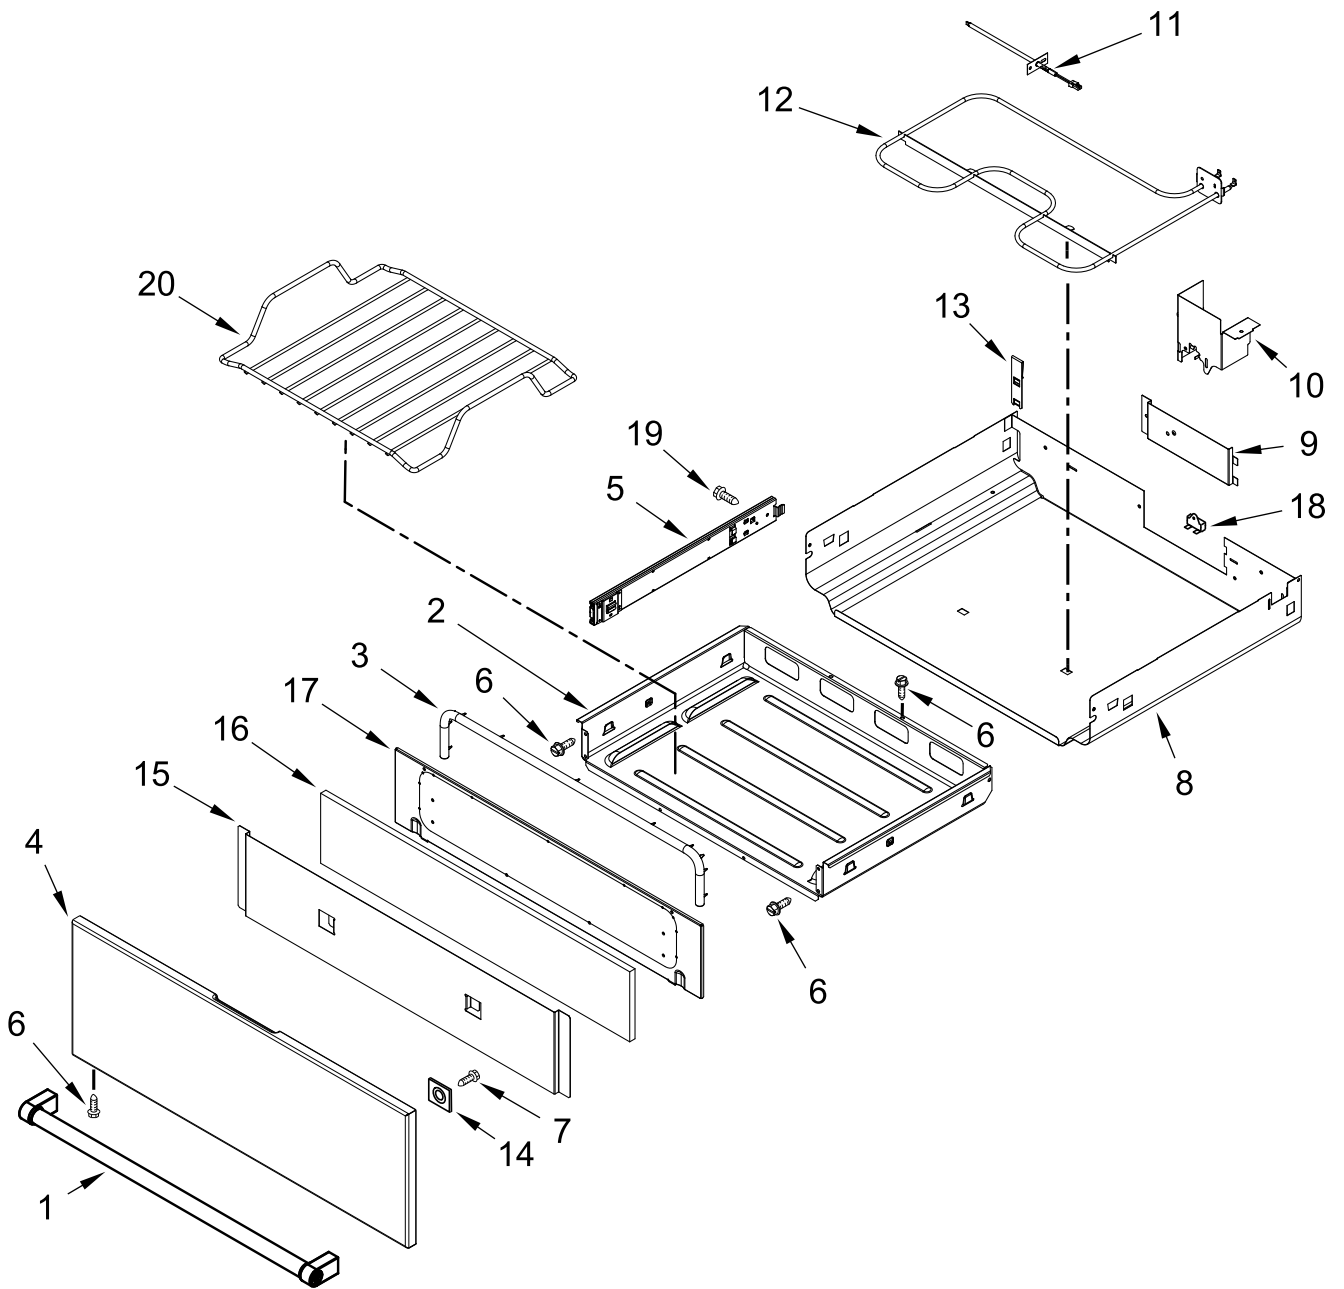

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	6	3196560	Screw	14	3823F017-45	Spacer, Handle
	W10551000	Stainless	7	3400882	Screw	15	W10551018	Insulation, Drawer Front
2	W10757442	Drawer, Bake	8	W10634260	Enclosure, Warming	16	W10550982	Insulation, Drawer
3	W10550987	Seal, Drawer	9	W10727084	Cover, Gas Valve	17	W10541947	Panel, Front Inner
4		Panel, Drawer Front	10	W10634259	Cover, Wire	18	W10729897	Fuse, Thermal
	W10541954	Stainless	11	W10720530	Sensor	19	3196560	Screw
5	W10921904	Slide, Drawer (Left)	12	W10541944	Element, Bake	20	W10602493	Rack, Bake Drawer
	W10921905	Slide, Drawer (Right)	13	W10551019	Cover, Side			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS / POLISHES
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless