 
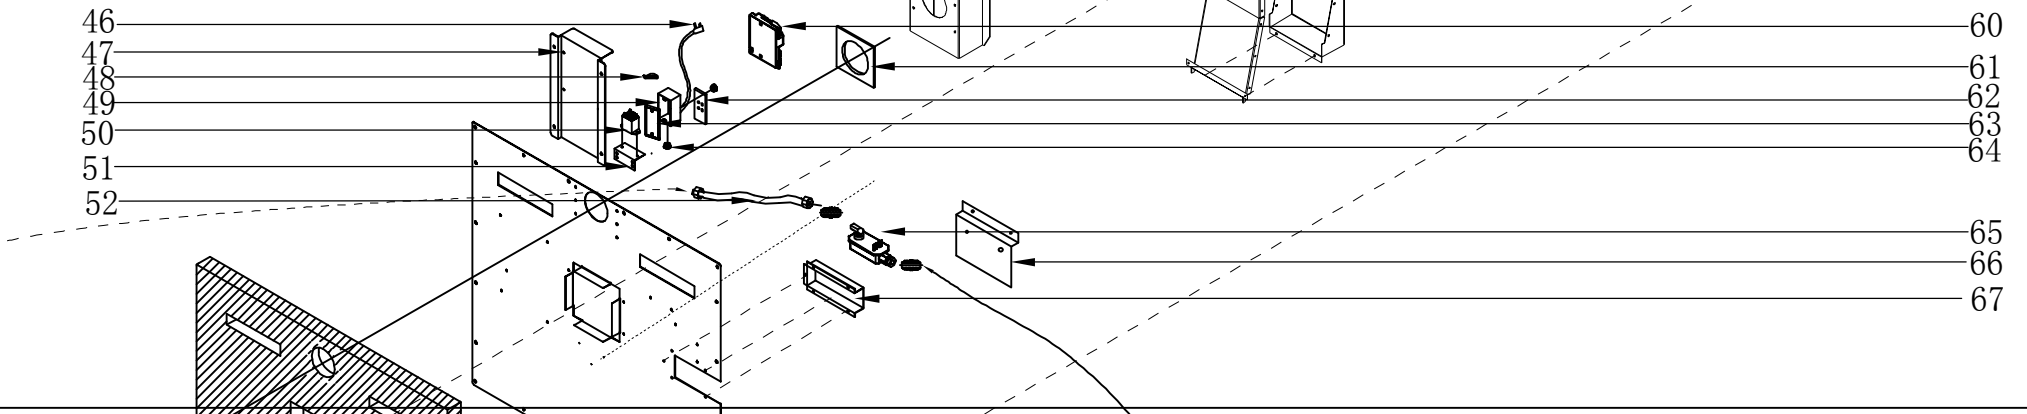 
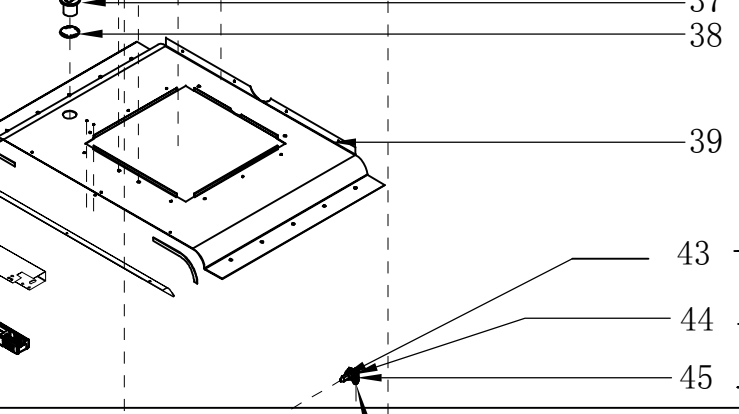 
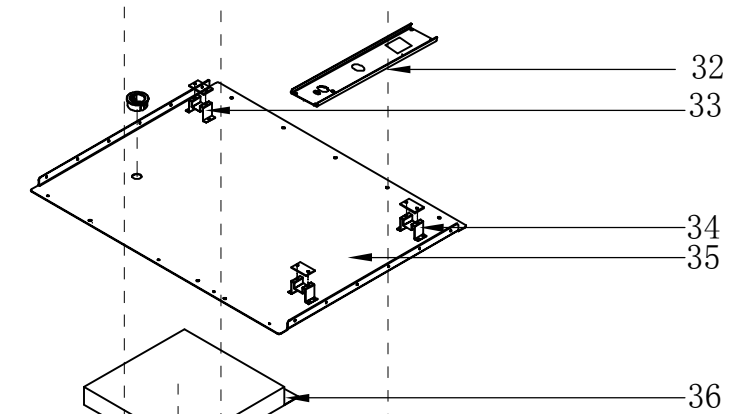 
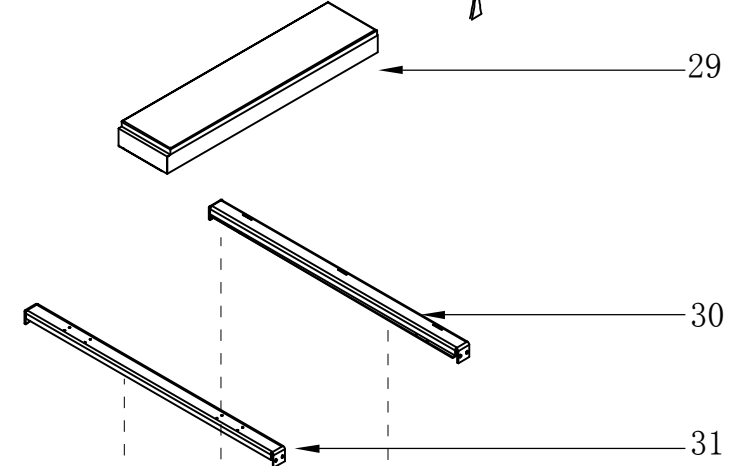 
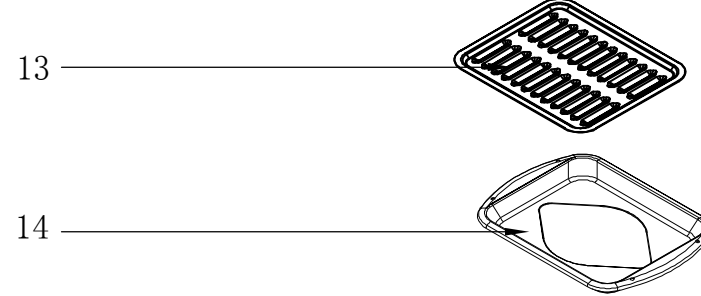 
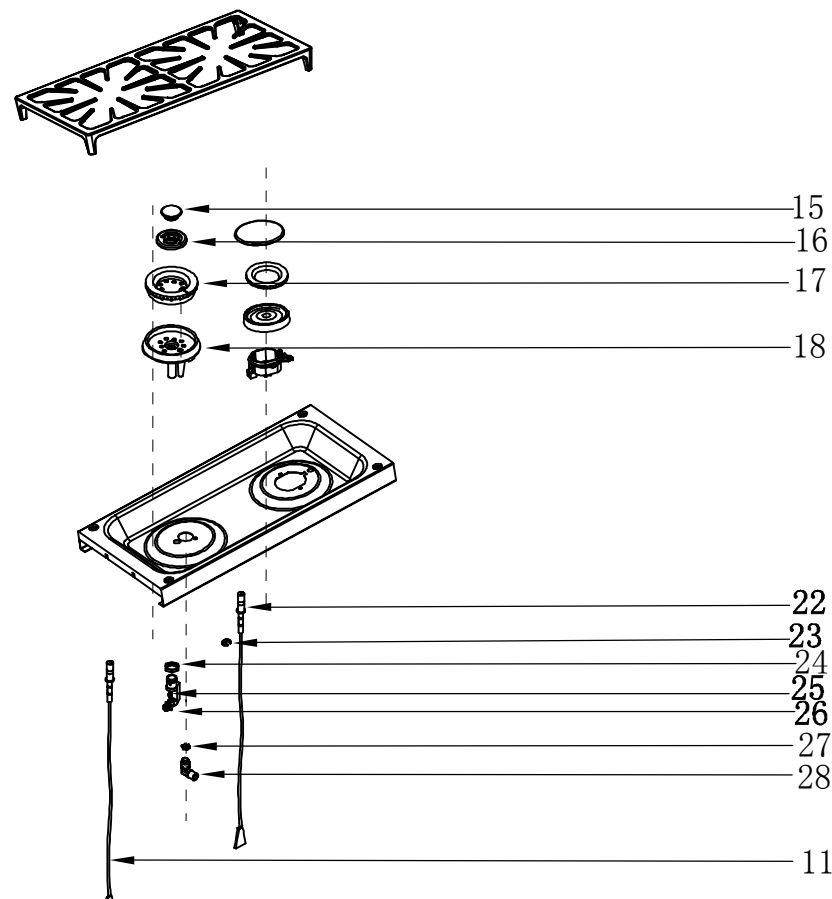 


1

BX3031










2

BX3031

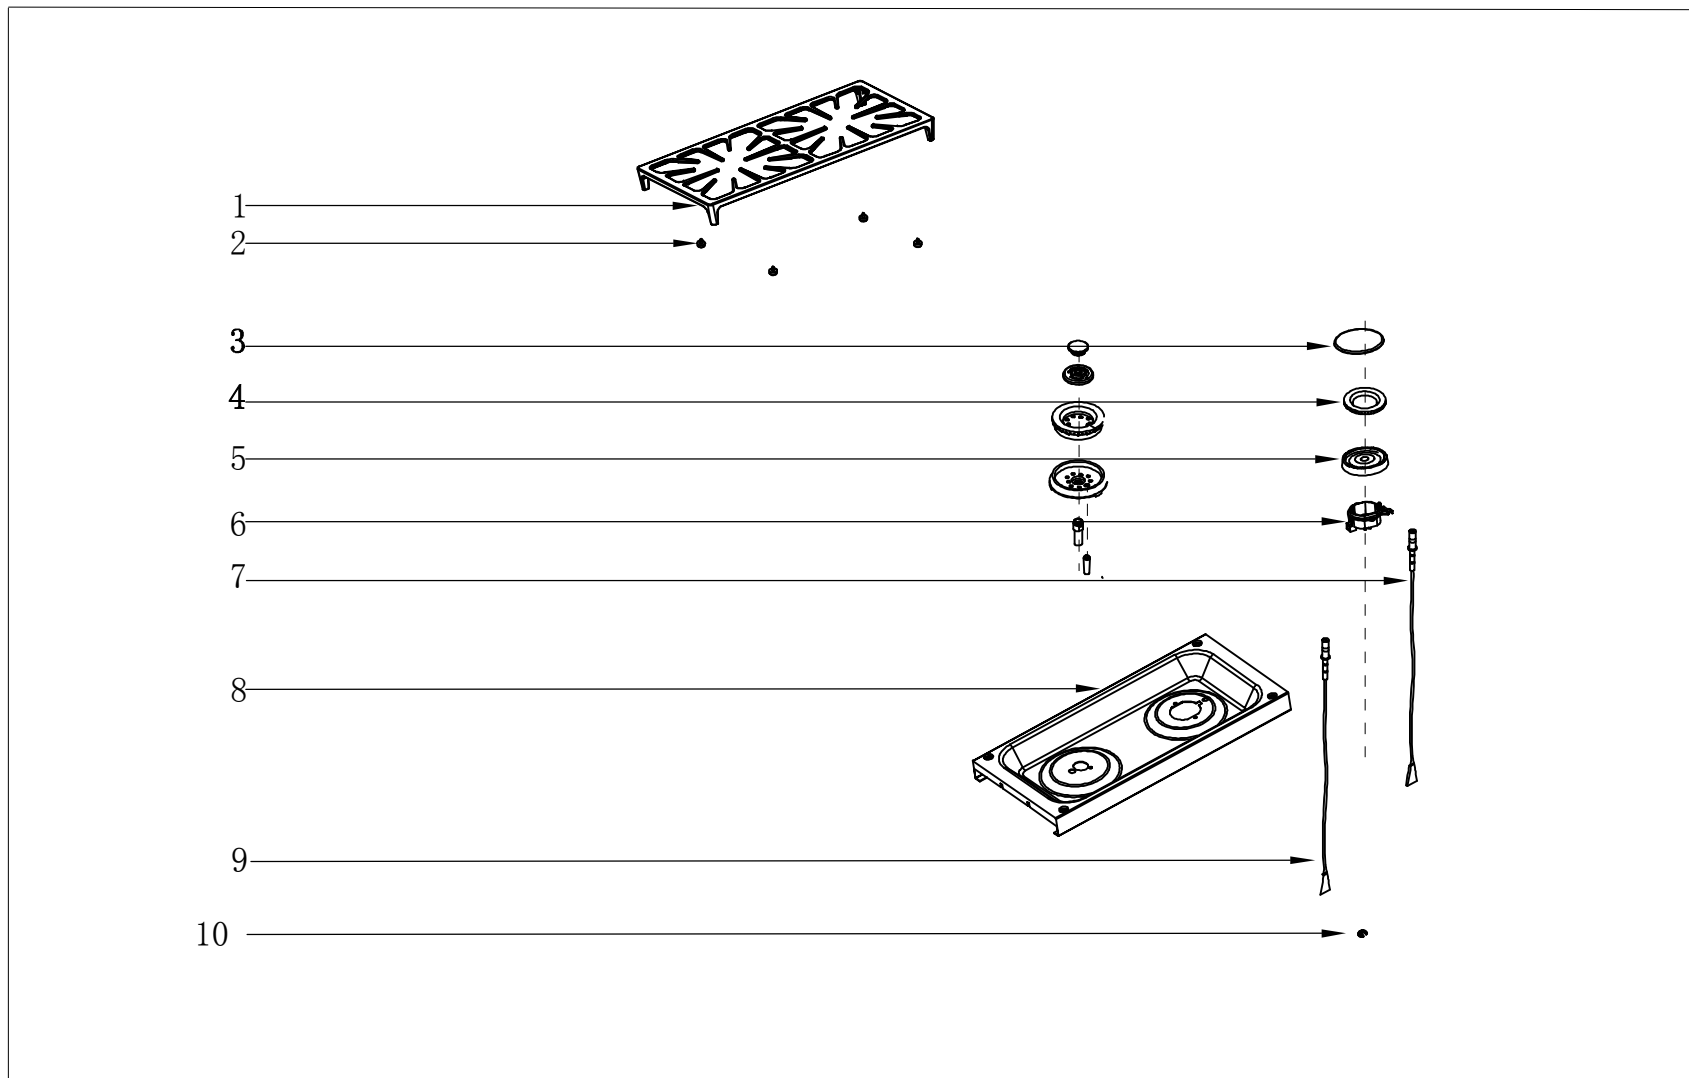



BX3031

         3

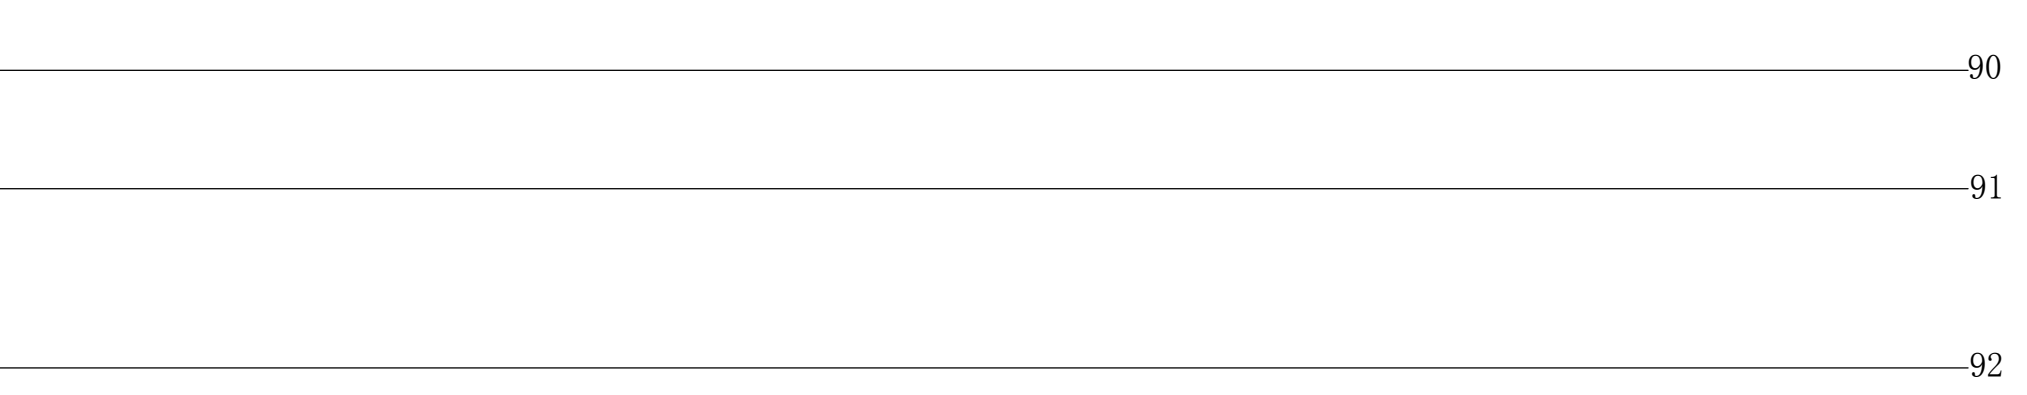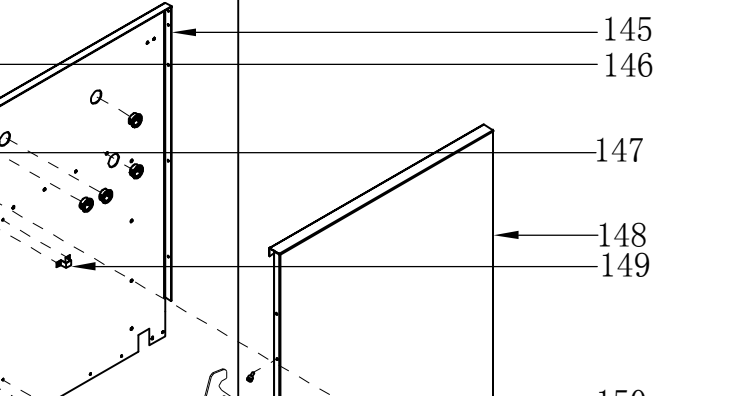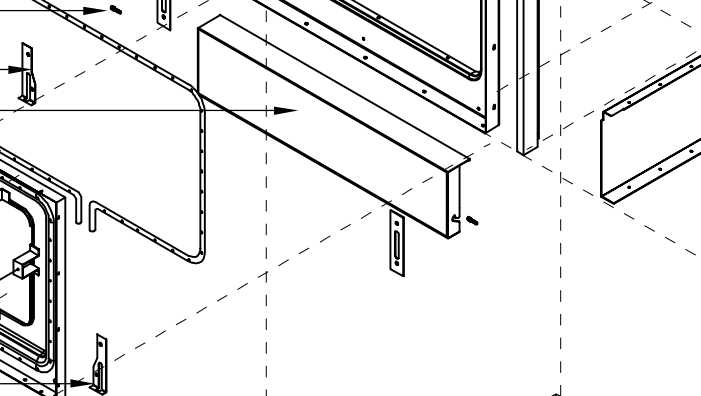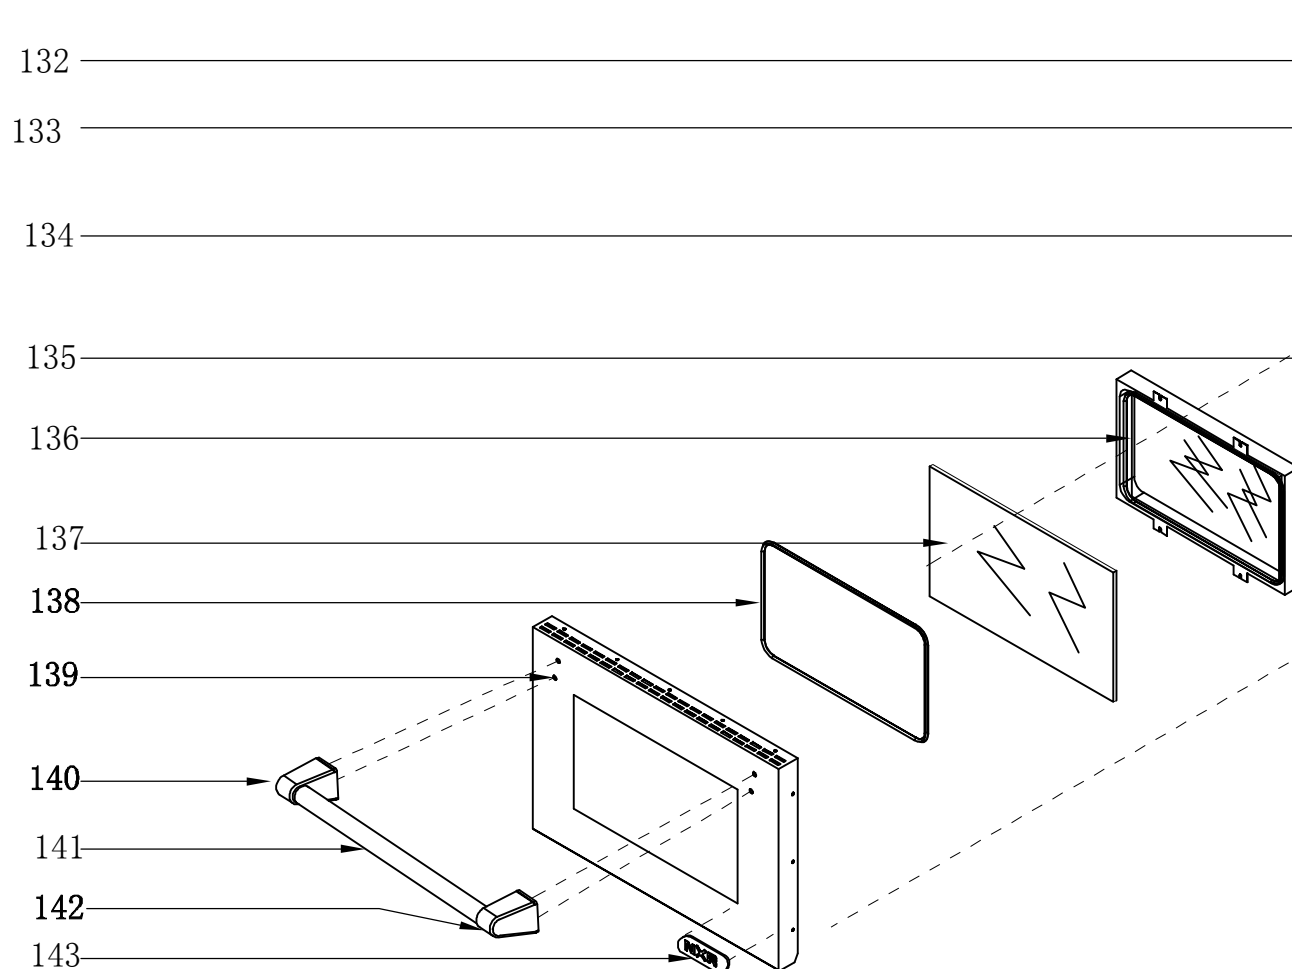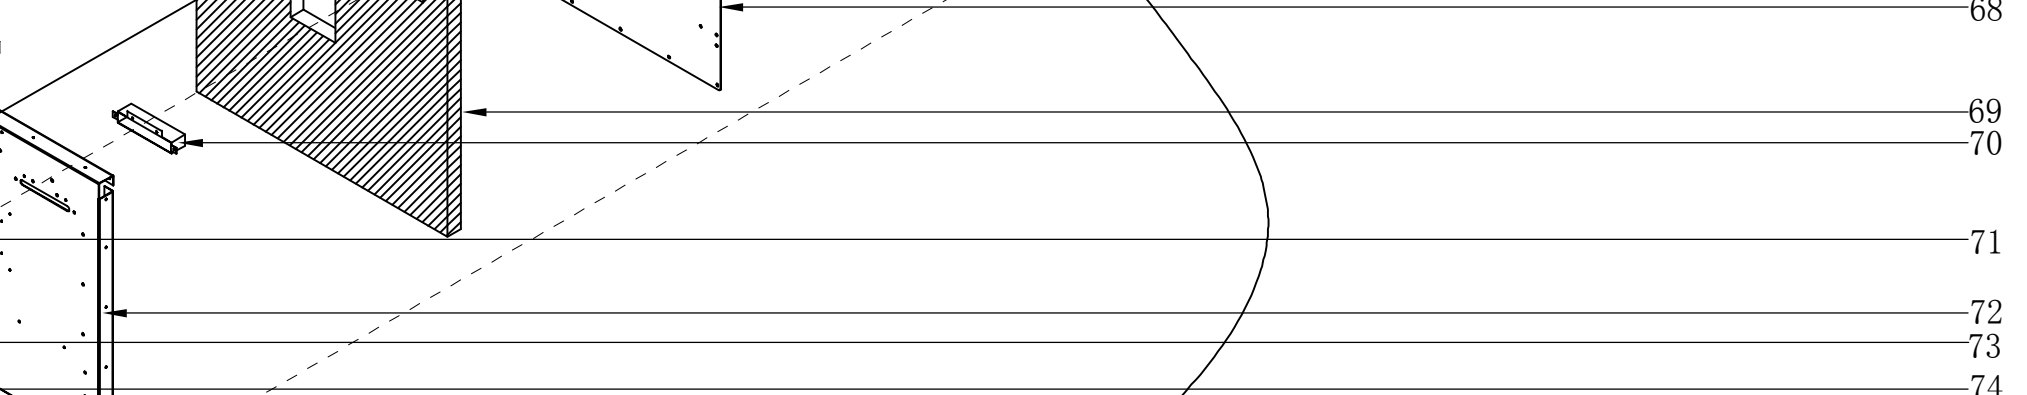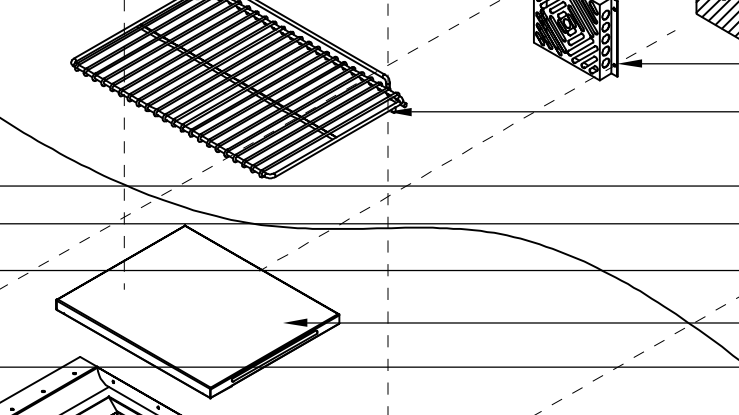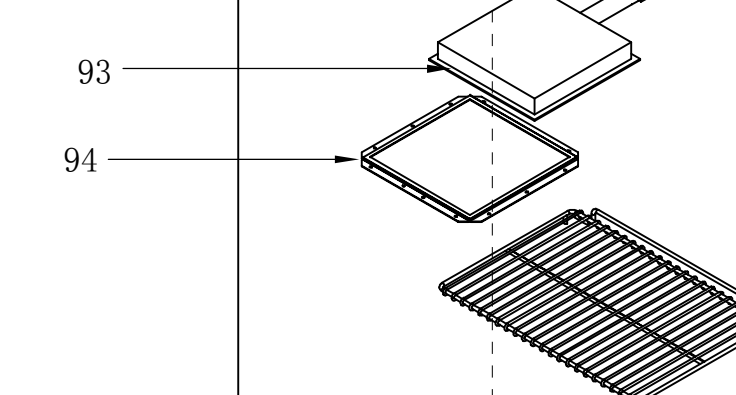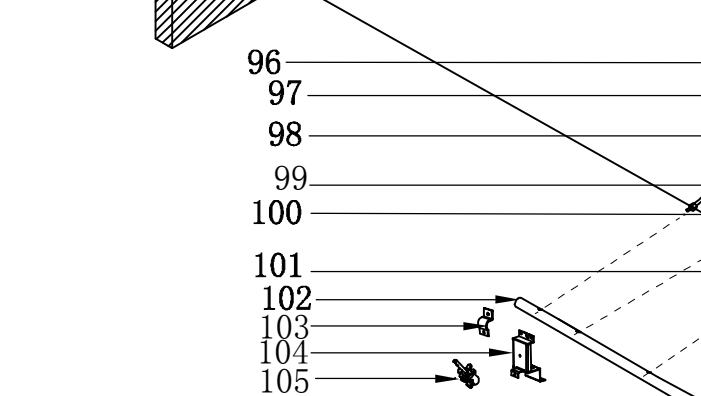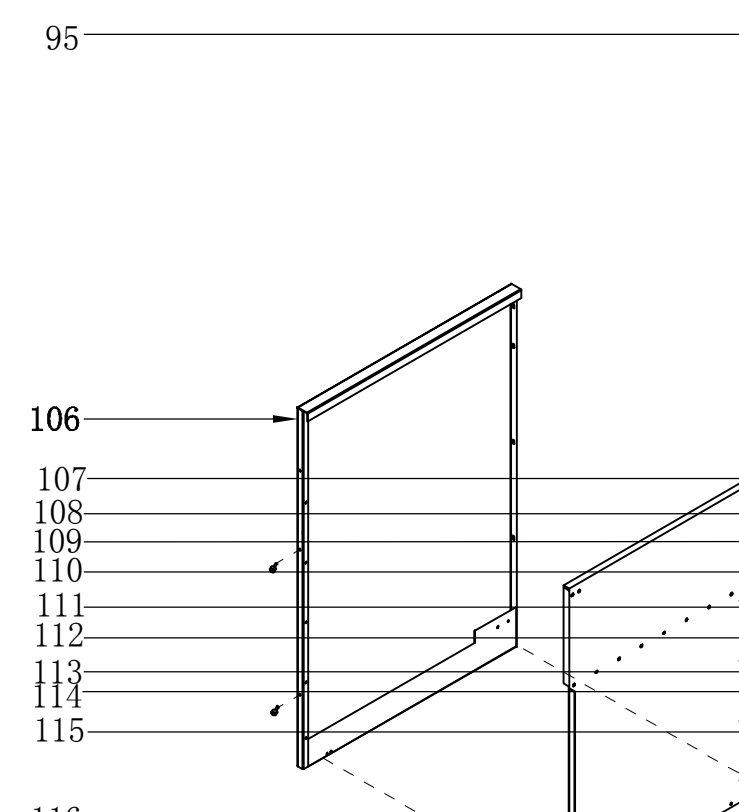

BX3031

  4

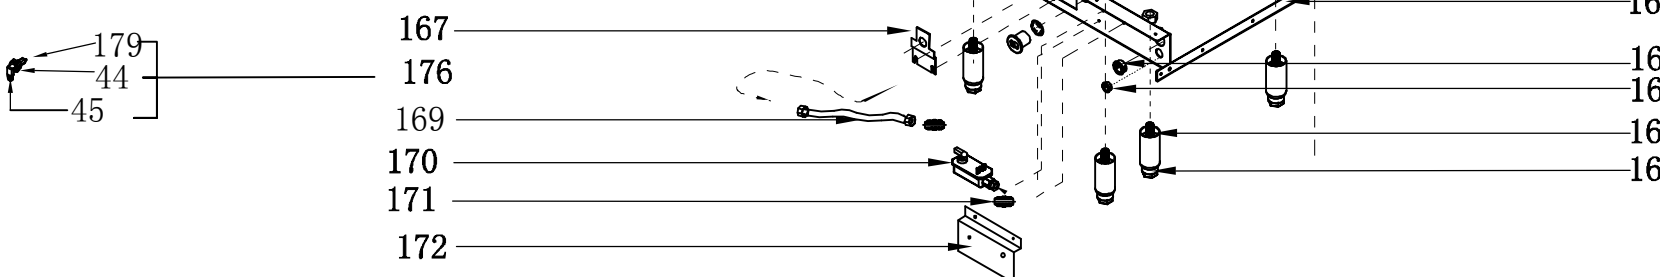


BX3602

BX3602

BX3602


BX3602

 BX3602

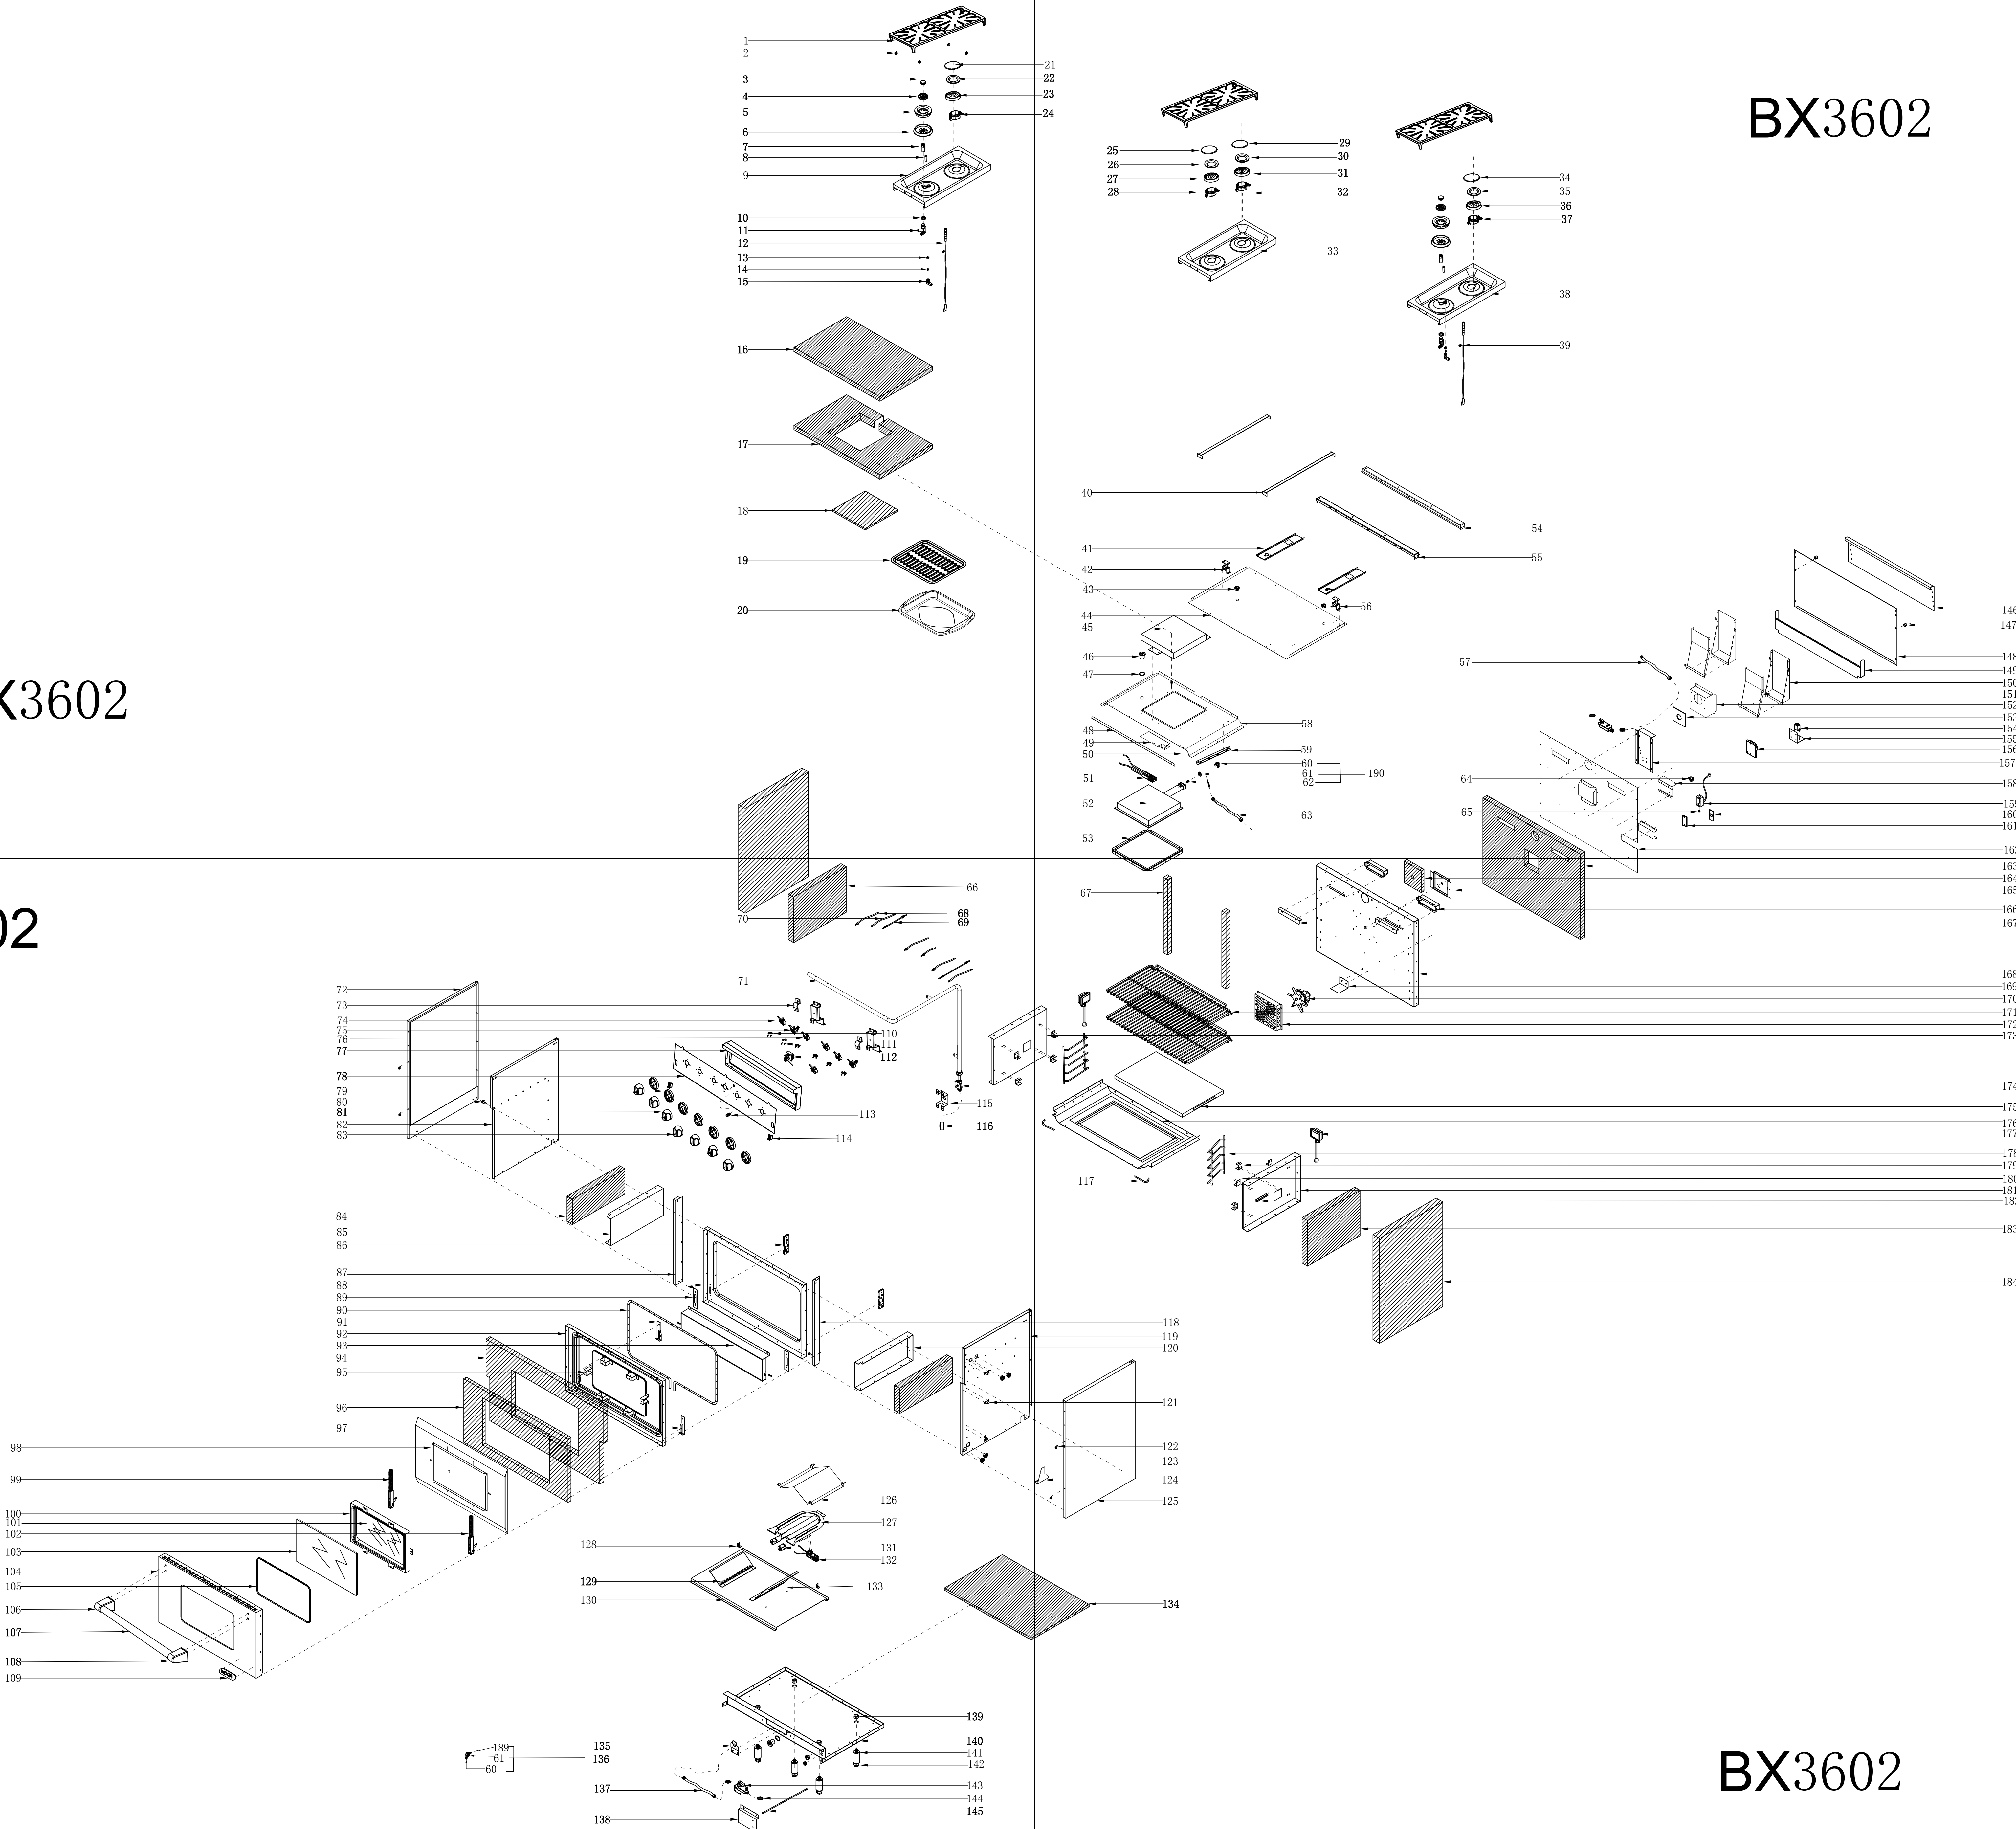


DRGB3001

 2014-04-29

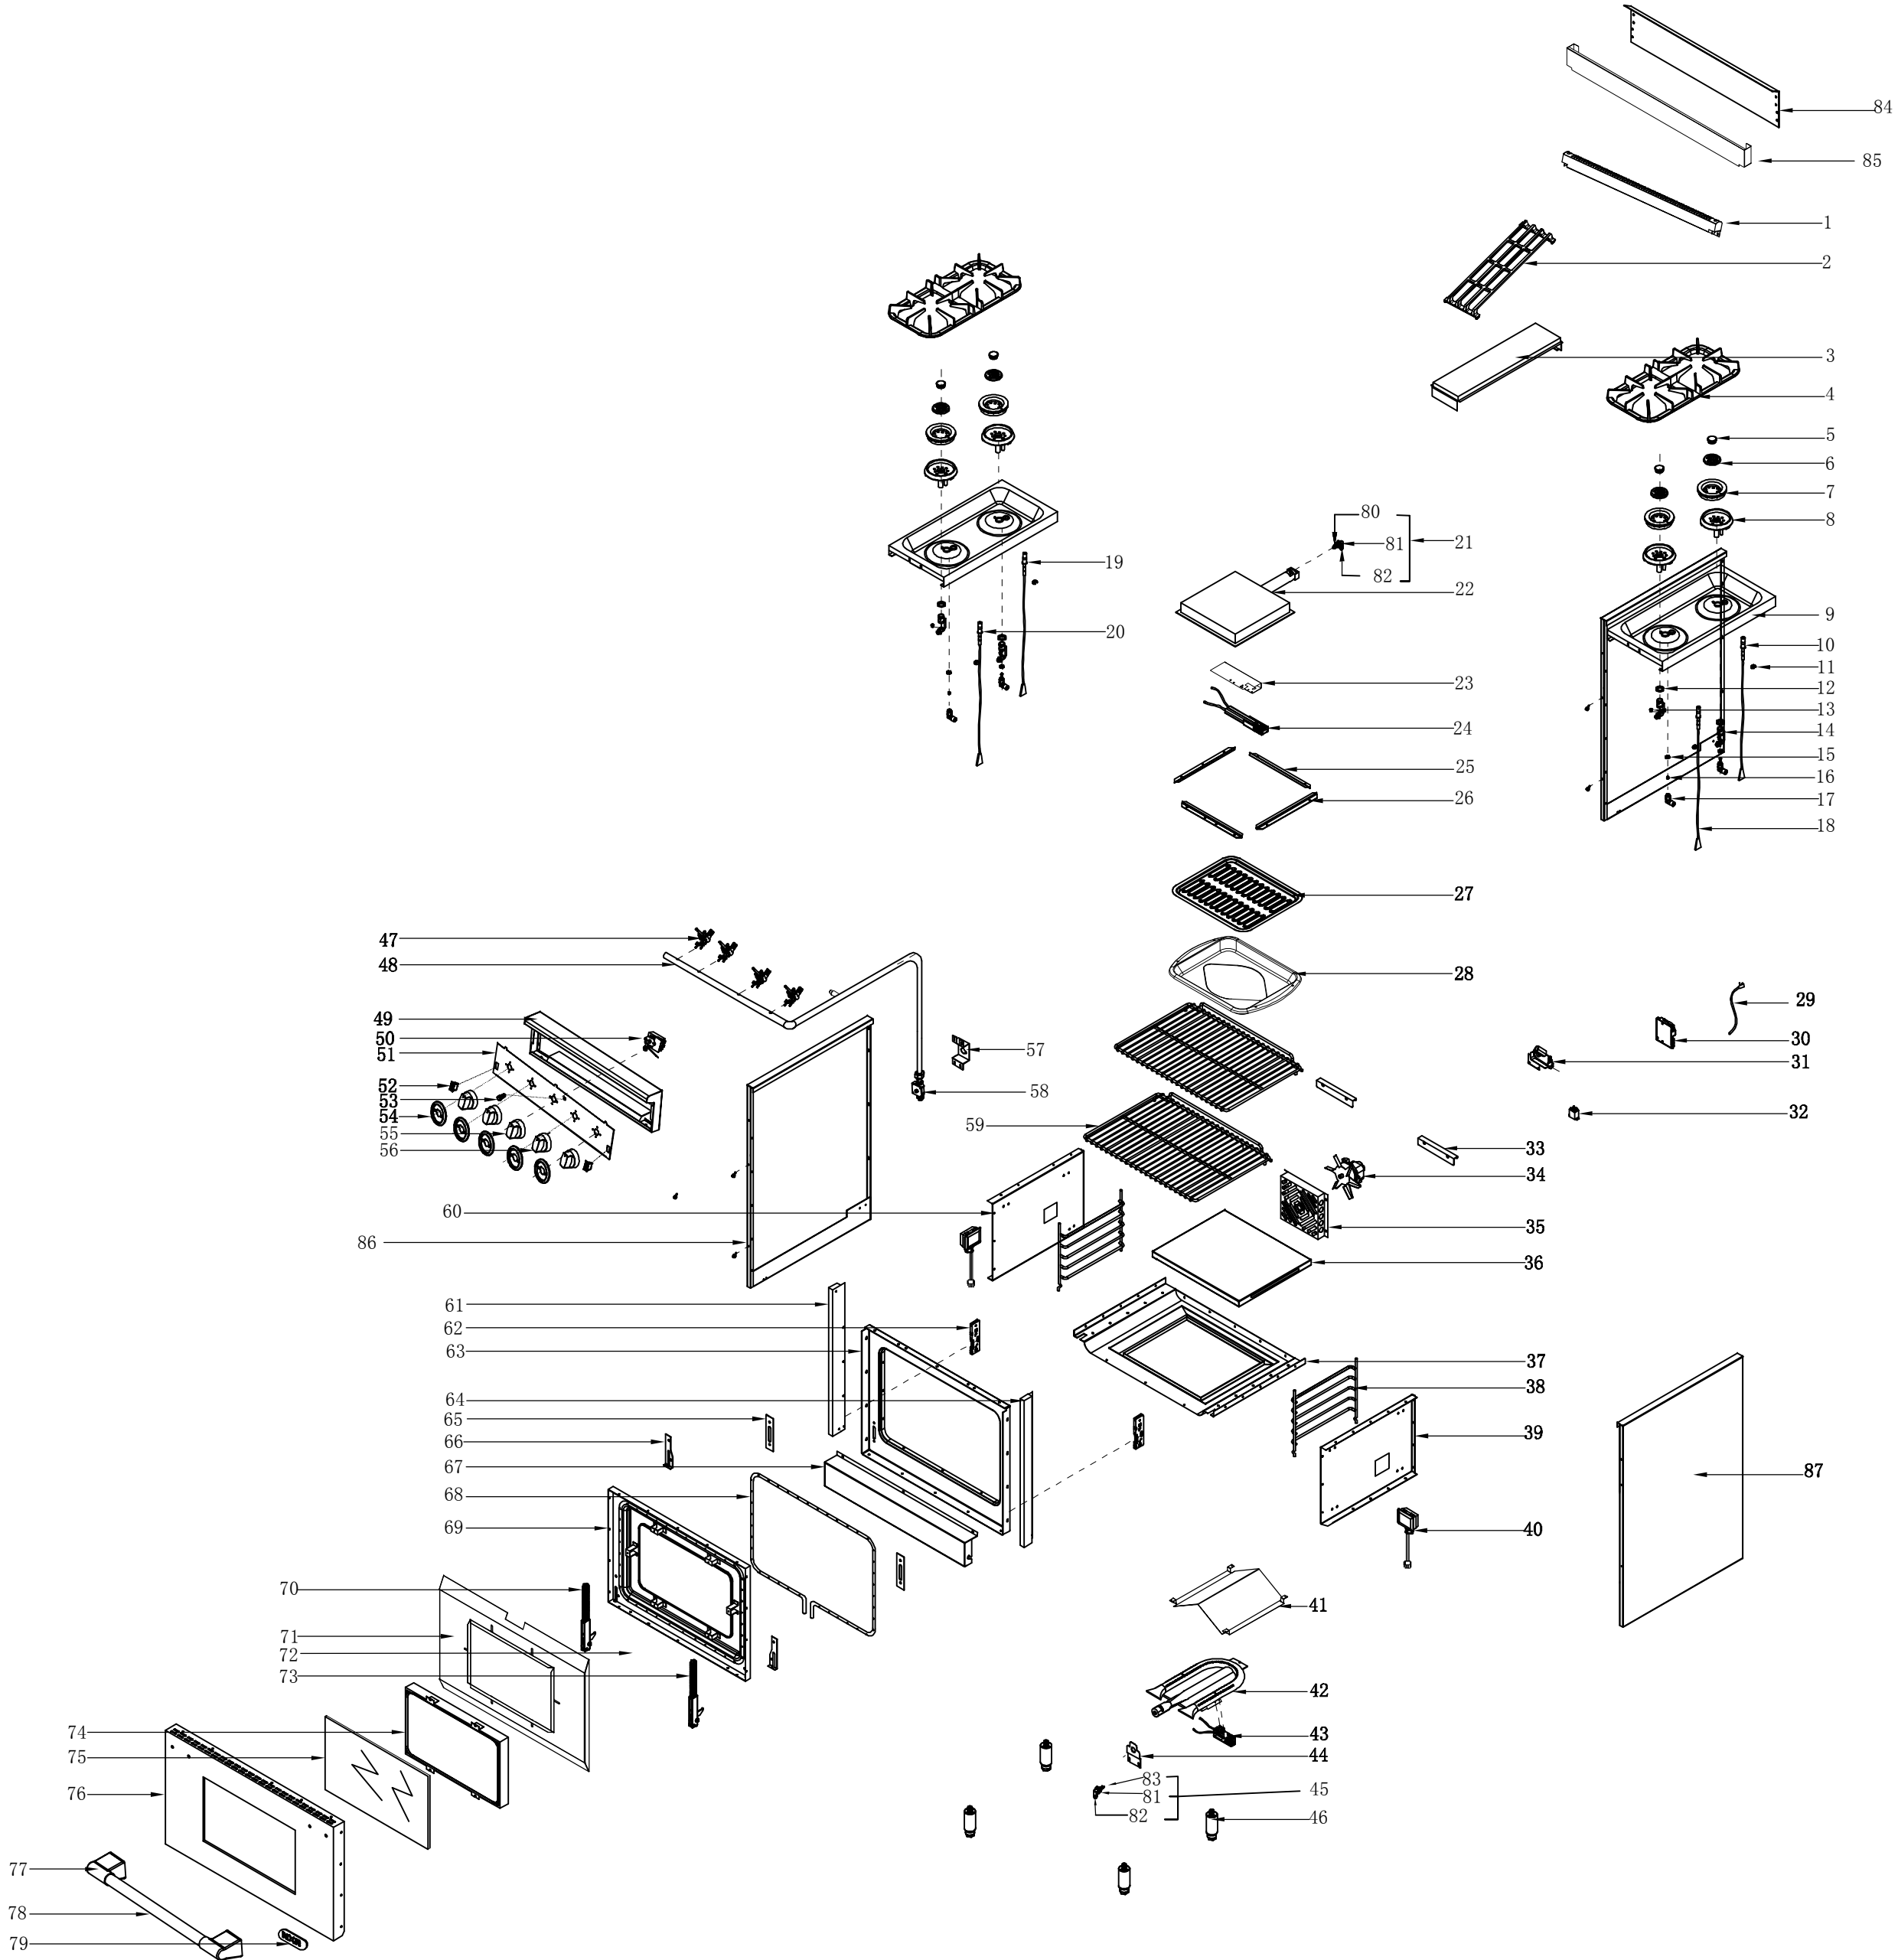


DRGB3601

 2014-04-29

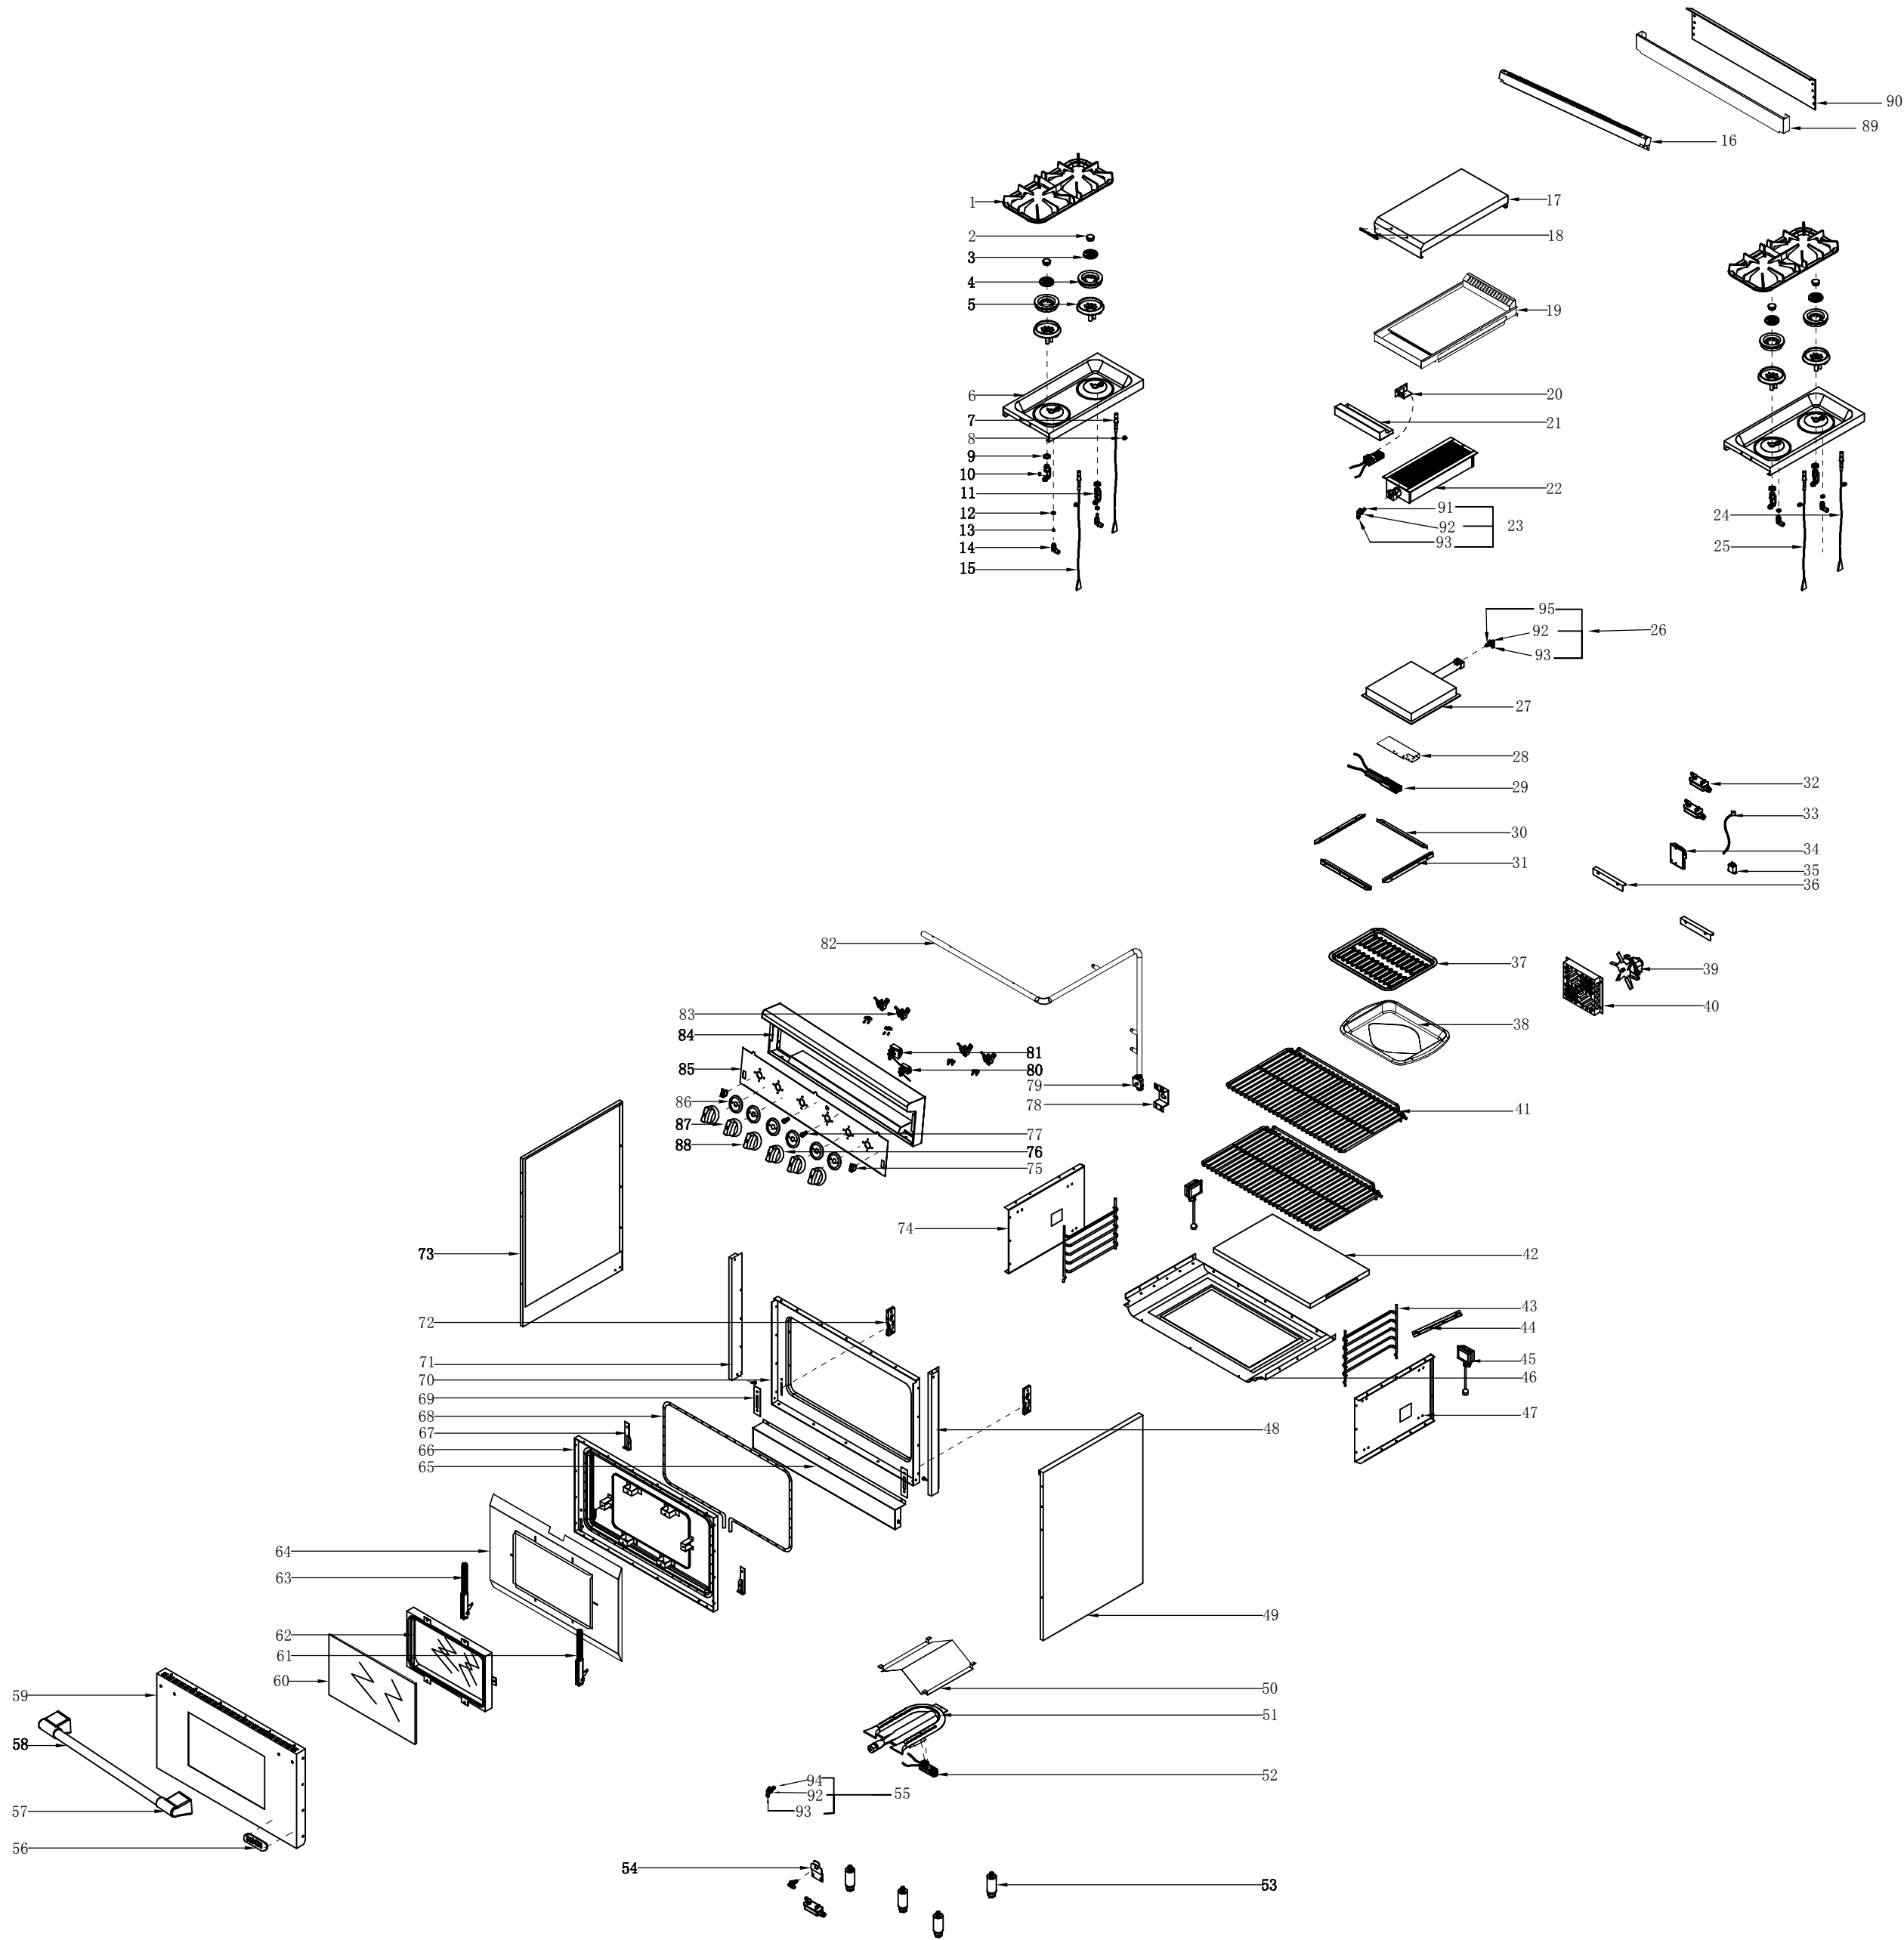


DRGB3602

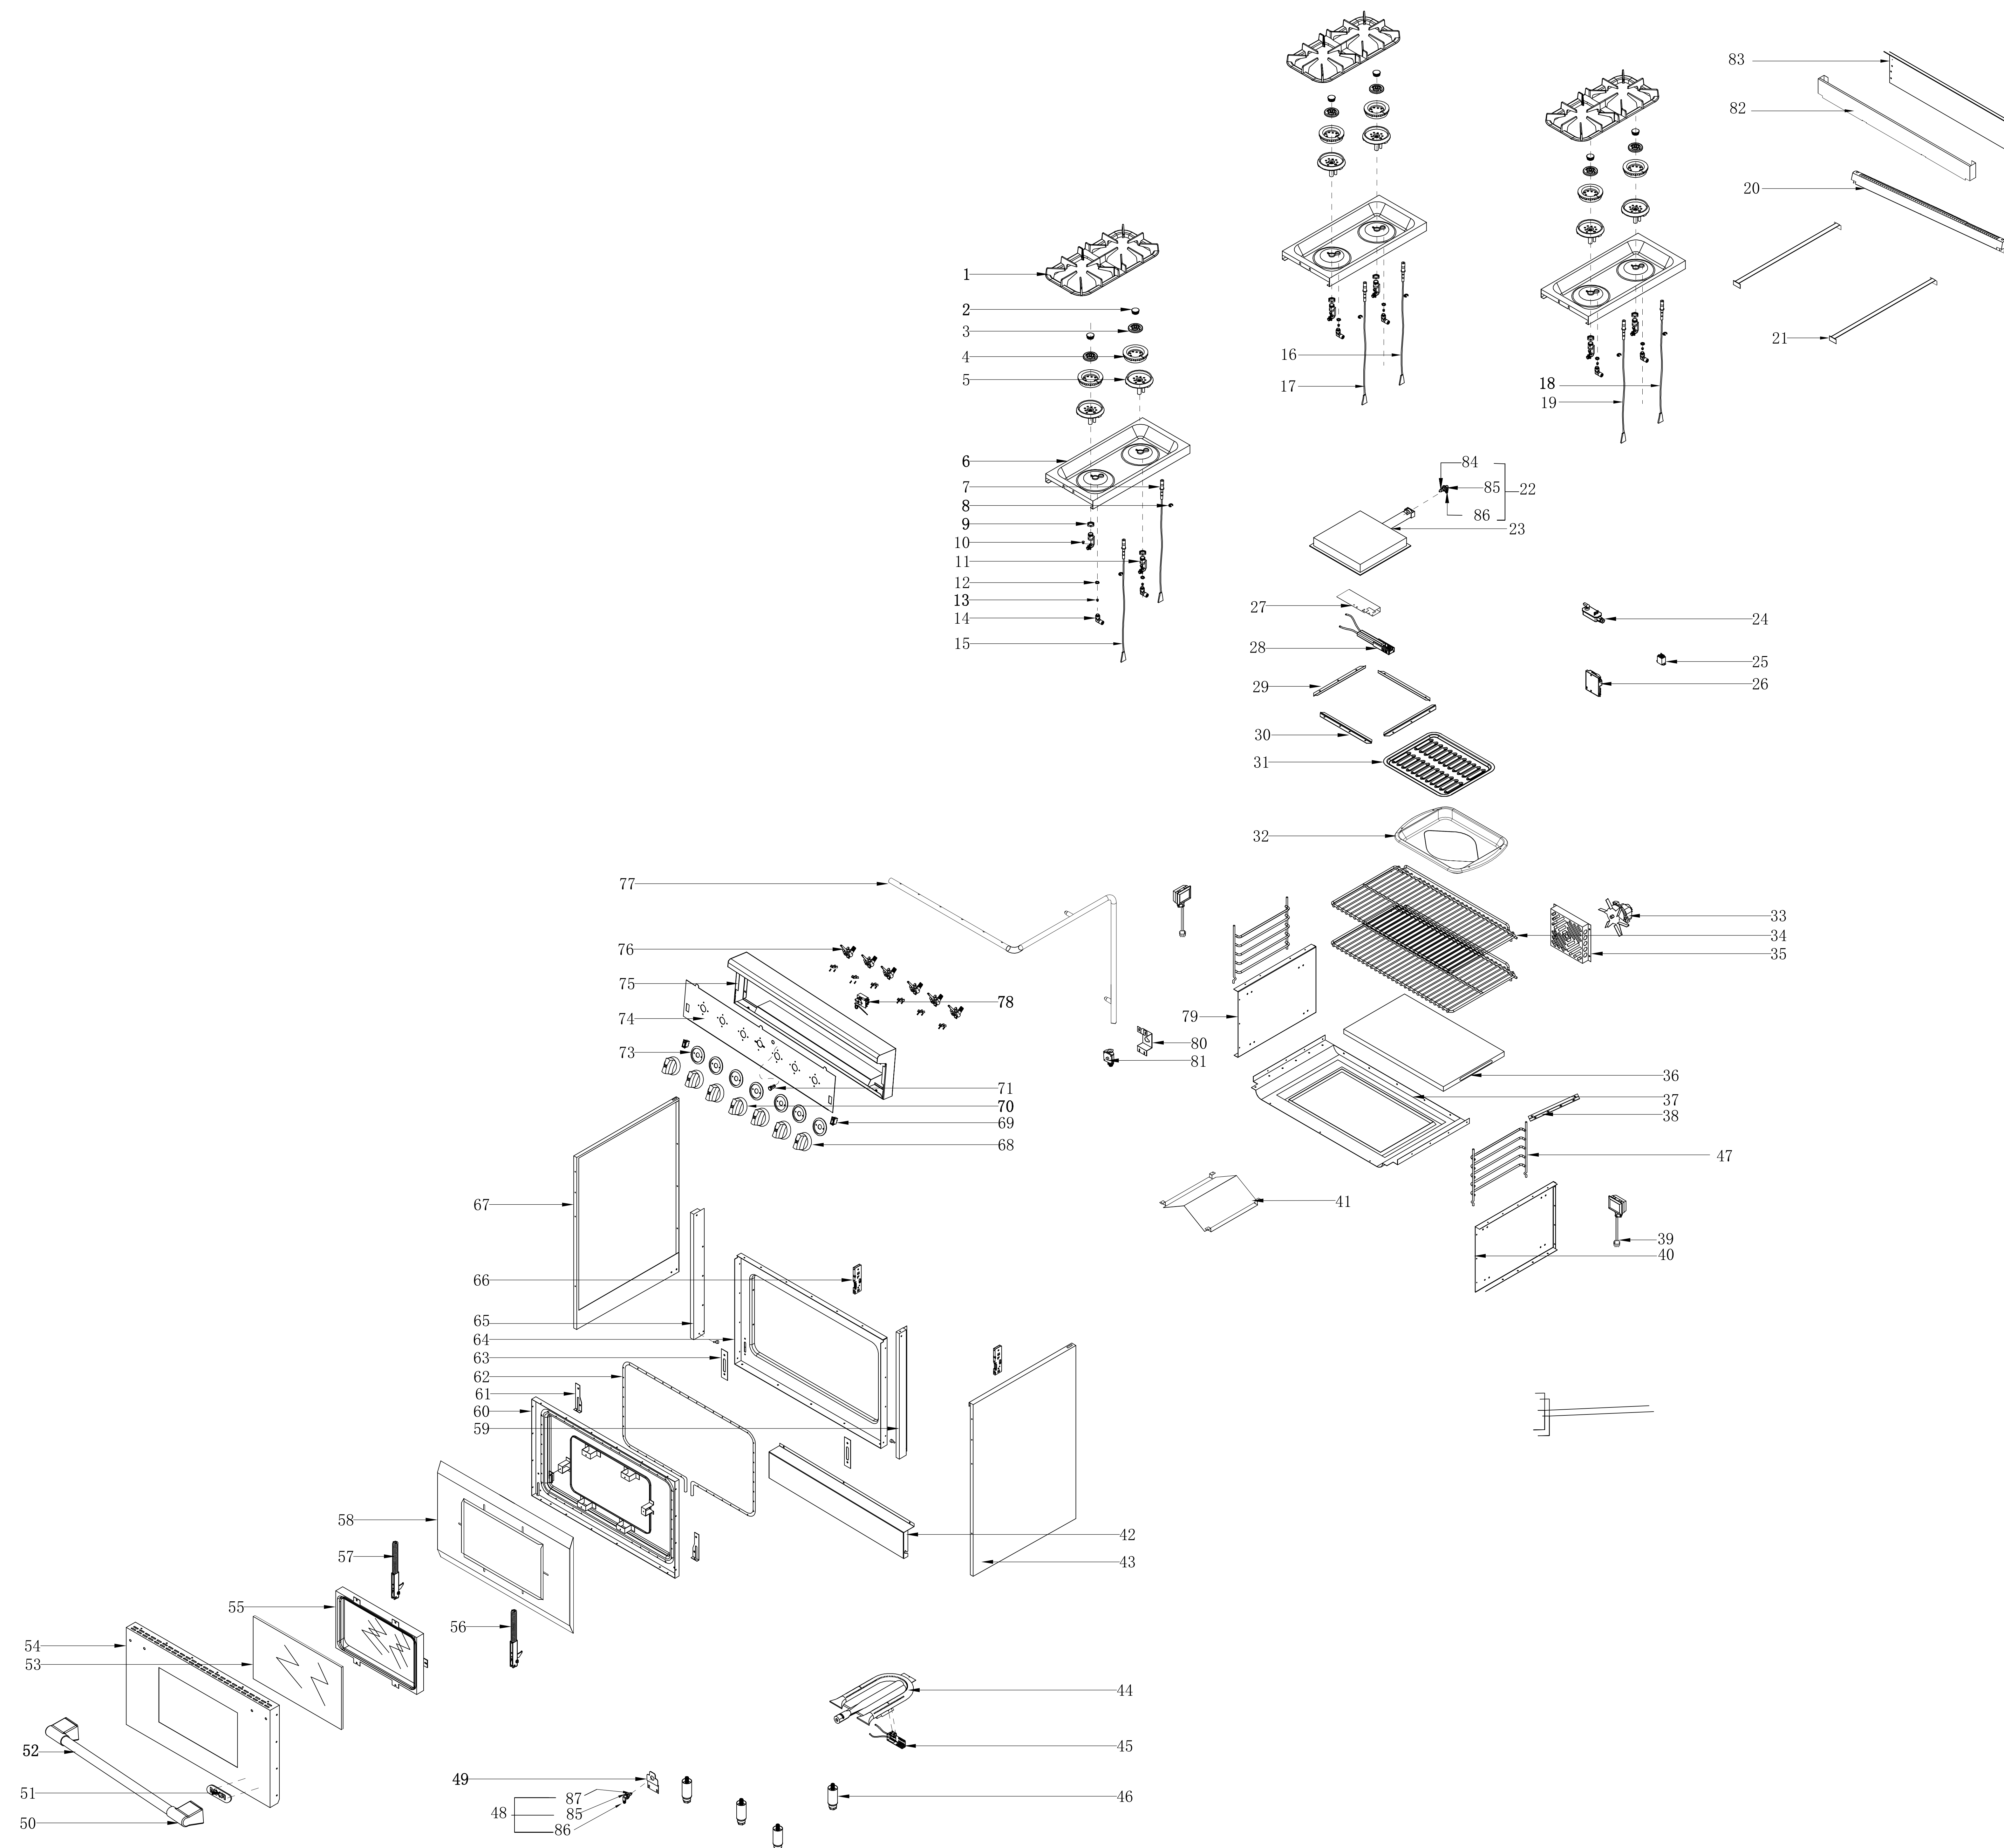 

DRGB4801

 2014-04-30

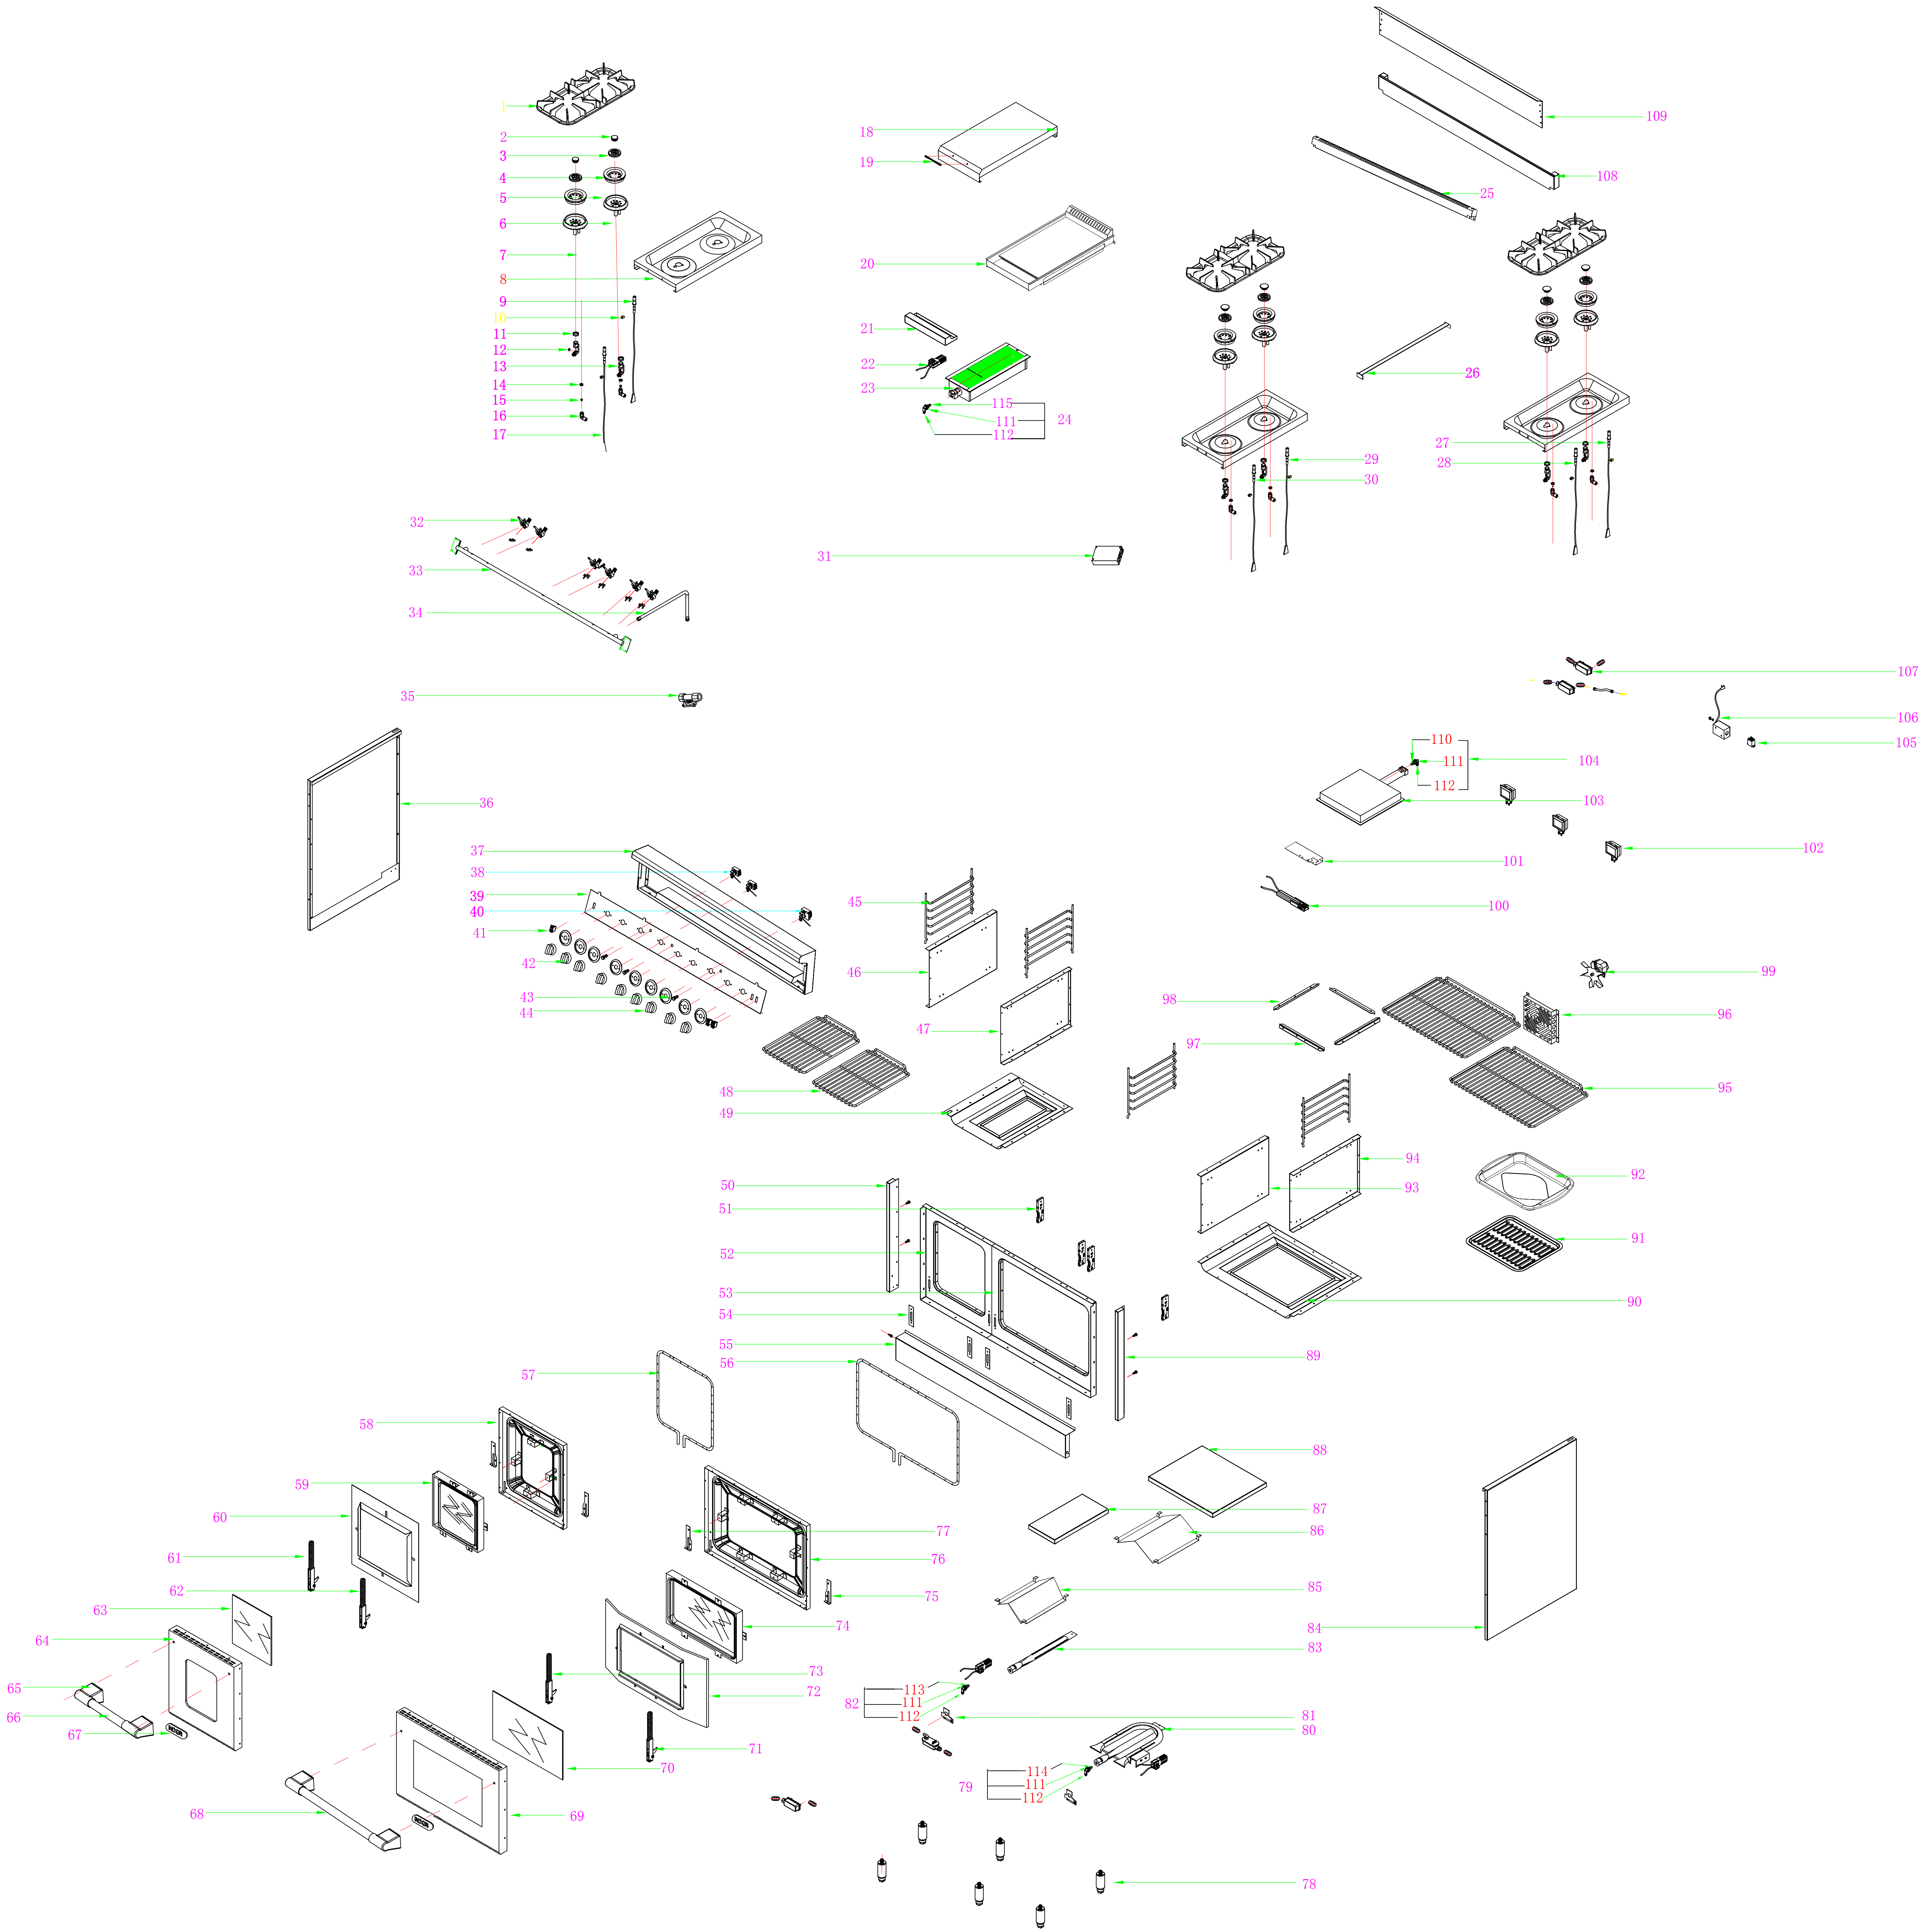

PART NAME	Part #	DRGB 3001 Part #	DRGB 3601 Part #	DRGB 3602 Part #	DRGB 4801 Part #	BX 3031 Part #	BX 3602 Part #	MB 30781	MB 36791	MB 48801
AB connected corrugated pipe					120					120
Adjustable Leg	22-99-0005-A0	46	53	46	78			46	46	78
Adjustable Leg, Top	05-01-0002-A2					165	165			
Adjustable Leg, Bottom	05-01-0001-A2					166	166			
Anti Tip Bracket	01-04-0066-A0	89	97	89	118	174	192	89	89	118
Backsplash "BX3031"	04-01-0373-A0					53		53		
Backsplash "BX3602"							146		146	
Backsplash A "30" (Backguard "30")		85								
Backsplash A "3601" (Backguard "3601")			89							
Backsplash A "3602" (Backguard "3602")				82						
Backsplash A "48" (Backguard "48")					108					108
Backsplash B "30" (Backguard "30")		84								
Backsplash B "36" (Backguard "36")	04-01-0151-A2		90	83						
Backsplash B "48" (Backguard "48")					109					109
Bezel	14-04-0009-A0	54	86	73		112	79	54	73	
Blue Thermostat Oven Knob (Oven Knob)										
Blue Top Burner Knob										
Bottom Cup	10-01-0030-A0						24			
Bottom Cup (Burner Base Assembly Sabaf style)	10-01-0023-A0					6	28			
Bracket for U-shape Orifice Assembly	04-04-0059-A1	44	54	47	81			44	47	81
Broil Igniter Housing										
Broil Orifice Assembly	05-05-0011-A1	21	26	22	104	180	190	21	22	104
Broil Orifice NG (infrared orifice (f1-85mm))	05-04-0007-A0	80	95	84	110	43	62	80	84	110
Broil Pan	01-06-0078-A1	28	38	32	92	14	20	28	32	92
Broil Pan Cover	04-06-0077-A1-1	27	37	31	91	13	19	27	31	91
Burner Cap	10-01-0027-A0						21			
Burner Cap (Inner Burner Head Sabaf Style)	10-01-0020-A0					3	25			
BX Cooking Grate	13-01-0021-A0					1	1			
BX Thermostat Knob (Oven Knob)	22-99-0040-A0					115	83	115	83	
BX Top Burner Knob	22-99-0039-A0					113	81	113	81	

C-clip for electrode mounting	06-09-0007-A0	11	8	8	10	23	39	11	8	10
Center Grate	13-01-0014-A0	2						2		
Control knob, Main Top Burner (Knob Otb)	22-99-0022-A0	56	87	68	42					
Control knob, Oven (Knob Thermostat/Griddle)	22-99-0019-A0	55	76	70	44					
Control Panel "30"	04-02-0544-A0	51						51		
Control Panel "3601"	04-02-0546-A0		85							
Control Panel "3602"	04-02-0547-A0			74					74	
Control Panel "48"	04-02-0549-A0				39					39
Control Panel "BX-30"						110				
Control Panel "BX-36"	04-02-0548-A0						78			
Control Panel Supporter "30" (Bullnose "30")	20-01-0030-A0-3	49						49		
Control Panel Supporter "3601" (Bullnose "3601")	20-01-0029-A1		84							
Control Panel Supporter "3602" (Bullnose "3602")	20-01-0031-A1-3			75					75	
Control Panel Supporter "48" (Bullnose "48")	20-01-0052-A0-3				37					37
Control Panel Supporter "BX-30" (Bullnose "BX-30")	20-01-0063-A0-3					108				
Control Panel Supporter "BX-36" (Bullnose "BX-36")	20-01-0068-A0-3						77			
Convection fan	07-03-0006-A0	34	39	33	99	73	170	34	33	99
Convection Fan Nut										
Door Frame, Inner "18" (Door Liner "18")	04-06-0329-A0-5				58					58
Door Frame, Inner "30" (Door Liner "30")	04-06-0068-A2	69			76	129		69		76
Door Frame, Inner "36" (Door Liner "36")	04-06-0367-A0-2		66	60			92		60	
Door Frame, Outer "18"	04-02-0328-A0				64					64
Door Frame, Outer "30"	04-02-0067-A2	76			69					69
Door Frame, Outer "36"	04-02-0102-A2		59	54						
Door Frame, Outer "BX30"						139		139		
Door Frame, Outer "BX36"							104		104	
Door Handle "18"	12-02-0015-A0				66					66
Door Handle "30"	12-01-0003-A0	78			68					68
Door Handle "36"	12-01-0009-A1		58	52						

Door Handle "BX 30"	12-01-0011-A0					141		141		
Door Handle "BX 36"	12-01-0014-A0						107		107	
Door Handle Suppor, Left (BX)	12-02-0012-A0					140	106			
Door Handle Support	12-02-0010-A0	77	57	50	65			77	50	65
Door Handle Support, Right (BX)	12-02-0013-A0					142	108			
Door Hinge Receiver	05-03-0017-A0	62	72	66	51	120	86	62	66	51
Door Hinge, Left "18"	05-03-0030-A0				61					61
Door Hinge, Left "30"	05-03-0015-A0	70			73	134		70		73
Door Hinge, Left "36"	05-03-0029-A0		63	57			99		57	
Door Hinge, Right "18"	05-03-0031-A0				62					62
Door Hinge, Right "30"	05-03-0016-A0	73			71	135		73		71
Door Hinge, Right "36"	05-03-0028-A0		61	56			102		56	
DRGB Cooking Grate	22-99-0029-A0	4	1	1	1			4	1	1
DRGB Rubber Grate Pads										
DRGB-3001 Complete Door "30	10-01-1011-A1									
DRGB-3001 Complete Door "31	10-01-1010-A1									
DRGB-3031 Stainless Steel Sheet 304 Back Ground										
DRGB-3602 Stainless Steel Sheet 304 Back Ground										
DRGB-4801 Complete Door "18"	10-01-1012-A1									
Drip Cover "BX30" (Drip Pan Divider)	04-02-0352-A0					29				
Drip Pan	04-01-0043-A2	9	6	6				9	6	
Drip Pan	04-01-0336-A0				8					8
Drip Pan Divider "30" (Cover)	04-02-0047-A1	3						3		
Drip Pan Trim "36"	04-02-0128-A2			21					21	
Drip Pan Trim "48"	04-02-0312-A0				26					26
Drip Pan, Left	04-01-0363-A0						9			
Drip Pan, Right	04-01-0349-A0					8	38			
Drip Pan,Middle	04-01-0364-A0						33			
Electrode (BX-3602 "Center Front")							12			
Electrode (BX-3602 "Center Rear")							12			
Electrode (BX-3602 "Left Rear")							12			
Electrode (BX-3602 "Right Rear")							12			
Electrode (DRGB/BX-3602 "Left Front")	07-10-0097-A0			16			12		16	
Electrode (DRGB/BX-3602 "Right Front")	07-10-0095-A0			7			12		7	

Electrode (DRGB-3001 "Left Rear")	07-10-0090-A0	20						20		
Electrode (DRGB-3001 "Right Rear")	07-10-0088-A0	18						18		
Electrode (DRGB-3601 "Left Front")	07-10-0093-A0		24							
Electrode (DRGB-3601 "Left Rear")	07-10-0094-A0		25							
Electrode (DRGB-3601 "Right Front")	07-10-0091-A0		7							
Electrode (DRGB-3601 "Right Rear")	07-10-0092-A0		15							
Electrode (DRGB-3602 "Center Front")	07-10-0099-A0			18					18	
Electrode (DRGB-3602 "Center Rear")	07-10-0098-A0			17					17	
Electrode (DRGB-3602 "Left Rear")	07-10-0096-A0			15					15	
Electrode (DRGB-3602 "Right Rear")	07-10-0100-A0			19					19	
Electrode (DRGB-4801 "Center Front")	07-10-0103-A0				27					27
Electrode (DRGB-4801 "Center Rear")	07-10-0104-A0				28					28
Electrode (DRGB-4801 "Left Front")	07-10-0101-A0				9					9
Electrode (DRGB-4801 "Left Rear")	07-10-0102-A0				17					17
Electrode (DRGB-4801 "Right Front")	07-10-0105-A0				29					29
Electrode (DRGB-4801 "Right Rear")	07-10-0106-A0				30					30
Electrode 1280mm (DRGB/BX-3001 "Right Front")	07-10-0087-A0	10				22		10		
Electrode 920mm (DRGB/BX-3001 "Left Front")	07-10-0089-A0	19				22		19		
Electrolux Knobs										
Energy 3001										
Explosion-proof Casing, Oven (Main Valve Knob Tube)	06-17-0053-A0	55	76	70	44			55	70	44
Explosion-proof Casing, Top Burner (Oven thermostat Knob Tube)	06-17-0052-A0	56	87	68	42			56	68	42
Fan Cover	04-01-0463-A1	35		35	96			35	35	96
Fan Cover "3601"	04-01-0463-A0		40							
Fan/Light Switch	07-02-0033-A0	52	75	69	41	111	114	52	69	41
Flame Ring	10-01-0028-A0						22			
Flame Ring (Outer Burner Head Sabaf Style)	10-01-0021-A0					4	26			
Flame Ring Base	10-01-0029-A0						23			
Flame Ring Base (Outer Burner Head Base Sabaf Style)	10-01-0022-A0					5	27			
Flame Tamer "18"	04-03-0332-A0				85					85
Flame Tamer "30"	04-03-0447-A1	41			86	153		41		86
Flame Tamer "36"	04-03-0266-A0		50	41			126		41	
Flue Baffle	04-01-0561-A0	33	36					33		
Gasket "18"	11-05-0034-A0				57					57

Gasket "30"	11-05-0012-A0	68			56	125		68		56
Gasket "36"	11-05-0014-A0		68	62					62	
Gray Glass	15-01-0002-A0	75	60	53	70	137	103	75	53	70
Gray Glass "18"	15-01-0005-A0				63					63
Grease Tray	04-01-0093-A0		21		21					21
Griddle	20-99-0026-A2-4		19		20					20
Griddle Cover	04-01-0121-A0		17		18					18
Griddle Cover Handle	12-03-0004-A0		18		19					19
Griddle Igniter Bracket			20							
Griddle Infrared Burner	10-03-0018-A0		22		23					23
Griddle Orifice Assembly (Nut main jet Holder Mounting)	05-05-0011-A1		23		24					24
Griddle Orifice NG			91		115					115
Griddle Thermostat	07-12-0017-A0		80		38					38
Hinge Receptical Chrome Plate Cover "30"		65						65		
Hinge Receptical Chrome Plate Cover "3601"	04-02-0202-A1		69							
Hinge Receptical Chrome Plate Cover "48"	04-02-0202-A2				54					54
Igniter Hot Surface Bracket	04-01-0023-A1	23	28	27	101			23	27	101
Igniter hot surface, broiler burner (Broil Igniter)	07-01-0002-A0	24	29	28	100	42	51	24	28	100
Igniter hot surface, Oven/Griddle (Bake Igniter)	07-01-0001-A0	43	52	45	22	155	132	43	45	22
Indictor (Indicating Light)	07-05-0031-A0	53	77	71	43	114	113	53	71	43
Infrared Broil Burner	10-03-0017-A0	22	27	23	103	93	52	22	23	103
Infrared Burner Press Bar F/R	04-01-0462-A1	25	30	30	97			25	30	97
Infrared Burner Press Bar L/R	04-01-0461-A1	26	31	29	98			26	29	98
Inner burner base	10-01-0002-A0	6	3	3	3	16	4	6	3	3
Inner burner head	10-01-0001-A0	5	2	2	2	15	3	5	2	2
Insulation Cover Plate	04-03-0104-A0		64	58					58	
Insulation Cover Plate "18"	04-03-0330-A0				60					60
Insulation Cover Plate "30" (30" Insulation Cover Plate)	04-03-0069-A0	71			72			71		72
Island Trim "30"	20-01-0049-A0	1						1		
Island Trim "3601"			16							
Island Trim "3602"	20-01-0048-A0			20					20	
Island Trim "48"	20-01-0076-A0				25					25
Kick Panel "30"	04-02-0357-A1	67				127		67		
Kick Panel "36"	04-02-0371-A0		65	42			93		42	

Kick Panel "48"	04-02-0333-A2				55					55
LP Kit - BX-3031	21-99-0004-A0					173				
LP Kit - BX-3602	21-99-0005-A0						185			
LP Kit "30"	21-99-0001-A0	88						88		
LP Kit "3601"	21-99-0002-A0		96							
LP Kit "3602"	21-99-0003-A0			88					88	
LP Kit "48"	21-99-0006-A0				116					116
LP Simmer Orifice		90	98	90	119	175	193	90	90	119
Main Burner Valve (Top Burner Valve)	09-01-0020-A0	47	83	76	32		75	47	76	32
Main Jet Holder Assembly	10-07-0009-A0	14	11	11	13	26		14	11	13
Mainfold "3601"	11-03-0031-A0		82							
Manifold "30"	11-03-0029-A0	48				79		48		
Manifold "3602"	11-03-0030-A0			77					77	
Manifold "BX-3602"	11-03-0059-A0						71			
Manifold A "48"	11-03-0043-A0				33					33
Manifold B "48"	11-03-0044-A0				34					34
NG Simmer Orifice	10-05-0063-A0	16	13	13	15	28	14	16	13	15
NG Top Burner Main Orifice (NG Injector)	10-05-0007-A0	13	10	10	12	25	11	13	10	12
NRG Light Switch										
Nut Main Jet Holder Mounting	10-06-0010-A0	12	9	9	11	24	10	12	9	11
NXR Logo	08-02-0002-A1	79	56	51	67	143	109	79	51	67
Old Style Oven Light 3001										
Orifice Bracket	05-05-0011-A0	82	93	86	112	45	60	82	86	112
Orifice Nut	05-06-0012-A0	81	92	85	111	44	61	81	85	111
Outer burner base	10-01-0004-A0	8	5	5	5	18	6	8	5	5
Outer burner head	10-01-0003-A0	7	4	4	4	17	5	7	4	4
Oven Back Panel						72				
Oven Ceiling						39				
Oven Door "18"					117					117
Oven Door Hinge Chrome Plate Cover Left	04-02-0211-A1	66	67	61	77			66	61	77
Oven Door Hinge Chrome Plate Cover Right	04-02-0212-A1				75					75
Oven Floor "18"	04-06-0298-A0-5				49					49
Oven Floor "30" (Oven Base)	04-06-0342-A0	37				85		37		

Oven Floor "30" for DRGB-4801	04-06-0342-A0				90					90
Oven Floor "36" (Oven Base)	04-06-0375-A0		46	37			176		37	
Oven Floor Cover "18"	04-06-0331-A0-5				87					87
Oven Floor Cover "30"	04-06-0073-A1	36			88	82		36		88
Oven Floor Cover "36"	04-06-0105-A1		42	36			175		36	
Oven Frame "18"	04-06-0304-A0-5				52					52
Oven Frame "30" for DRGB-4801	04-06-0303-A1-5				53					53
Oven Frame, Blue Porcelain "30"		63						63		
Oven Frame, Blue Porcelain "36"			70	64					64	
Oven Frame, Stianless Steel "30" (Door Frame)	04-01-0556-A0	63				122		63		
Oven Frame, Stianless Steel "36" (Door Frame)	04-01-0557-A0		70	64			88		64	
Oven lamp	07-04-0007-A0	40	45	39		88	177	40	39	
Oven lamp "48"	07-04-0032-A0				102					102
Oven Rack "18" (Cooking Grid "18")	13-03-0020-A0				48					48
Oven Rack "30"	13-03-0012-A2	59			95	78		59		95
Oven Rack "36"	13-03-0010-A2		41	34			171		34	
Oven Rack Supporter	13-03-0019-A0	38	43	47	45	86	178	38	47	45
Oven Side Panel, Left	04-06-0343-A0-3	60	74	79		80	173	60	79	
Oven Side Panel, Left "18"	04-06-0301-A0-5				46					46
Oven side Panel, Middle Right "48"	04-06-0442-A0-5				93					93
Oven Side Panel, Right "18"	04-06-0441-A0-5				47					47
Oven Side Panel, Right "30"	01-06-0344-A0	39				90		39		
Oven Side Panel, Right "36"	04-06-0365-A0-3		47	40			181		40	
Oven Side Panel, Right "48"	04-06-0302-A0-5				94					94
Oven Thermostat	07-12-0005-A0	50	81	78	40	109	112	50	78	40
Oven Window	22-99-0006-A0	74	62	55	74	136	100	74	55	74
Oven Window "18"	22-99-0031-A0				59					59

Power cord	07-06-0008-A0	29	33		106			29		106
Regulator	09-03-0009-A0	58	79	81		83	174	58	81	
Regulator "48"	09-03-0010-A0				35					35
Regulator Bracket		57	78	80				57	80	
Relay	07-08-0010-A0	32	35	25	105		154	32	25	105
Rubber Pad	06-08-0043-A0						147			
Rubber Pad	06-08-0060-A0					2	2			
Sabaf C-clip for electrode mounting	06-09-0062-A0					23	39			
Sabaf Electrode (1250mm) (BX-3031 "Right Rear")	10-09-0019-A0					7				
Sabaf Electrode (700mm) (BX-3031 "Left Rear")						7				
Safety Valve	09-04-0006-A0	31	32	24	107	65	143	31	24	107
Side Panel, Left	04-02-0347-A0	86	73	67	36	106	72	86	67	36
Side Panel, Right	04-02-0348-A0	87	49	43	84	148	125	87	43	84
Side Trim, Left	04-02-0279-A0	61	71	65	50	121	87	61	65	50
Side Trim, Right	04-02-0280-A0	64	48	59	89	144	118	64	59	89
Simmer Jet Holder	10-08-0013-A2	17	14	14	16			17	14	16
Simmer Jet Holder NG	10-05-0063-A0						15			
Simmer Jet Holder Nut	10-06-0014-A1	15	12	12	14	27	13	15	12	14
Single Valve (Single Valve 9K)	09-01-0016-A0						74			
Single Valve 12000BTU	09-01-0007-A0					105	76			
Spark Module 1 to 6 (Igniter)	07-07-0049-A0			26	31		156		26	31
Spark Module 4+1 (Igniter)	07-07-0009-A0	30	34			60		30		
Thermocouple Bracket/Shield	04-02-0259-A0		44	38					38	
Tube Burner	10-02-0035-A0				83					83
Tube Burner Orifice Assembly	05-05-0011-A1				82					82
Tube Burner Orifice NG	10-05-0011-A0				113					113
U-Shape burner "17"										
U-shape Burner "19"	10-02-0016-A1	42	51	44	80	154	127	42	44	80
U-shape Burner Orifice Assembly	05-05-0011-A1	45	55	48	79	176	136	45	48	79
U-shape Burner Orifice NG (Oven Burner Orifice(f2-26mm))	05-04-0009-A0	83	94	87	114	179	189	83	87	114