


# Parts Breakdown

**Model CE-CN-0212-S** 44198

**Model CE-CN-0424-S** 44199

**Model CE-CN-0636-S** 44200

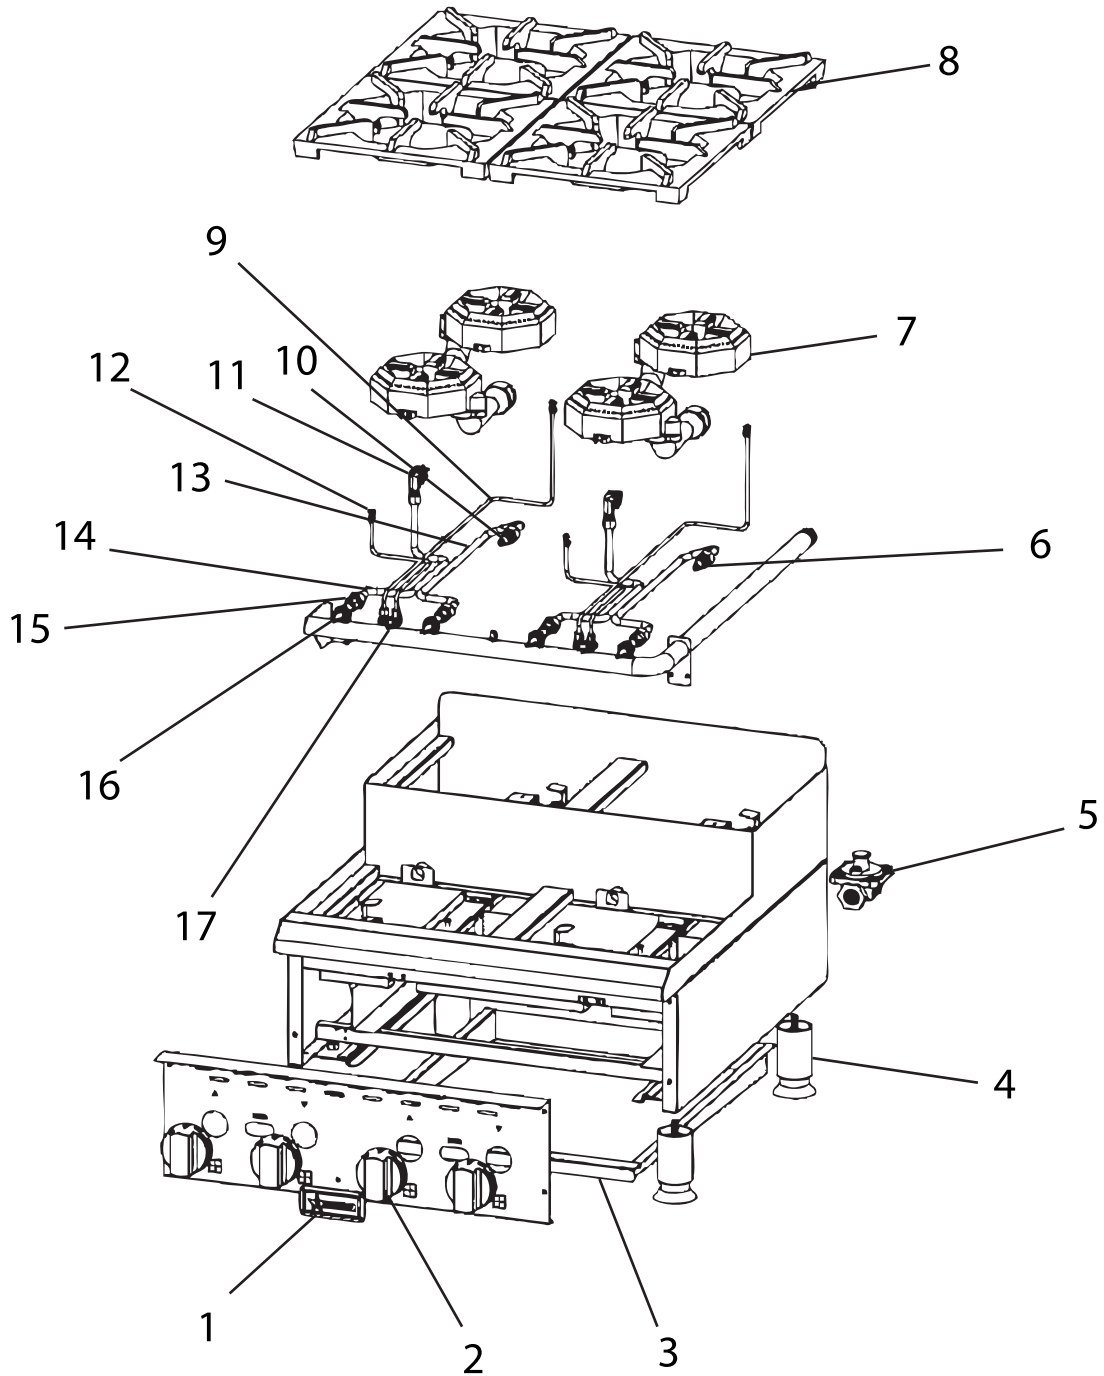

# Parts Breakdown

## Model CE-CN-0212-S 44198

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
43313	Brand for TR-HPSU212M-08	1	73106	Burner for TR-HPSU212M-08	7	73110	Main Gas Pipe Front for TR-HP-SU212M-08	13
43309	Dial for TR-HPSU212M-08	2	73107	Trivet for TR-HPSU212M-08	8	73111	Main Gas Pipe Rear for TR-HP-SU212M-08	14
73100	Tray for TR-HPSU212M-08	3	73108	Back Pipe of Pilot Assembly for TR-HPSU212M-08	9	63535	Valve Connection for TR-HPSU212M-08	15
72410	Foot for TR-HPSU212M-08	4	63533	Orifice Connection-Rear for TR-HPSU212M-08	10	73113	Pilot Valve for TR-HPSU212M-08	16
73104	Regulator for TR-HPSU212M-08	5	63534	Orifice Connection-Front for TR-HPSU212M-08	11	73112	Valve for TR-HPSU212M-08	17
73105	Orifice 46 # NAT for TR-HPSU212M-08	6	73109	Front Pipe of Pilot Assembly for TR-HPSU212M-08	12	42961	Conversion Kits for TR-HPSU212M-08	

## Model CE-CN-0424-S 44199

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
43313	Brand for TR-HPSU424M-08	1	73106	Burner for TR-HPSU424M-08	7	73110	Main Gas Pipe Front for TR-HP-SU424M-08	13
43309	Dial for TR-HPSU424M-08	2	73107	Trivet for TR-HPSU424M-08	8	73111	Main Gas Pipe Rear for TR-HP-SU424M-08	14
72424	Tray for TR-HPSU424M-08	3	73108	Back Pipe of Pilot Assembly for TR-HPSU424M-08	9	63535	Valve Connection for TR-HPSU424M-08	15
72410	Foot for TR-HPSU424M-08	4	63533	Orifice Connection-Rear for TR-HPSU424M-08	10	73113	Pilot Valve for TR-HPSU424M-08	16
73104	Regulator for TR-HPSU424M-08	5	63534	Orifice Connection-Front for TR-HPSU424M-08	11	73112	Valve for TR-HPSU424M-08	17
73105	Orifice 46 # NAT for TR-HPSU424M-08	6	73109	Front Pipe of Pilot Assembly for TR-HPSU424M-08	12	42962	Conversion Kits for TR-HPSU424M-08	

## Model CE-CN-0636-S 44200

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
43313	Brand for TR-HPSU636M-08	1	73106	Burner for TR-HPSU636M-08	7	73110	Main Gas Pipe Front for TR-HP-SU636M-08	13
43309	Dial for TR-HPSU636M-08	2	73107	Trivet for TR-HPSU636M-08	8	73111	Main Gas Pipe Rear for TR-HP-SU636M-08	14
72425	Tray for TR-HPSU636M-08	3	73108	Back Pipe of Pilot Assembly for TR-HPSU636M-08	9	63535	Valve Connection for TR-HPSU636M-08	15
72410	Foot for TR-HPSU636M-08	4	63533	Orifice Connection-Rear for TR-HPSU636M-08	10	73113	Pilot Valve for TR-HPSU636M-08	16
73104	Regulator for TR-HPSU636M-08	5	63534	Orifice Connection-Front for TR-HPSU636M-08	11	73112	Valve for TR-HPSU636M-08	17
73105	Orifice 46 # NAT for TR-HPSU636M-08	6	73109	Front Pipe of Pilot Assembly for TR-HPSU636M-08	12	42963	Conversion Kits for TR-HPSU636M-08	