



## FFSGS6265-20

No.	Material Name	Material Code	Qty.
1	Backsplash assembly	G20R10-011500-Z	1
2	Mid burner cup	G20A01-040100	2
3	Mid burner	G20A02-040101	2
4	Mid burner cover	G20A02-040102	2
5	Large burner cup	G20A01-040200	1
6	Large burner	G20A02-040201	1
7	Large burner cover	G20A02-040202	1
8	Small burner cup	G20A01-040000	1
9	Small burner	G20A02-040001	1
10	Small burner cover	G20A02-040002	1
11	Cast iron grates left	G20C05-021300	1
12	Cast iron grates right	G20C05-021500	1
13	Cooktop plate	G20F08-020100	1
16	Cooling fan	G36R43-200900	1
19	Re-set switch	C36R05-076200	1
20	Seal mat G1/2	G20A01-210500	1
21	Adapter for regulator	G24G02-034200	1
22	Regulator	G20C01-034002	1
24	20" main gas pipe	G20R08-030700	1
25	Oven thermocouple	G20C01-072400	1
26	Theromstat	G20C02-030600	1
27	Cooktop valve 0.8	G24F08-030402	1
28	Cooktop valve 0.76	G24F08-030401	2
29	Cooktop valve 0.55	G24F08-030400	1

32	20" Control panel	G20R08-030300	1
33	Press button with lock	G36X07-170200	1
34	Knob for top burners	G20R08-030100	4
35	Knob for thermostat	G20R08-030101	1
36	Knob ring	G36R03-030200	5
37	Strip bar for control panel	G20R08-214500	1
38	Top cover for door	G20B01-101401	1
39	Window fixing piece for door	G20A01-103300	2
40	Door inside glass	G20B01-100500	1
41	Door hinge left support part	G20B01-101200	1
42	Door hinge right support part	G20B01-101300	1
43	Door inside window	G20B01-101100	1
44	DOOR handle	G20R08-101900	1
45	Door outer glass	G20R08-100400-04	1
46	Mat for handle	G20B02-100700	2
47	Door inside glass left bracket	G20B01-100800	1
48	Door inside glass right bracket	G20B01-100900	1
49	Stainless steel frame for door	G20H08-020003	1
50	Door hinge	G20B01-110001	2
51	DOOR handle	G20R08-101900	1
52	Drawer outside plate	G20H08-120100	1
53	Drawer rubber mat	G20A01-120900	4
54	Drawer inside plate	E20F01-120200-04	1
55	Drawer plate	G20C03-120500-02	1
56	Drawer rail	G20A01-120700	2
57	Front plate	G20C01-070102	1
58	Front plate Beam	G20A01-070200	1

59	Strip bar for front panel	G20B01-214500	1
60	Seal bar for front panel	G20G02-071200	1
61	door seal	G20C01-071200	1
62	Cavity right plate	G20A01-070500	1
64	Leg installation plate	G20A01-071100	2
65	Foot	G20C01-071500	4
67	Anti-tip bracket	G20A01-212500	1
68	Oven burner assembly	G20B01-080100	1
69	Oven burner fire board	G20A01-080900	1
70	Spark plug-for oven burner 230mm	G20C01-170502	1
71	Tray	G20A01-070700	1
72	Rack	G20C01-071900	2
73	Back plate	G20C01-070301	1
74	Weight block	E24F01-210202	1
76	Ignition 1 to 2	G20C01-170102-02	1
78	Power cord	G20A07-160105	1
79	Cavity left plate	G20A01-070400	1
80	Side plate	G20C01-071003	2
82	Ignition 1 to 1	G36R03-170101	4
84	baffle plate	G20R08-072000	1
85	Rear connecting plate	G20C01-022000	2
87	Oven lamp	G20C01-180101	1
88	Broil burner assembly	G20C01-090100	1
89	Broil burner fire board	G20C01-090300	1
90	Broil burner infrared radiation net	G20C01-090500	1
91	Spark plug-for grill burner 540mm	G20C01-170500	1
92	Cavity top plate	G20C01-070600	1

96	Nozzle base	G20A01-021100	2
104	Spark plug-for top burner 700mm	G20B01-170402	1
105	Spark plug-for top burner 820mm	G20B01-170405	1
106	Spark plug-for top burner 940mm	G20B01-170404	1
107	Spark plug-for top burner 1000mm	G20B01-170403	1
108	Small NG nozzle	G20A01-021208	1
	Small LPG nozzle	G20A01-021200	1
109	Mid NG nozzle	G20A01-021206	2
	Mid LPG nozzle	G20A01-021201	2
110	Large NG nozzle	G20A01-021213	1
	Large LPG nozzle	G20A01-021203	1
111	Broil nozzle NG 1.24	G20A01-021212	1
	Broil nozzle LPG	G20A01-021202	1
112	Oven nozzle NG 1.3	G20A01-021213	1
	Oven nozzle LPG 0.84	G20A01-021242	1
117	thermo-sensor fixed part	G20A01-031100	1