



FFSGS6272-24

NO.	Part Name	Part Code	Qty.
1	Backsplash assembly	G24R10-011500-Z	1
2	Mid burner cup	G20A01-040100	2
3	Mid burner	G20A02-040101	2
4	Mid burner cover	G20A02-040102	2
5	Large burner cup	G20A01-040200	1
6	Large burner	G20A02-040201	1
7	Large burner cover	G20A02-040202	1
8	Small burner cup	G20A01-040000	1
9	Small burner	G20A02-040001	1
10	Small burner cover	G20A02-040002	1
11	Cast iron grates	G24R08-021500	2
12	Cooktop plate	G24R10-020100	1
16	Cooling fan	G36R43-200900	1
19	Re-set switch	C36R05-076200	1
20	Seal mat	G20A01-210500	1
21	Adapter for regulator	G24G02-034200	1
22	Regulator	G20C01-034002	1
24	24" main gas pipe	G24R10-030700	1
25	Oven thermocouple	G20C01-072400	1
26	Theromstat	G20C02-030600	1
27	Cooktop valve 0.8	G24F08-030402	1
28	Cooktop valve 0.76	G24F08-030401	2
29	Cooktop valve 0.55	G24F08-030400	1
32	24" Control panel	G24R10-030300	1
33	Press button with lock	G36X07-170200	2
34	Knob for top burners	G20R08-030100	4
35	Knob for thermostat	G20R08-030101	1
36	Knob ring	G36R03-030200	5
37	Strip bar for control panel	G24R08-214500	1
38	Door component assembly	G24R10-100600-Z	1
39	Door hinge	G20G02-110002	2
40	Door inner glass top and down body frame	G24R10-101500	2
41	Door inside glass	G24R10-100500	2
42	Door inner glass left and right body frame	G24R10-101600	2
44	Door insulation board	G24R10-101400	1
45	Door outer glass fix part	G24R10-101700-02	2
46	Door outer glass	G24R10-101100	1
47.1	Door outside stainless steel frame	G24R10-100400	1
47.2	L shape fixed part for door outer glass	G36R03-101200	4
47.3	Straight fixed part for door outer glass	G36R03-101300	2
48	Mat for handle	G36X03-100700	2
49	Handle	G24R08-101900	2
50	Drawer outside plate	G24R10-120100	1
51	Drawer rubber mat	G20A01-120900	4
52	Drawer inside plate	G24R10-120200-04	1

53	Drawer plate	G24C03-120500-02	1
54	Drawer rail	G20A01-120700	2
55	Front plate	G24C01-070102	1
56	Front plate Beam	G24R10-070200	1
57	Strip bar for front panel	G24B01-214500	1
58	Seal bar for front panel	G24G02-071200	1
59	door seal	G24C01-071200	1
60	Cavity right plate	G20A01-070501	1
62	Leg installation plate	G20A01-071100	2
63	Foot	G20C01-071500	4
65	Anti-tip bracket	G20A01-212500	1
66	Oven burner assembly	G20B01-080100	1
67	Oven burner fire board	G20A01-080900	1
68	Spark plug-for oven burner 230mm	G20C01-170502	1
69	24" Tray	G24A01-070700	1
70	Rack	G24C01-071900	2
71	Deep tray	G24E05-070700	1
72	Air fry basket	E24R10-073800	1
73	Back plate	G24C01-070301	1
74	Weight block	E24F01-210202	1
76	Ignition 1 to 2	G20C01-170102-02	1
78	Power cord	G20A07-160105	1
79	Cavity left plate	G20A01-070401	1
80	Side plate	G20C01-071003	2
82	Ignition 1 to 1	G36R03-170101	4
84	baffle plate	G24R08-072000	1
85	Rear connecting plate	G20C01-022000	2
87	Oven lamp	G20C01-180101	1
88	Broil burner assembly	G20C01-090100	1
89	Broil burner fire board	G20C01-090300	1
90	Broil burner infrared radiation net	G20C01-090500	1
91	Spark plug-for grill burner 540mm	G20C01-170500	1
92	Cavity top plate	G24C01-070601	1
96	Nozzle base	G20A01-021100	2
104	Spark plug-for top burner 700mm	G20B01-170402	1
105	Spark plug-for top burner 820mm	G20B01-170405	1
106	Spark plug-for top burner 940mm	G20B01-170404	1
107	Spark plug-for top burner 1000mm	G20B01-170403	1
108	Small NG nozzle 1.12	G20A01-021241	1
108	Small LPG nozzle 0.74	G20A01-021221	1
109	Mid NG nozzle 1.35	G20A01-021225	2
109	Mid LPG nozzle 0.9	G20A01-021203	2
110	Large NG nozzle 1.75	G20A01-021240	1
110	Large LPG nozzle 1.13	G20A01-021239	1
111	Broil nozzle NG 1.24	G20A01-021212	1
111	Broil nozzle LPG 0.8	G20A01-021202	1
112	Oven nozzle NG 1.3	G20A01-021213	1

1128	Oven nozzle LPG 0.84	G20A01-021242	1
117	thermo-sensor fixed part	G20A01-031100	1
119	Roast motor	G20A01-200101	1
121	Roast axis	G24A01-200501	1
122	Roast fork assembly	G20A01-200601	2