



A
B
C
D
E
F
G
H
J
K
L
M

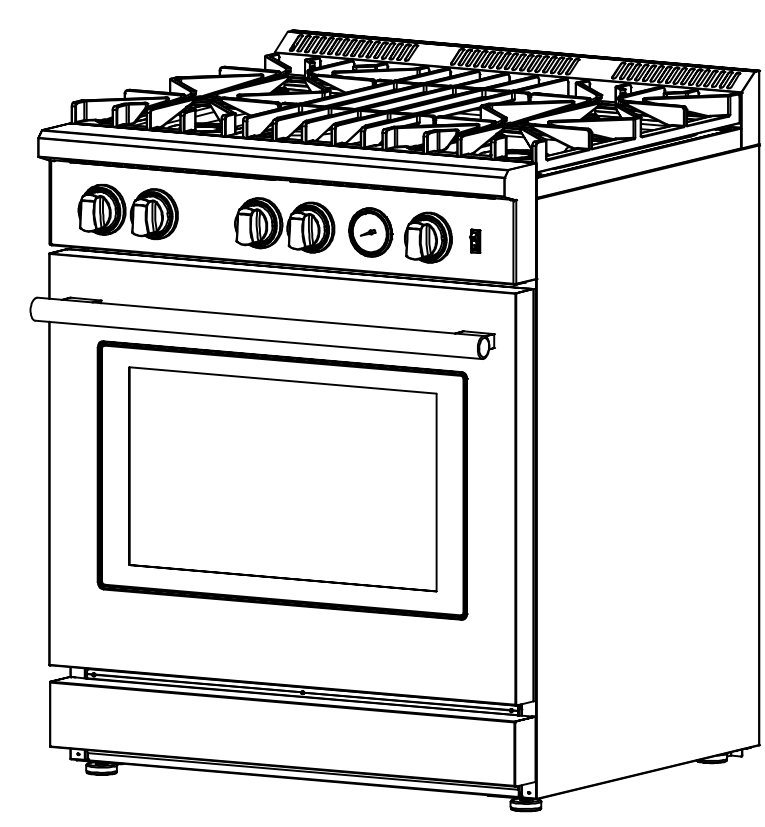


1:10

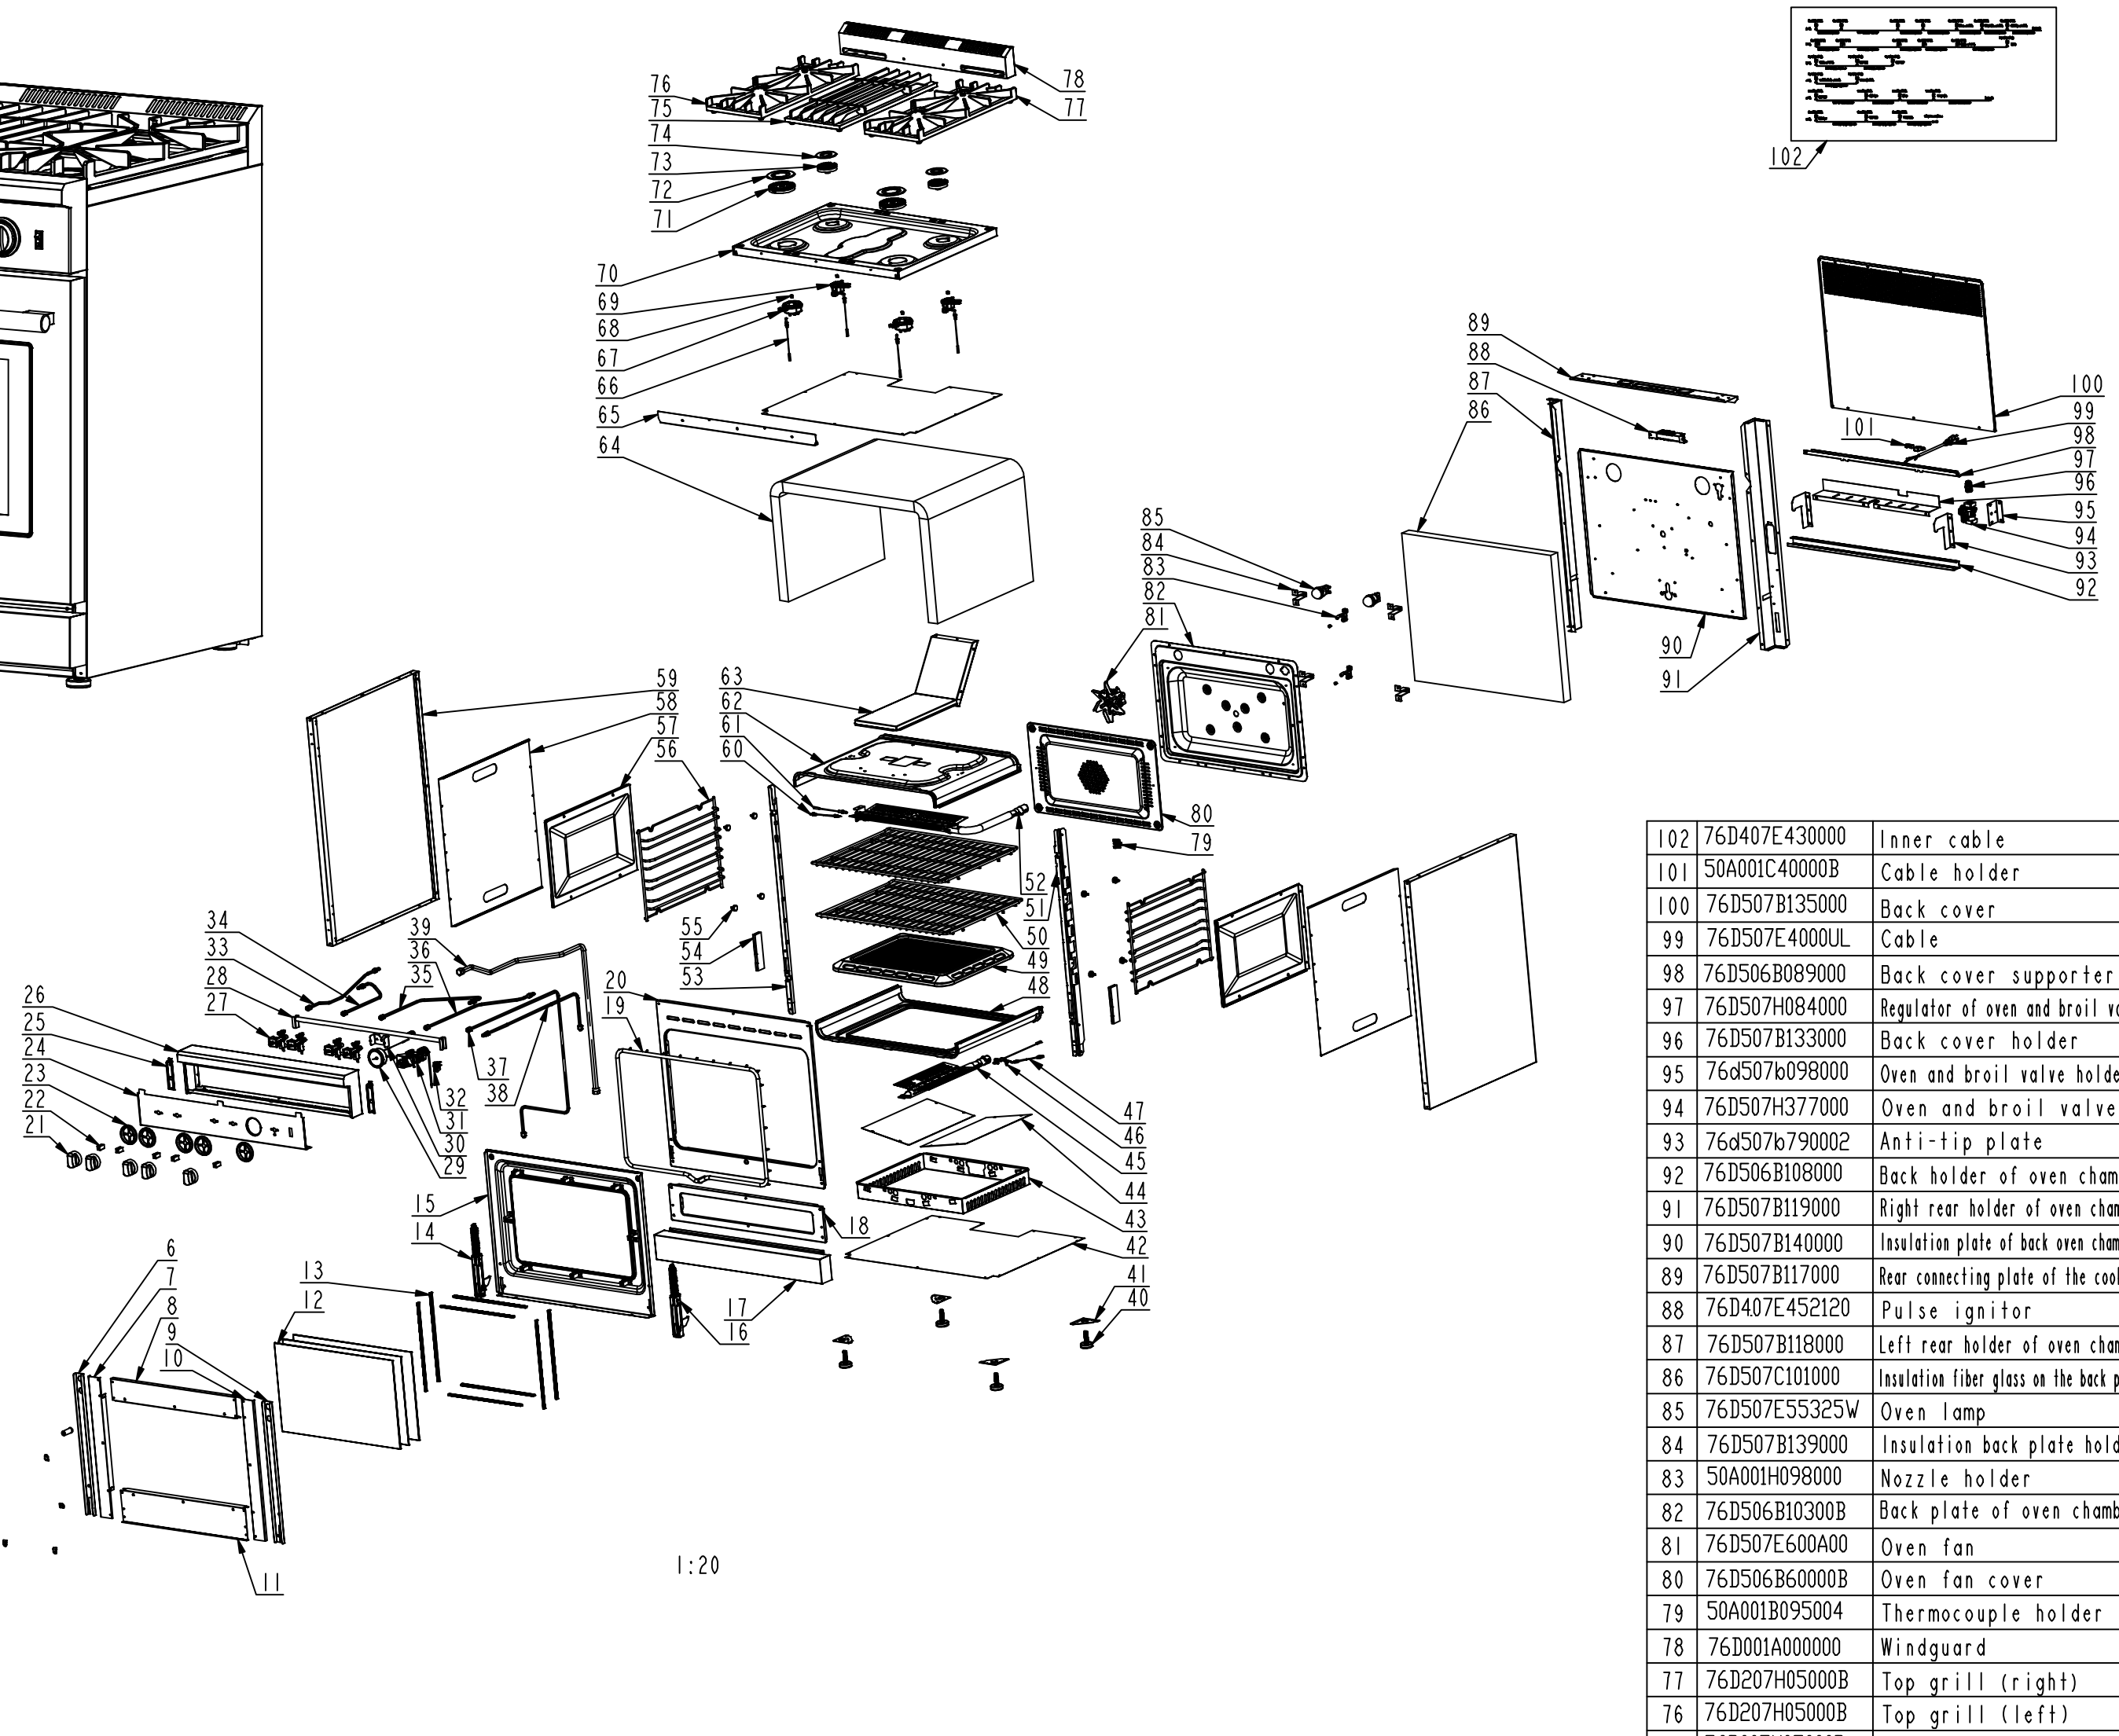

1:20

1. No. 27
"76D01", "*" "76D00", "*" "1".
2. No. 68
"1.45", "*" 145; "1.6", "*" "160".

102	76D407E430000	Inner cable	1	38	76D507H093686	upper burner component	1
101	50A001C40000B	Cable holder	1	37	76D507H092C87	down burner component	1
100	76D507B135000	Back cover	1	36	76D507H091567	gas pipe component-rear right	1
99	76D507E4000UL	Cable	1	35	76D507H090581	gas pipe component-front right	1
98	76D506B089000	Back cover supporter	1	34	76D507H085356	gas pipe component-front left	1
97	76D507H084000	Regulator of oven and broil valve	1	33	76D507H086421	gas pipe component-rear left	1
96	76D507B133000	Back cover holder	1	32	50A001E551000	switch	1
95	76d507b098000	Oven and broil valve holder	1	31	76D001G083000	thermostat valve	1
94	76D507H377000	Oven and broil valve	1	30	76D507B093002	Temperature gauge holder	1
93	76d507b790002	Anti-tip plate	2	29	76D507E095004	Temperature gauge	1
92	76D506B108000	Back holder of oven chamber	1	28	76D407H080000	main gas tube	1
91	76D507B119000	Right rear holder of oven chamber	1	27	76D507G08000*	Valve of rapid and semirapid burner	4
90	76D507B140000	Insulation plate of back oven chamber	1	26	76D507A061002	Holder of control panel	1
89	76D507B117000	Rear connecting plate of the cooktop	1	25	76D507B081000	Connecting plate of control panel	2
88	76D407E452120	Pulse ignitor	1	24	76D407B080002	control panel	1
87	76D507B118000	Left rear holder of oven chamber	1	23	76D507C081004	knob base	5
86	76D507C101000	Insulation fiber glass on the back plate	1	22	76D507C083000	Knob spring	5
85	76D507E55325W	Oven lamp	2	21	76D507C080000	knob	5
84	76D507B139000	Insulation back plate holder	4	20	76D506B10000B	Front panel of oven chamber	1
83	50A001H098000	Nozzle holder	2	19	76D001C102L90	door seal	1
82	76D506B10300B	Back plate of oven chamber	1	18	76D507B30500B	Drawer fixed panel	1
81	76D507E600A00	Oven fan	1	17	76D507B330002	decorative plate	1
80	76D506B60000B	Oven fan cover	1	16	76D407A186000	Right door hinge	1
79	50A001B095004	Thermocouple holder	1	15	76D407A18400B	door panel welding assembly	1
78	76D001A000000	Windguard	1	14	76D407A185000	Left door hinge	1
77	76D207H05000B	Top grill (right)	1	13	50A001C18000B	glass seal	8
76	76D207H05000B	Top grill (left)	1	12	76D507D180000	inner oven door glass	3
75	76D007H05000B	Top grill (middle)	1	11	76D507B188000	inner door glass down stator	1
74	76D001G065000	Semirapid burner cap	2	10	76D507B186000	inner door glass right stator	1
73	76D001G061000	Semirapid burner base	2	9	76D507B184000	Door inner pane supporter (right side)	1
72	76D001G066000	Rapid burner cap	2	8	76D507B187000	inner door glass up stator	1
71	76D001G062000	Rapid burner base	2	7	76D507B185000	inner door glass left stator	1
70	76D407B05000B	top plate	1	6	76D507B183000	Door inner pane supporter (left side)	1
69	76D001G056000	Semirapid burner cup	2	5	76D507C18600B	door handle holder	2
68	50A001G059***	Nozzle	6	4	K50C19A1DB00	Inner door glass holer	8
67	76D001G057000	Rapid burner cup	2	3	76D507D181000	oven door outer glass	1
66	76D507E458B10	Ignition pin of cooktop burners	4	2	76D407B180002	Door panel	1
65	76D506B064000	Font fixed holer of cooktop	1	1	76D407A182670	handle sets	1
No.	Part Name		Qty.	No.	Part Name		Qty.
	A2			Model	76D407	76D407A00E000	
	mm	3:50				76D407A00E	

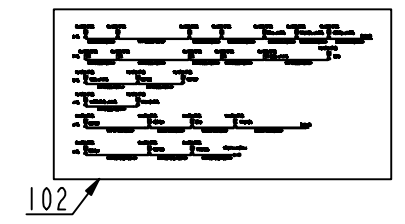

102

