

36" Range Door and Riser Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787624	Strip, Filler (Island Trim)
2	714589	Ring, Retaining
3	719287	Pin, Door Hinge
4	802808	Hinge, Door Stiffener Support Assy Lh
5	*Special Order	Order, Call Factory Parts Department
		Door, Oven Assy, 36"
6	767835	Panel, Back 36" Range
7	730228	Screw, #10-24 x 1/2"
8	767665	Liner, Door Assy 36" (See SN Breaks)
	802811	Liner, Door Assy 36" (See SN Breaks)
9	720814	Window, Oven Door Lg.
10	723296	Clip, Oven Glass Retainer
11	722328	Glass, Oven Door
12	800636	36" Door Insulation
13	802807	Hinge, Door Stiffener Support Assy Rh
14	800636	36" Door Insulation
15	730141	Screw, 1/4-20" x 1/2"
16	730308	Washer, Lock 1/4
17	787592	Channel Door Spacer
18	730239	Screw, #8 x 3/8"
19	767664	Skin, Door SS, 36" Range
	800984	Skin, Door SS, 36" Range (See SN Breaks)
	767663	Skin, Door Black, 36" Range
20	719628	Bracket, Belly Bar Rh
21	719627	Bracket, Belly Bar Lh
22	720838	Handle, Oven Door, 36" Range
23	800925	Logo, Wolf, Large
24	730509	Clip, Tinnerman
25	730335	Washer, Lock #10
26	730028	Screw, #10-24 x 1"
27	722424	Trim, J Oven Window Lg.
28	803865	Spacer, Door 36" Range

NOTE: Door and door components prior to serial number 17000000. See page 20 & 21 for door and door components starting with serial number 17000000.

Not Shown

806660	Riser 5-R36
800016	Riser 10-R36
800020	Riser 20-R36

36" Range Door and Riser View

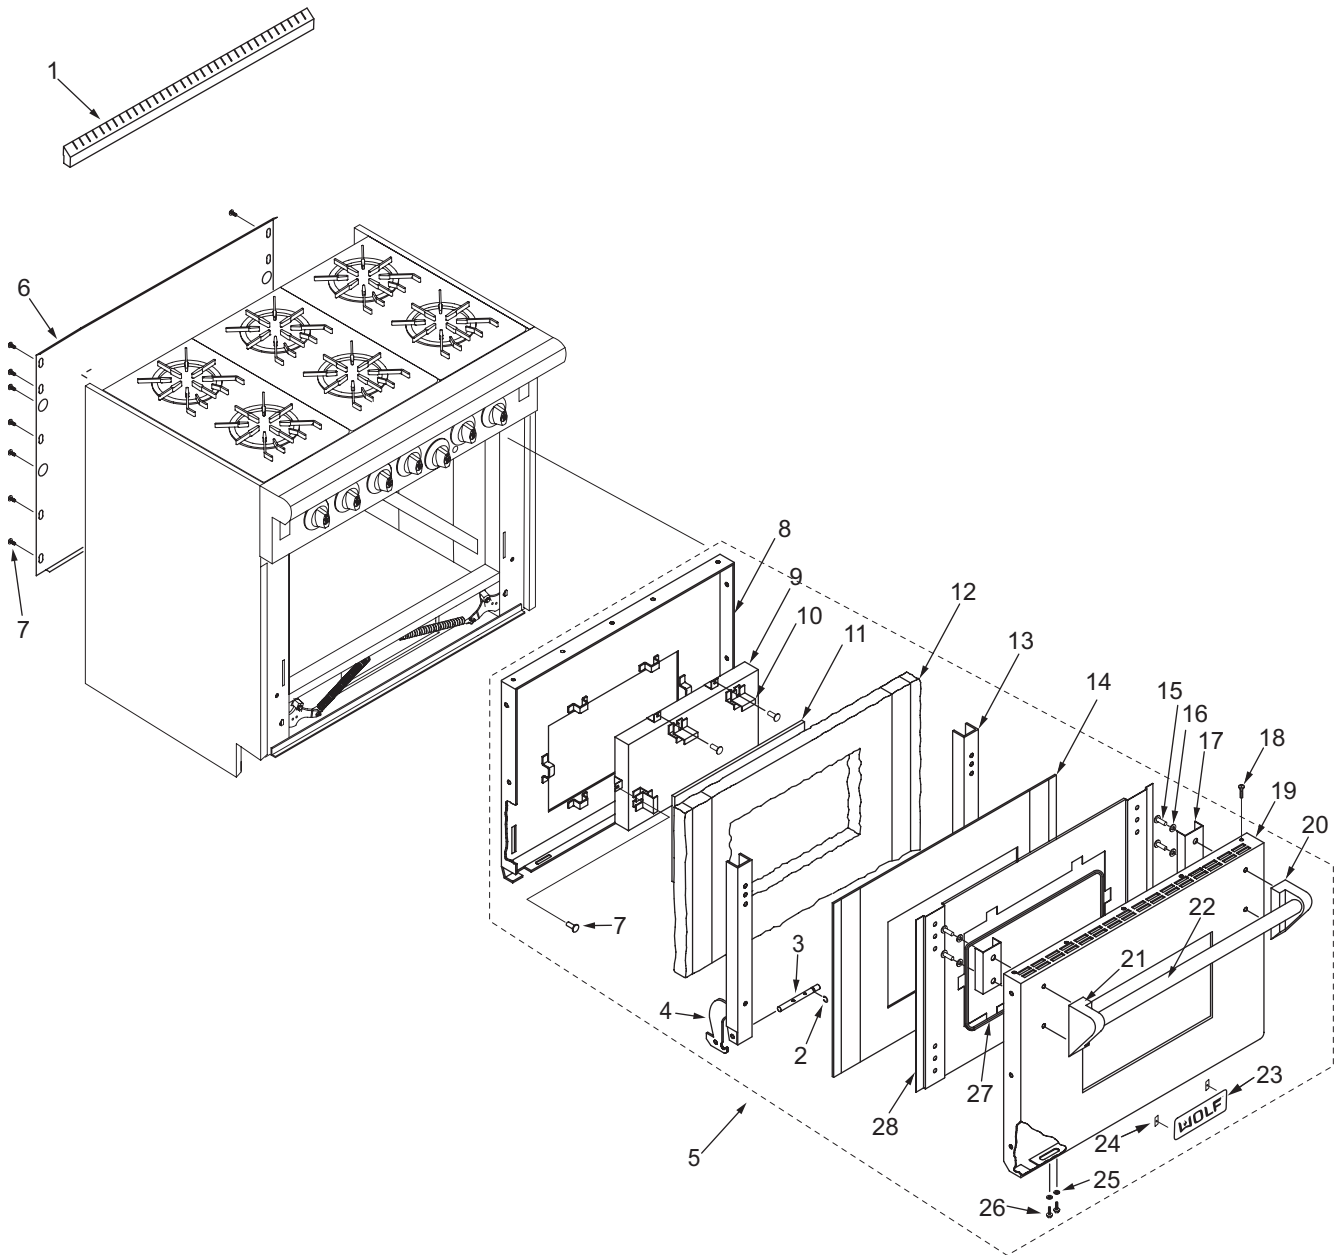


36" Range Door Parts List (Starting with Serial Number 17000000)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		*Special Order, Call Factory Parts Department Door, Oven Assy, 36" Door Assy. SS
2	809662	Liner, 36" Door-Range, SVCE
3	809637	Hinge Hydraulic, SVCE
4	809658	Hinge, Spring, 36"SVCE
5	809667	Clip, Oven Glass Retainer, SVCE
6	730228	Screw, #10-24 x 1/2"
7	809651	Window, Oven Door Large, SVCE
8	809664	Glass, Oven Door, Large, SVCE
9	809661	Insulation, Blkt, 36", SVCE
10	809639	Bracket Assy, End Cap, Range, SVCE
11	730141	Screw, 1/4-20" x 1/2"
12	809640	Handle End Cap, Right, SVCE
13	809641	Handle End Cap, Left, SVCE
14	804396	8-32x .375 Set Screw
15	809659	Handle Bar, 36", SVCE
16	800925	Logo, Wolf, Large
17	809656	Door, Skin - 36" Logo Assy, SVCE
18	809663	J-Trim, Oven Window Lg, SVCE
19	809660	Baffle, 36" Door - Range SVCE
20	803273	Pin, Pilot
21	809373	Retainer, Hinge, SVCE
22	730239	Screw, #8x3/8"
23	803372	#10-16 X 1/2" Screw CR Truss HD
	804789	Washer, Fiber
24	801541	8-18 X 1/2" Screw TYPE B H/W/HD

NOTE: Door and door components starting with serial number 17000000. See page 18 & 19 for door and door components prior to serial number 17000000.

36" Range Door View (Starting with Serial Number 17000000)

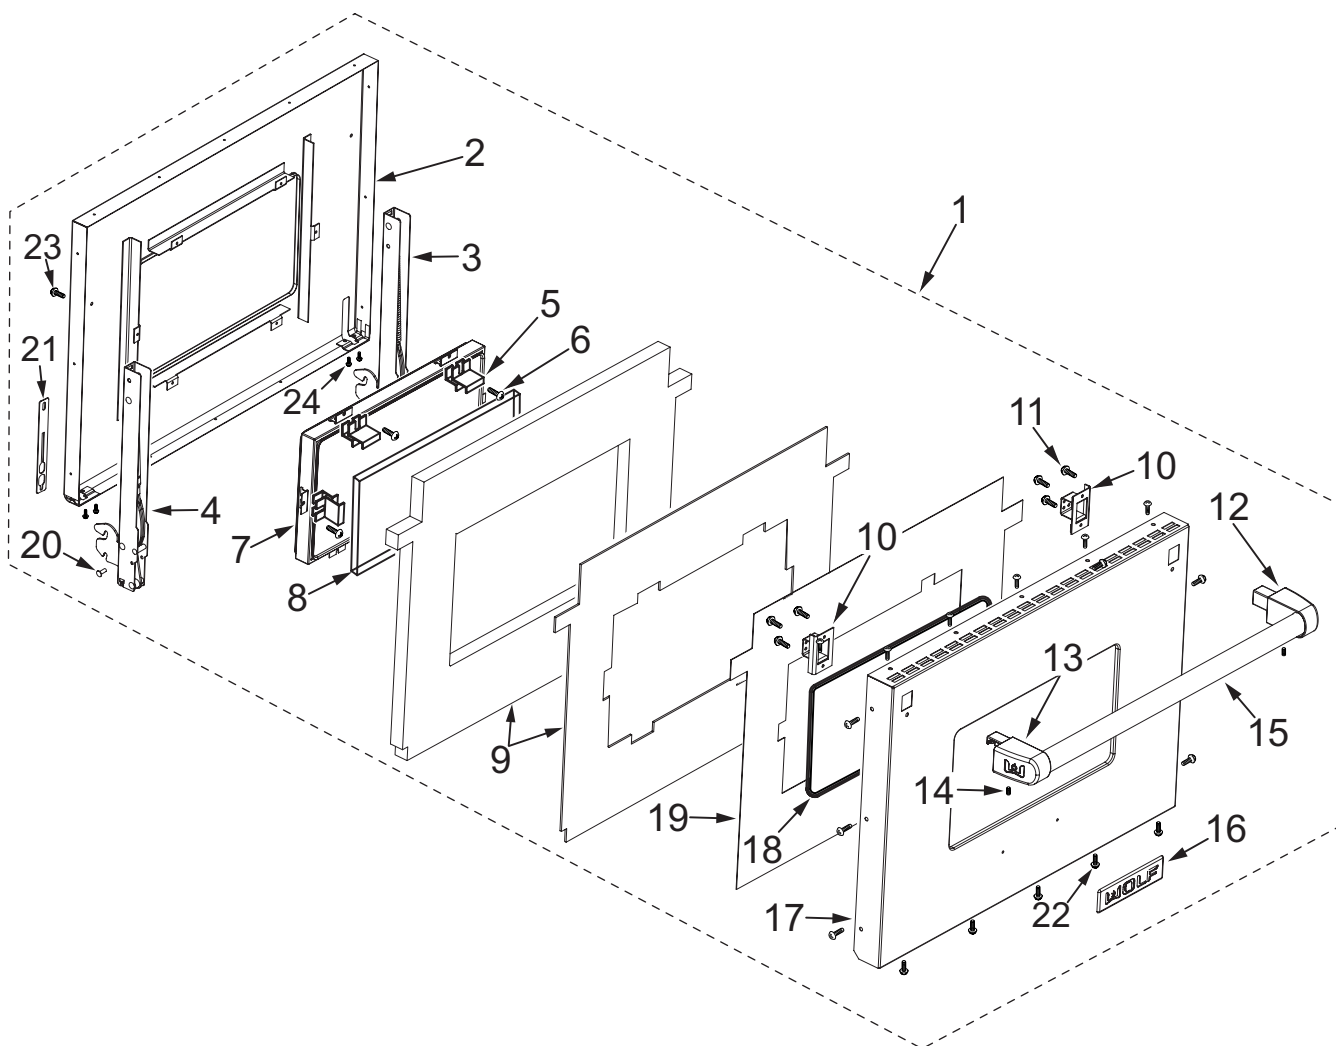

36" Range Dress Panels Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787306	Panel, Outer RH, SS 30/36" Range
	787308	Panel, Outer RH, Blk 30/36" Range
2	786714	Pan, Grease SS W/O Dimples
	801687	Pan, Grease W/Dimples
3	768259	Baffle, Roll Front 36" Range
4	801922	Roll Front
5	730228	Screw #10-24 x 1/2" Phillips
6	807587	Skirt, Front SS, 36" Range
	767668	Skirt, Front Black, 30" Range
7	809367	Panel, Lower Front, SS
	767645	Panel, Lower Front, Black 3
8	788028	Pan, Drip Assy. (See SN Breaks)
	801361	Drip Tray, 36" (See SN Breaks)
9	719711	Arm, Rocker RH
10	766547*	Bracket, Door Switch
	809377**	Bracket, Door Switch
11	809365	Switch, Door Interlock
12	730228	Screw 10-24 X 1/2" Phillips Head
13	730535*	Nut, 6-32 Lock
14	730506*	Nut, Oversize
15	719331*	Bolt, Eye 1/4-20 x 3"
16	718361*	Spring, Door
17	768260*	Angle, Switch
18	719710*	Arm, Rocker, LH
19	719344*	Hook, "S", Oven Door
20	719350*	Pin, Clevis, 3/8 x 2"
21	730410*	Pin, Cotter, 3/32" x 1-1/4"
22	730310*	Washer
23	787307	Panel, Outer LH, SS 30/36" Range
	787309	Panel, Outer LH, Blk 30/36" Range
24	767622	Channel, Front, 36" Range
25	767623	Channel, Rear, 36" Range
26	714369	Bushing, Snap 1/2"
27	722270	Rivet, Pop 3/16"

Not Shown

801256	Slide, Drip Tray, Lh
801257	Slide, Drip Tray, Rh

* - Prior to Serial Number (PTS) 17000000
 ** - Starting with Serial Number (SWS) 17000000

36" Range Dress Panels View

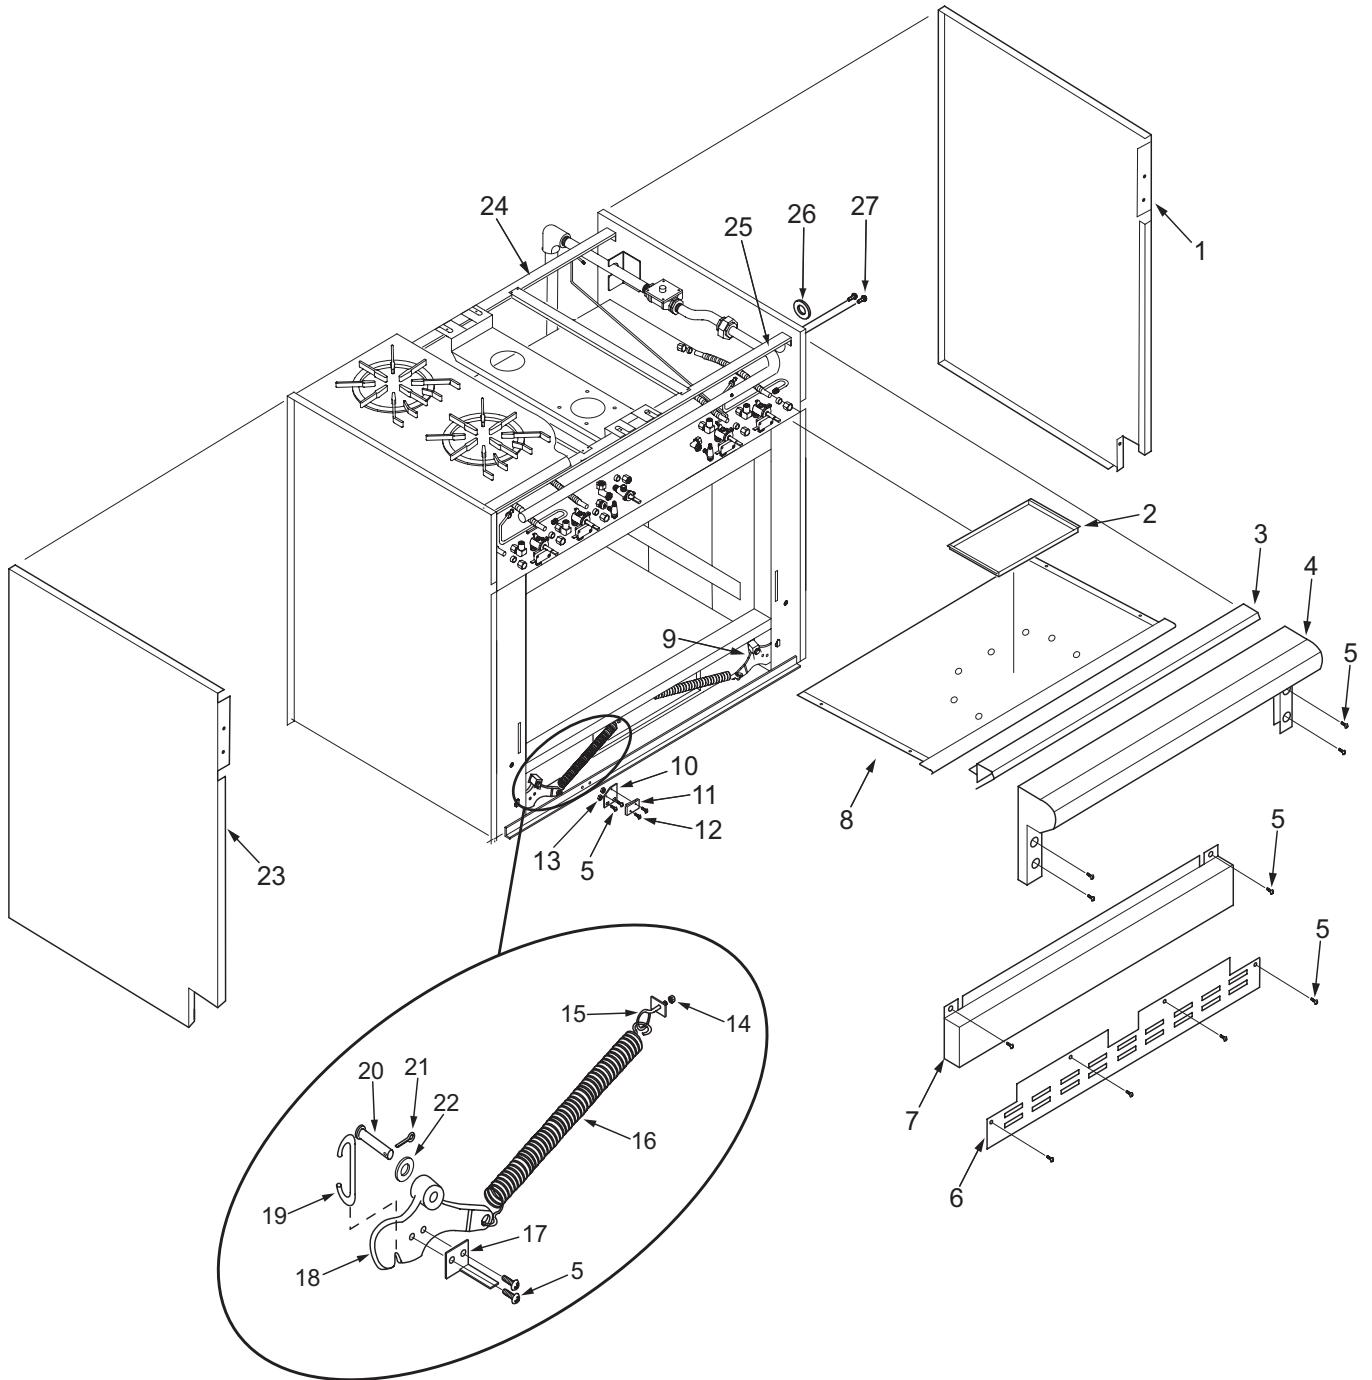

36" Range Top Parts List


Ref #	Part #	Description	Ref #	Part #	Description	
1	720829	Grate, Spider (See SN Breaks)	30	809183	Burner, Infrared Assy, Griddle/Char	
	809099	Grate, Spider (See SN Breaks)	31	800048	Orifice, IR Charbroiler, Natural Gas	
2	722421	Grate Foot Pad (See SN Breaks)		800050	Orifice, IR Charbroiler, LP Gas	
3	722422	Washer, Silicone, Spider Grate (See SN Breaks)	32	800258	Elbow, 3/8" x 3/8"	
			33	786978	Baffle, Burner Front	
4	800041	Burner, Inner Head, Black Enamel	34	786129	Spacer, IR Burner	
	720801	Burner, Inner Head, Plated	35	786029	Bracket, Sparker	
5	720887	Base, Inner Burner (See SN Breaks)	36	714415	Sparker	
	800044	Burner, Inner Base, Black Enamel (See SN Breaks)	37	801265	Single Griddle Cover Kit - 11" Griddle (See SN Breaks)	
				809311	Griddle Cover - 11" New Style Griddle	
6	720803	Burner, Outer (See SN Breaks)		801266	Double Griddle Cover Kit - 22" Griddle Old Style Griddle Cover & BackSplash (See SN Breaks)	
	801150	Cap, Burner, Outer Head, Black Enamel		809312	Griddle Cover - 22" New Style (See SN Breaks)	
7	720802	Ring, Cross (See SN Breaks)		802508	Griddle Assembly, 11"	
	801151	Ring, Burner, Inner Base, Black Enamel	38	802509	Griddle Assembly, 22"	
8	803965	Burner Ring/Cap, Service Package		800067	Seal, Griddle, 20"	
9	766446	Top, Pressed Stl Porc (See SN Breaks)	39	800066	Seal, Griddle, 9"	
	805519	Top, Pressed Steel (See SN Breaks)	40	800048	Orifice, IR Charbroiler, Natural Gas	
			41	800050	Orifice, IR Charbroiler, LP Gas	
10	801149	Burner, Body Assy	42	786127	Baffle, Griddle	
11	806483	Service Components, Electrode	43	803168	Flex Tubing Service Package 3/8" x 18"	
12	722162	Screw, Phillips Head		44	770093	Valve, Solenoid (Coil Only)
13	807864	Holder, Jet Assembly		45	730229	Screw #10-24 x 1-1/2"
14	720886	Venturi		46	719376	Elbow, Brass 3/8"
15	730228	Screw #10-24 x 1/2"		719377	Fitting, Straight 3/8"	
16	800882	Orifice, Inner Burner, Natural Gas	47	804404	Holder, Single Solenoid	
	800052	Orifice, Inner Burner, LP Gas		756302	Holder, Double Solenoid	
17	720900	Fitting, Inner Orifice	48	803167	Flex Tubing Service Package 3/8" x 12"	
18	807598	Spring		49	807622	Valve, Single Solenoid, w/fittings
19	720822	Ring		807623	Valve, Double Solenoid, w/fittings	
20	719566	Sleeve, 1/4" Fiberglass		50	804230	Grate, Wok, (See SN Breaks)
21	800872	Orifice, Outer Burner, Natural Gas		51	800146	S Grate, Rear (See SN Breaks)
	800051	Orifice, Outer Burner, LP Gas		804229	S Grate, Rear (See SN Breaks)	
22	767615	Panel, Burner Support		52	800137	S Grate, Front (See SN Breaks)
23	809019	Burner Assembly - Also need to order # 806483		804228	S Grate, Front (See SN Breaks)	
24	762215	Back Splash, Decorative		53	800010	S Grate Spacer (See SN Breaks)
25	759715	Cover, Charbroiler/Griddle, 11"		54	804711	Shield, Charbroiler Electrode
26	803581	Rack - Charbroiler Assy				
27	769593	Frame, Charbroiler				
28	722631	Screen, Reverberator				
29	762444	Plate, Blank Off				

Not Shown


722218	Hook, Porcelain Top Remover
767627	Spacer, Burner Support
807066	Shield, Rubber - Electrode

36" Range Top View



Surface Burner

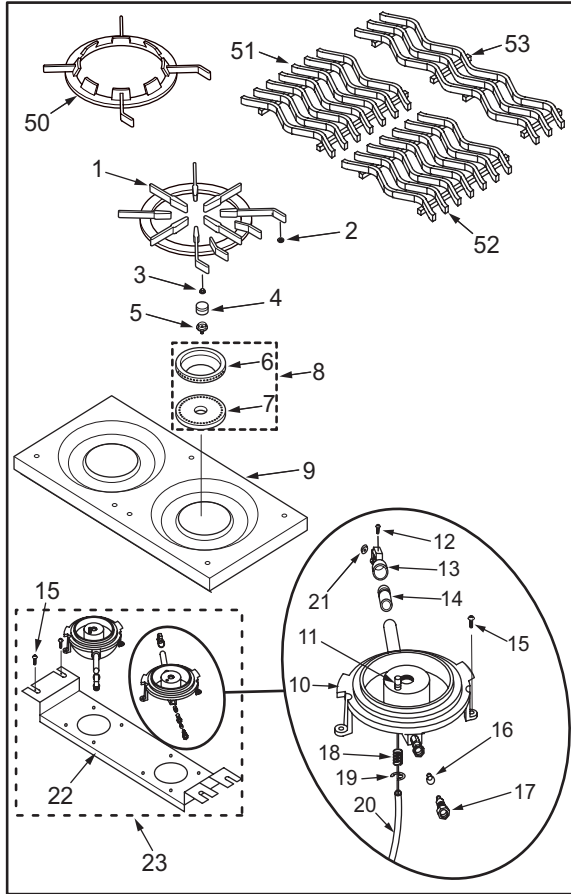

IR Charbroiler

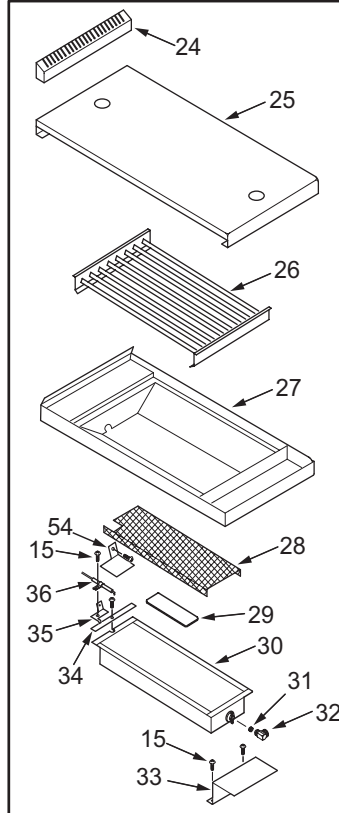

IR Griddle

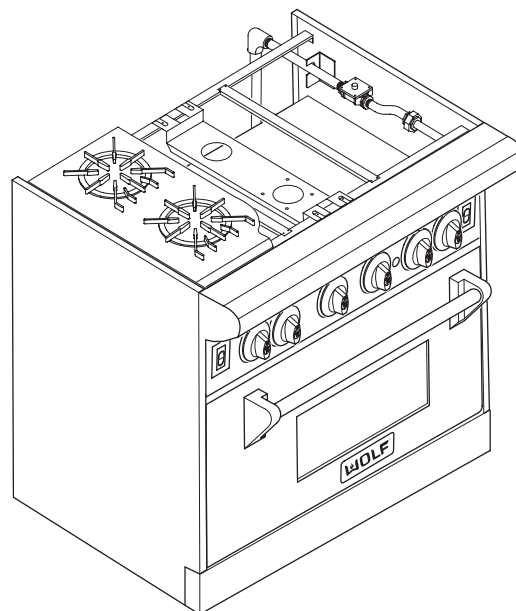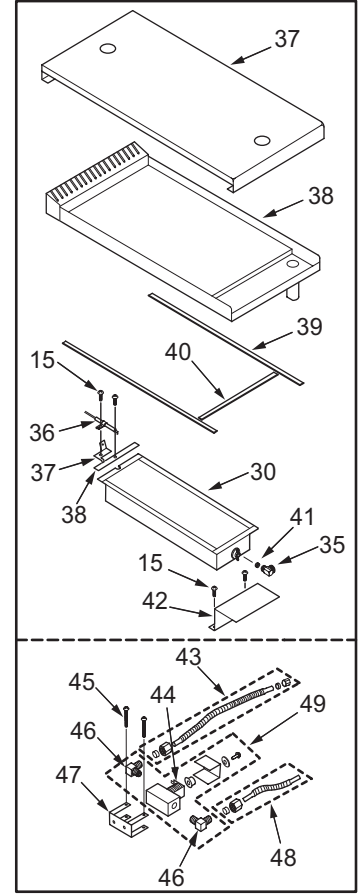

36" Range Front Panel Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>	<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	767670	Baffle, Broiler Range	19	801346	Bezel, Front (See SN Breaks)
2	722282	Seal, Door Top (See SN Break)	20	801347	Bezel, Rear (See SN Break)
	803810	Gasket, Door 36" (See SN Break)	21	720017	Light, Indicator, Red, Oven
3	720692	Seal, Door Side (See SN Break)	22	720816	Switch, Oven Light
	803810	Gasket, Door 36" (See SN Break)	23	722564	Shield, Switch Terminal
4	730513	Nut, Hex Head	24	715142	Terminal, Command Dummy
5	730311	Washer, Lock	25	730239	Screw #8-32 x 3/8"
6	718195*	Bolt, Trunion	26	722713	Label, Light Switch
	803579*	Bolt, Trunion, Offset	27	721017	Knob, Charbroiler Red (See SN Breaks)
	730310*	Washer, Trunion Shim			Knob, Char/French Top, Red (See SN Breaks)
7	722283	Seal, Door Bottom (See SN Break)		801306	Knob, Char/French Top, Black (See SN Breaks)
	803810	Gasket, Door 36" (See SN Break)		721018	Knob, Charboiler, Black (See SN Breaks)
8	730228	Screw #10-24 x 1/2"		801307	Knob, Char/French Top, Black (See SN Breaks)
9	721013	Leg, Range, 3"	28	767642	Panel, Front, R364C - Also need to order # 722712 and # 722713 (See SN Breaks)
10	803436	Caster, Dual Wheel, 2"		801079	Panel, Front, R364C (See SN Breaks) - Also need to order # 722712 and # 722713
11	714902	Thermostat, Oven	29	805787	Thermostat, Griddle
12	767656	Panel, Front, R366 (See SN Breaks) - Also need to order # 722712 and # 722713	30	767660	Panel, Front, R364G (See SN Breaks) - Also need to order # 722712 and # 722713
	801080	Panel, Front, R366 (See SN Breaks) - Also need to order # 722712 and # 722713		801081	Panel, Front, R364G (See SN Breaks) - Also need to order # 722712 and # 722713
13	722712	Label, Fan Switch	31	721014	Knob, Thermostat W/Griddle, Red (See SN Breaks)
14	720815	Switch, Oven Fan		801310	Knob, Griddle Thermostat, Red (See SN Breaks)
15	720879	Knob, Control, Red (See SN Breaks)		721015	Knob, Thermostat W/Griddle, Black (See SN Breaks)
	801312	Knob, Surface Burner Valve, Red (See SN Breaks)		801311	Knob, Griddle Thermostat, Black (See SN Breaks)
	720880	Knob, Control, Black (See SN Breaks)			
	801313	Knob, Surface Burner Valve, Red (See SN Breaks)			
16	718146	Bezel, Thermostat (See SN Breaks)			
	801348	Bezel, w/Tick Mark (See SN Breaks)			
17	720818	Knob, Oven Thermostat, Red (See SN Breaks)			
	801308	Knob, Oven Therm, W/Broil, Red (See SN Breaks)			
	720819	Knob, Oven Thermostat, Black (See SN Breaks)			
	801309	Knob, Oven Therm, W/Broil, Black (See SN Breaks)			
18	730076	Screw #6-32 x 1/4"			

* - Prior to Serial Number (PTS) 17000000
 ** - Starting with Serial Number (SWS) 17000000

Not Shown

803239 Wrench, Caster Adjusting

36" Range Front Panel View

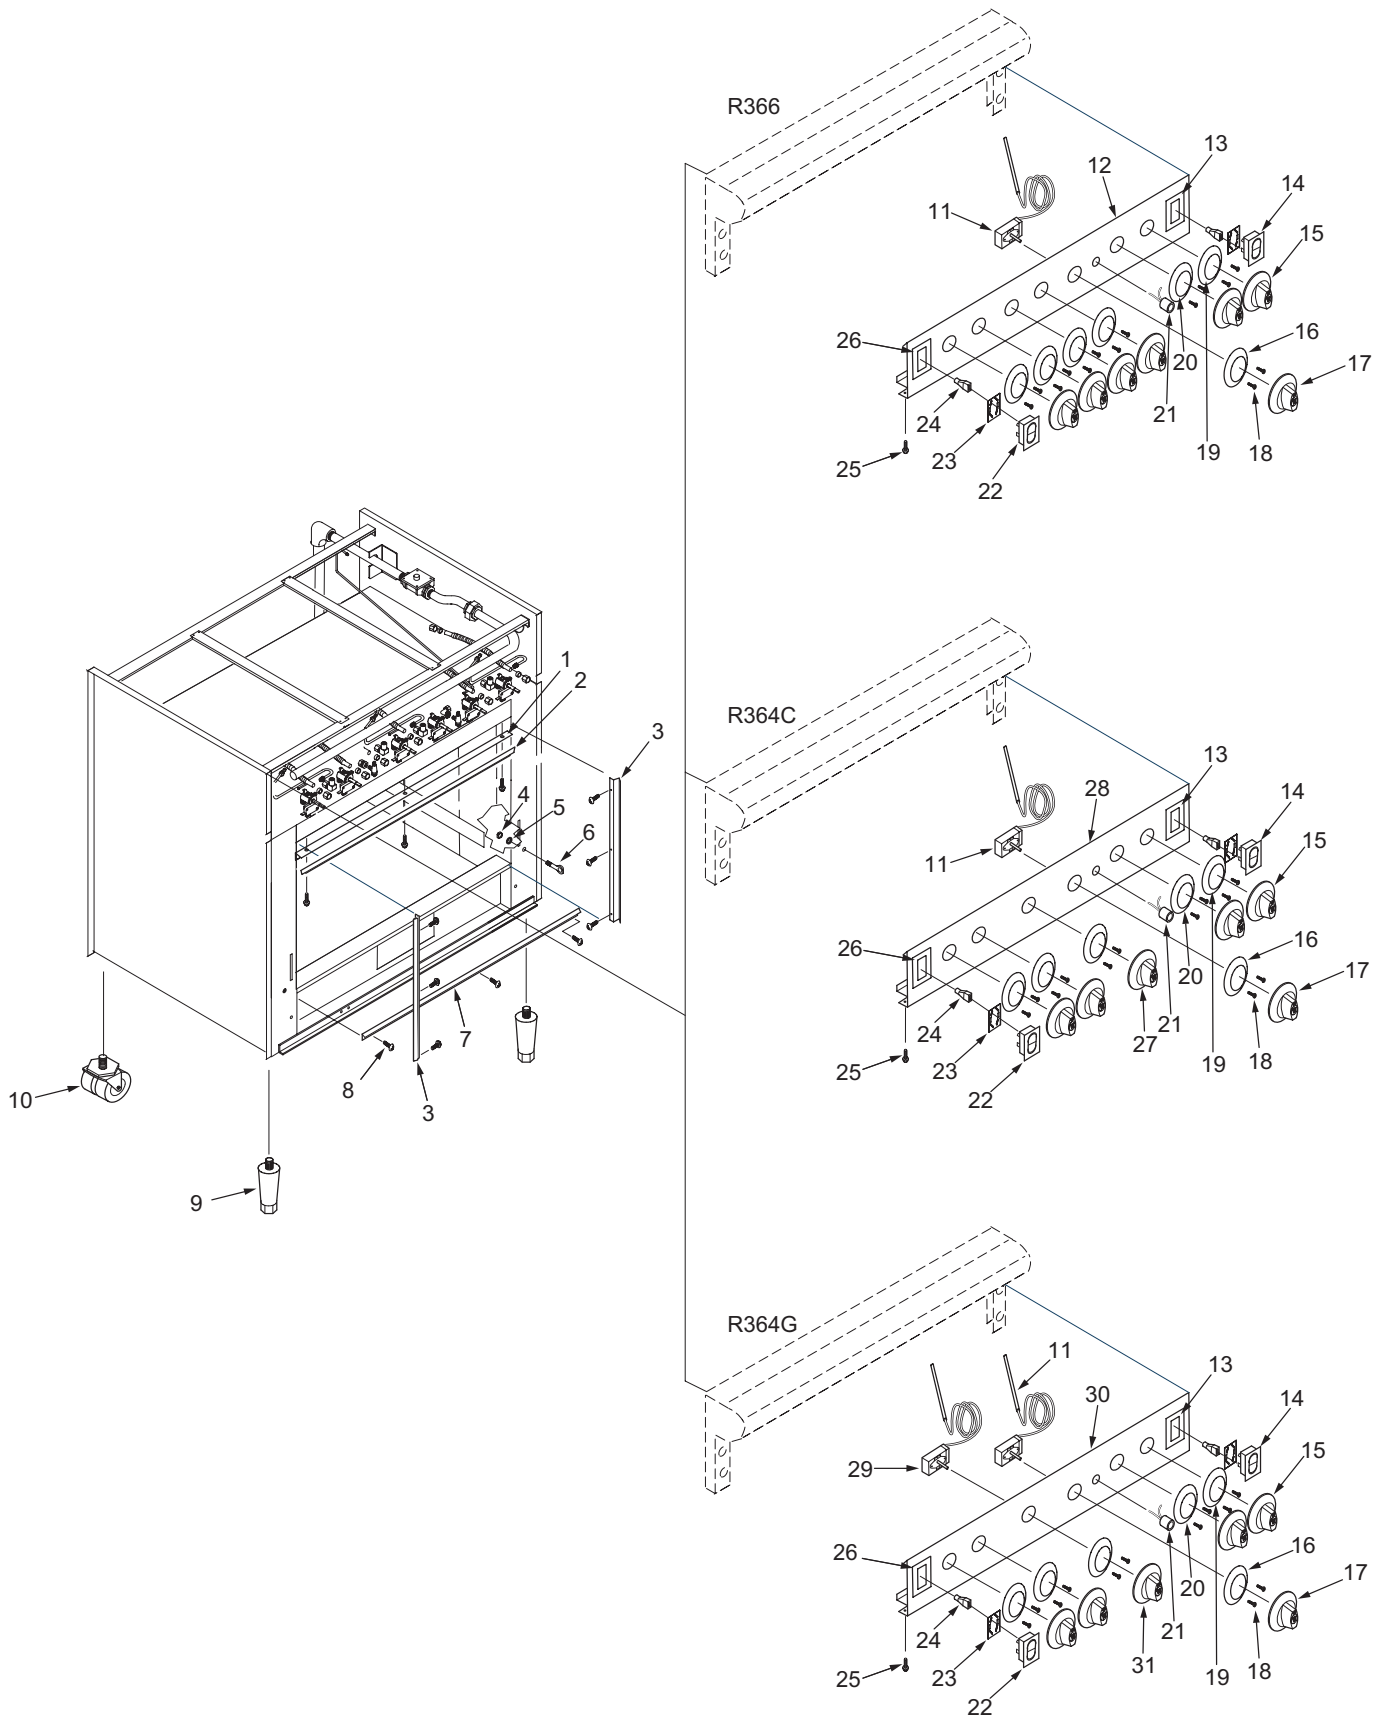


36" Range Manifold Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803171	Flex Tubing Service Package 5/16" x 14"
2	807667	Ferrule, Sleeve Brass
3	807677	Nut, Compress Brass
4	801937	Flex Tubing Service Package 3/16 x 27"
5	803172	Flex Tubing Service Package 3/8" x 42"
6	714361	Connector, 3/8"
7	722133	Screw, Hex Head
8	720885	Bracket, Valve Mounting
9	807665	Ferrule, 3/16"
10	720888	Fitting, 3/16"
11	723350	Regulator,, Pressure Convertible 3/4"
	801358	Regulator, 1/2" Convertible
12	722832	Pipe, Offset
13	719033	Union, 1/2" Black
14	804418	Manifold (R366)
15	719370	Plug, Hex Head, 1/8"
16	801936	Flex Tubing Service Package 3/16" x 16"
17	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
18	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
19	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
20	807141	Valve, Switch
21	803169	Flex Tubing Service Package 3/8" x 48"
22	719393	Elbow, Brass, 3/8"
23	720330	Valve, Shut Off, Oven
24	722278	Elbow, Adapter, Compression
25	807668	Ferrule, 3/16"
26	807678	Nut, 3/8"
27	803167	Flex Tubing Service Package 3/8" x 12"
28	722413	Valve, Brass
29	713810	Switch, Valve Ignition
30	804418	Manifold (R366)
	805655	Manifold (R364C)
	805654	Manifold R364G)
31	714296	Tee
32	803168	Flex Tubing Service Package 3/8" x 18"
33	786977	Shield, Corner Wire

Not Shown

806378	Wiring Harness, Manifold, R366
806379	Wiring Harness, Rear, R366
806380	Wiring Harness, Manifold, R34C
806381	Wiring Harness, Rear, R34C
806382	Wiring Harness, Manifold, R364G
806383	Wiring Harness, Rear, R364G
807099	Harness Rpl Component, R366
807100	Harness Rpl Component, R364C
807101	Harness Rpl Component, R364G


36" Range Manifold View

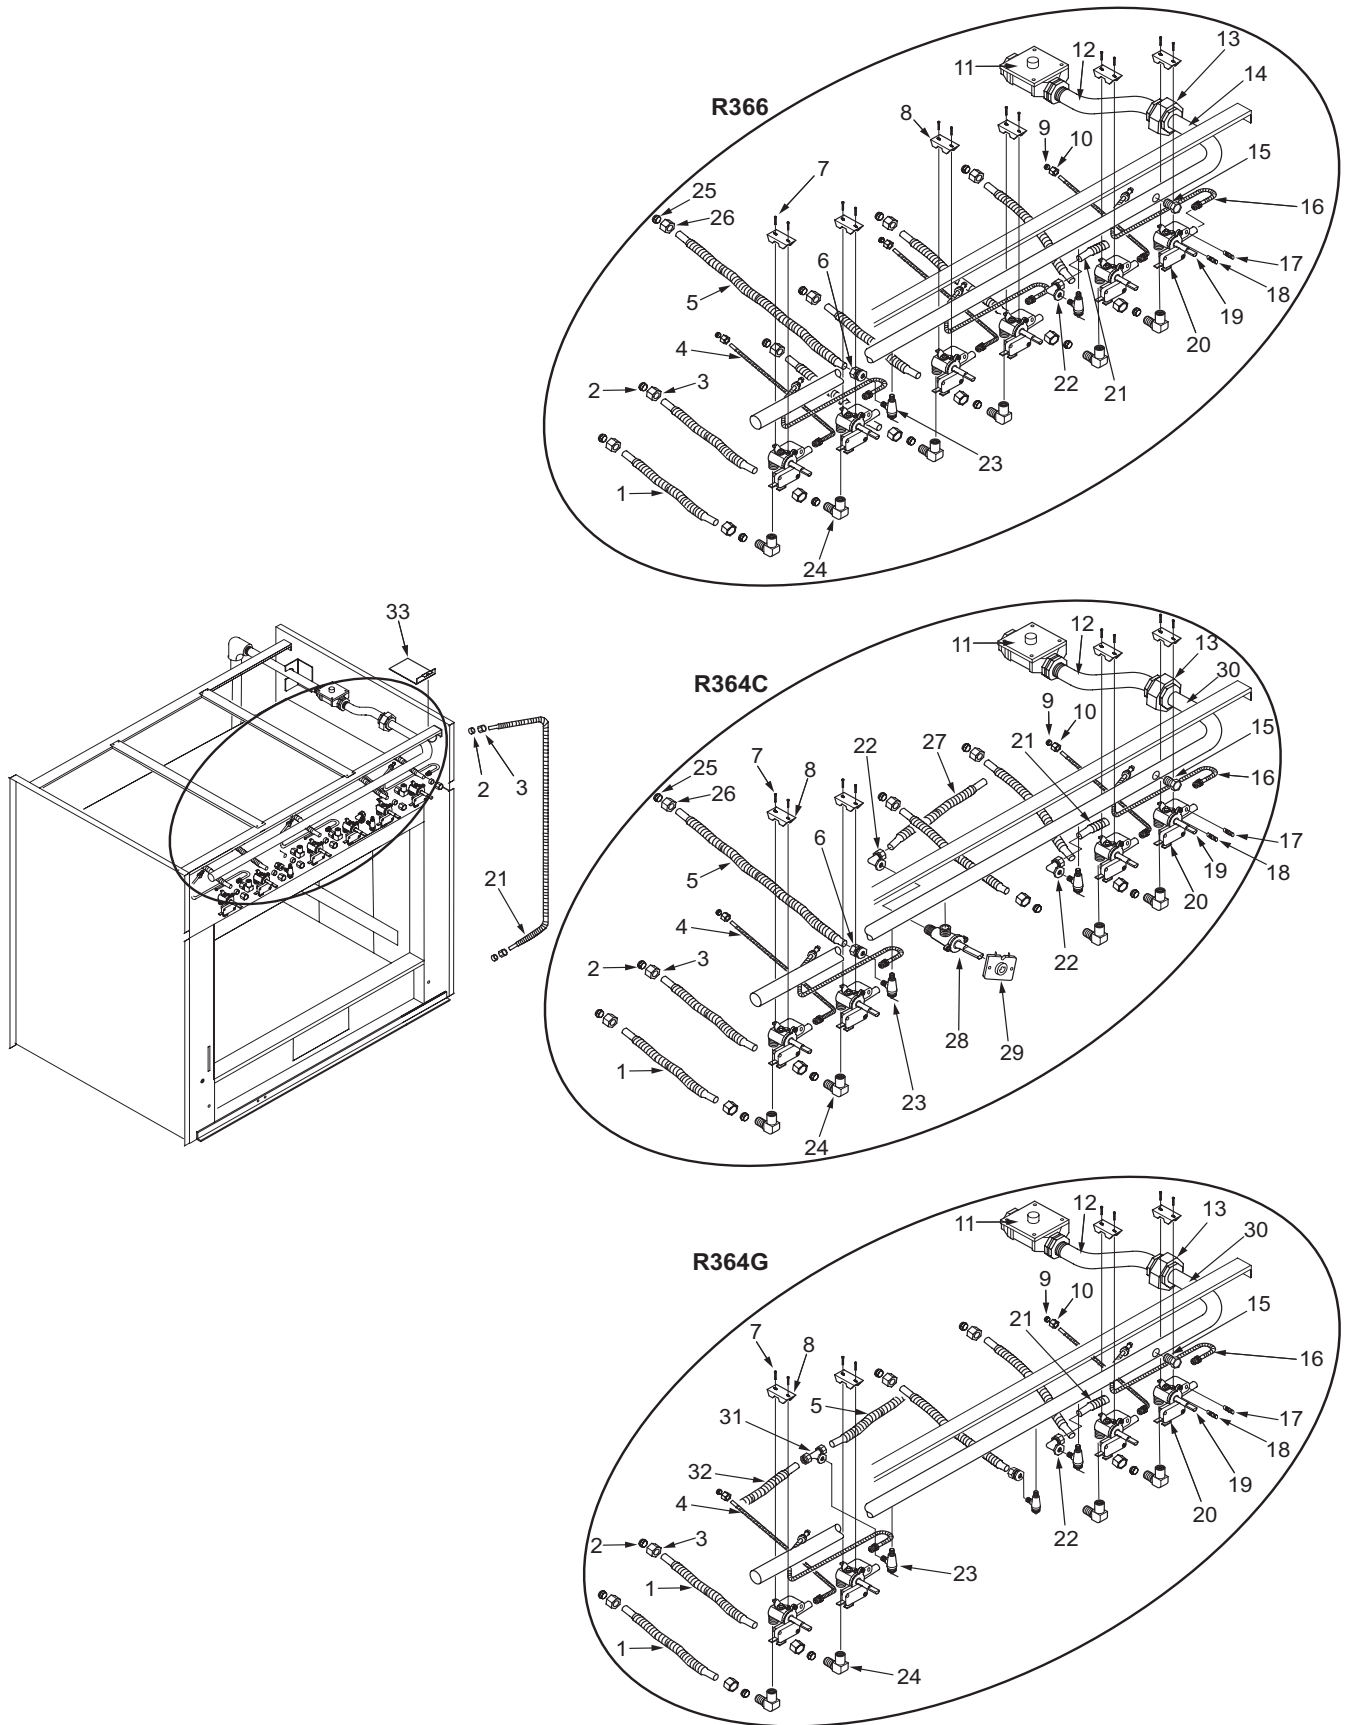

36" Range Oven Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	720761	Burner, Infrared Oven
2	766479	Bracket, Burner Left/Right
3	766592	Bracket, Burner Front/Rear
4	730228	Screw, #10-24 x 1/2"
5	766499	Bracket, Igniter, IR Range
6	723060	Igniter, Hot Surface
7	801690	Cover, Igniter Shield, Range
8	730230	Screw #8-32 x 3/8"
9	806873	Thermo Bulb Housing Assembly
10	806873	Thermo Bulb Housing Assembly
11	800120	Oven Deflector Rest
12	718601	Igniter, Norton
13	720696	Lamp, Oven Assembly
14	342766	Lamp, Oven 40w, 120v
15	720830	Lens
16	715221	Motor, Fan Oven
17	766451	Plug, Motor Mount
18	800628	Blade, Convection Fan
19	730229	Screw, #10-24 x 1-1/2"
20	766456	Cover, Blower Oven
21	720841	Rack, Oven 36" Range
22	714502	Pan, Broiler
23	766420	Deflector, Oven Bottom Range
24	767626	Panel, Oven Bottom 36" (See SN Break)
	803544	Panel, Oven Bottom 36" (See SN Break)
25	720682	Rack, Guide
26	719393	Elbow, Brass 3/8"
27	803254	Valve, Oven Safety Single Hole
28	803166	Flex Tubing Service Package 3/8" x 6"
29	719385	Orifice Holder
30	800071	Orifice, Lg Oven, Natural Gas, #36
	803882	Orifice, Lg Oven, LP, 1.65 Mm
31	807734	Orifice Bracket, Range
32	807861	Baffle, Lower Front
33	803973	Heatsink
34	803814	Burner Tube, Oven (See SN Break)
	807729	Buner Tube, Bake (See SN Break)
35	766546	Baffle, Flue Range

36" Range Oven View

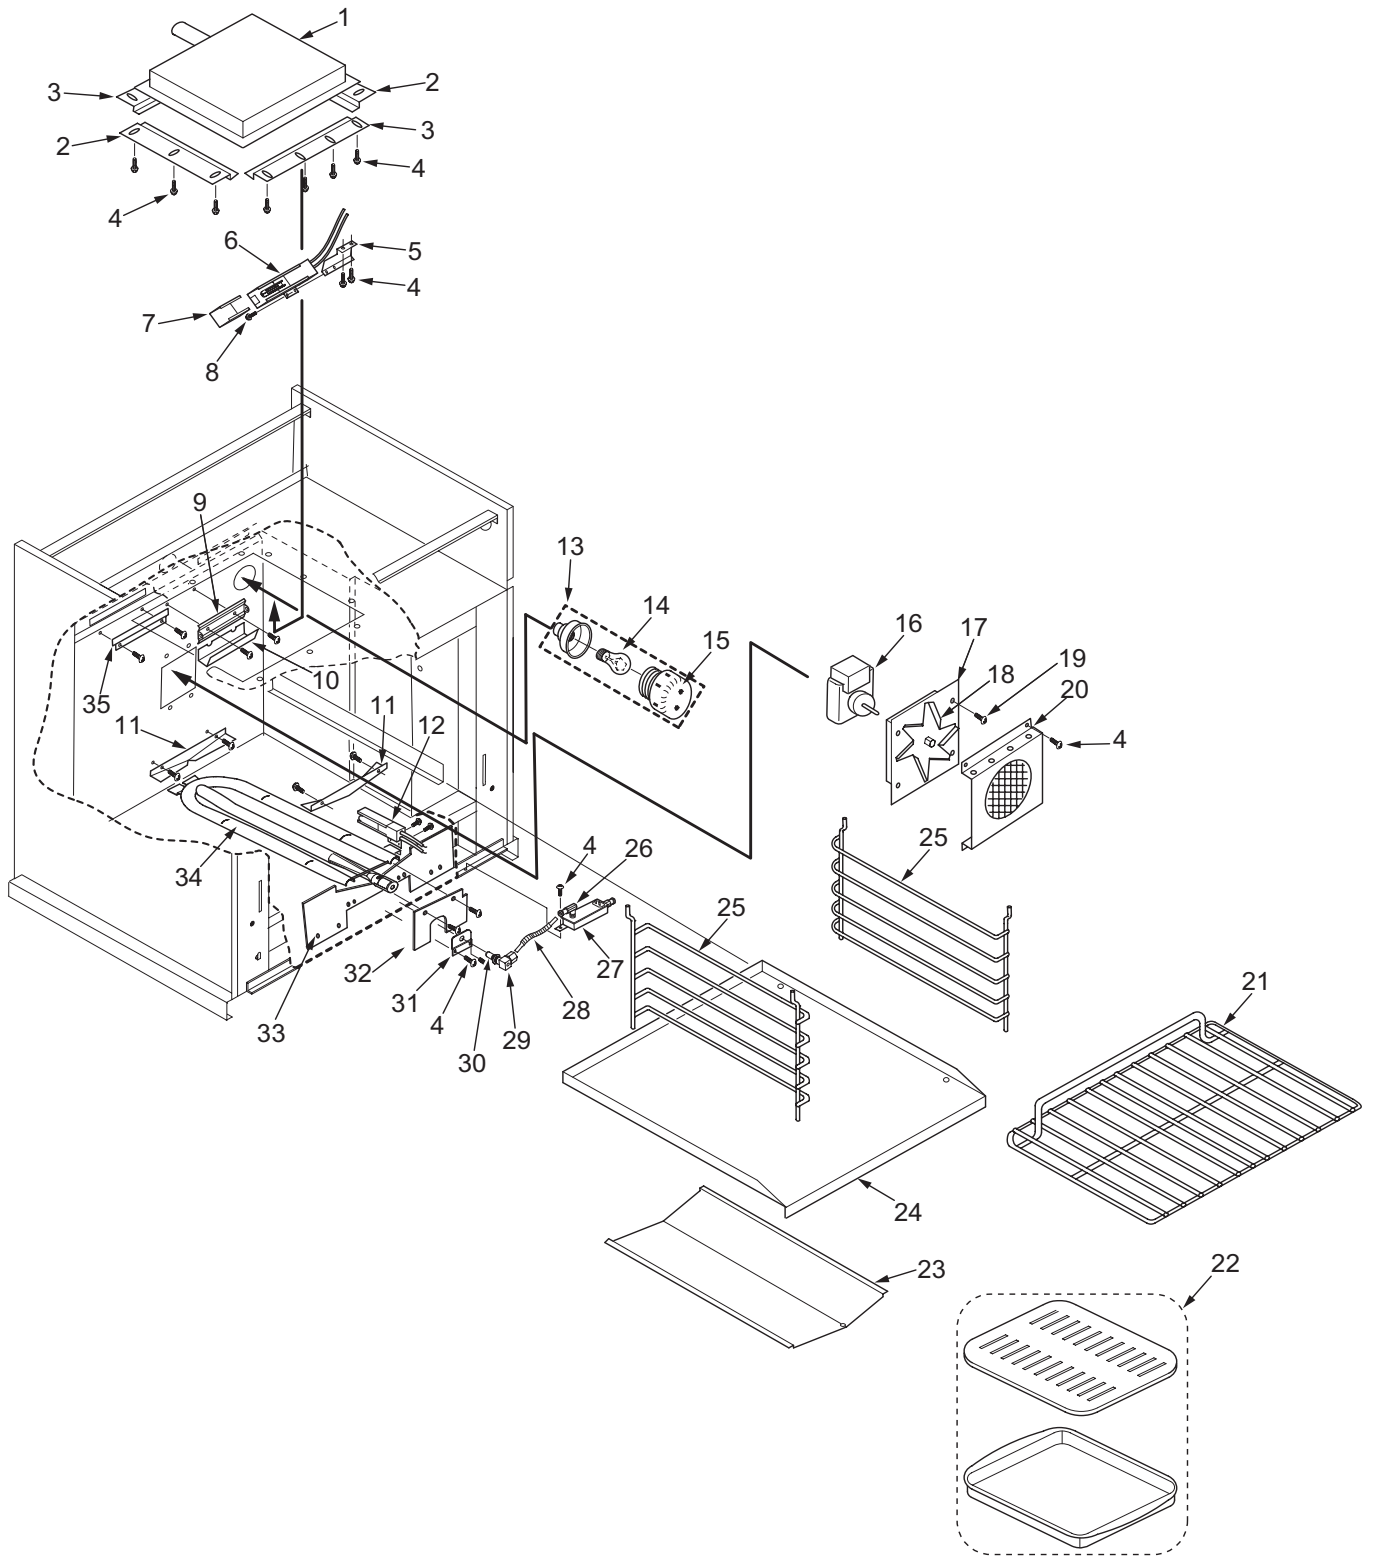

36" Range Rear Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	722632	Cord, Power
2	719393	Elbow, 3/8" x 3/8"
3	730230	Screw #8-32 x 3/8"
4	807668	Ferrule, Sleeve 3/8"
5	807678	Nut, Compress
6	801366	Flex Tubing Service Package 3/8" x 6"
7	715109	Valve, Broiler Safety
8	766542	Bracket, Safety Valve-Relay
9	714345	Bushing, Snap
10	786776	Box, Flue Assembly
11	730228	Screw #10-24 x 1/2" Phillips
12	786835	Box, Flue Center Assembly
13	730239	Screw #8 x 3/8"
14	722383	Relay, Fan
15	809416	Module, Spark 6 Point
16	768258	Panel, Module Range
17	800246	Washer, Flat, Teflon
18	766482	Cover, Blower Motor, Range
19	766593	Angle, Wall Brace
20	766458	Brace, Rear Bottom
21	719502	Box, Electrical
22	719503	Plate, Face Electrical Box
23	713813	Connector, 3/8", Power Cord
24	801457	Elbow, 1/2" x 1/2"
25	801456	Nipple, 1/2" x 22 3/4"
26	786768	Bracket, Manifold Support
27	801459	Nipple, 1/2" x 3-1/2"
28	721030	Gasket, Red Rubber
29	722278	Elbow, Adapter Compression
30	800259	Orifice, W/ELB Broil Natural (Stamp #48)
	800057	Orifice, IR Broil (LP) 1.181MM (Stamp #56)

Not Shown

800247 Silicone, Red High Temp.

36" Range Rear View

