

Parts Manual

Gas Rangetop Models

BSPRT488B

BSPRT6010B


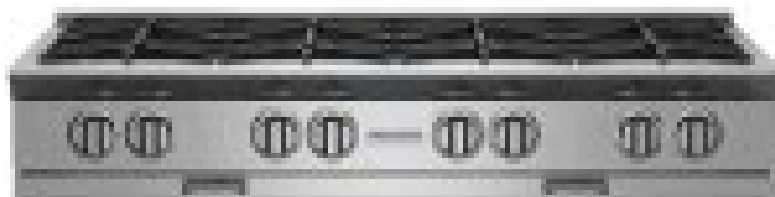


Table of Contents

Page	Description
1-2	Cooktop Assembly BSPRT488B
3-4	Cooktop Assembly BSPRT6010B
5-6	Burner Box Assembly BSPRT488B
7-8	Burner Box Assembly BSPRT6010B
9-10	Top Rail Assembly BSPRT488B
11-12	Top Rail Assembly BSPRT6010B
13-14	Grease Pan Assembly BSPRT488B
15-16	Grease Pan Assembly BSPRT6010B
17-18	Front 18K 22K Burner Assembly
19-20	Front 25K Burner Assembly
21-22	Rear 18K 22K Burner Assembly
23-24	Rear Simmer Burner Assembly
25	Orifice Chart


Cooktop Assembly BSPRT488B

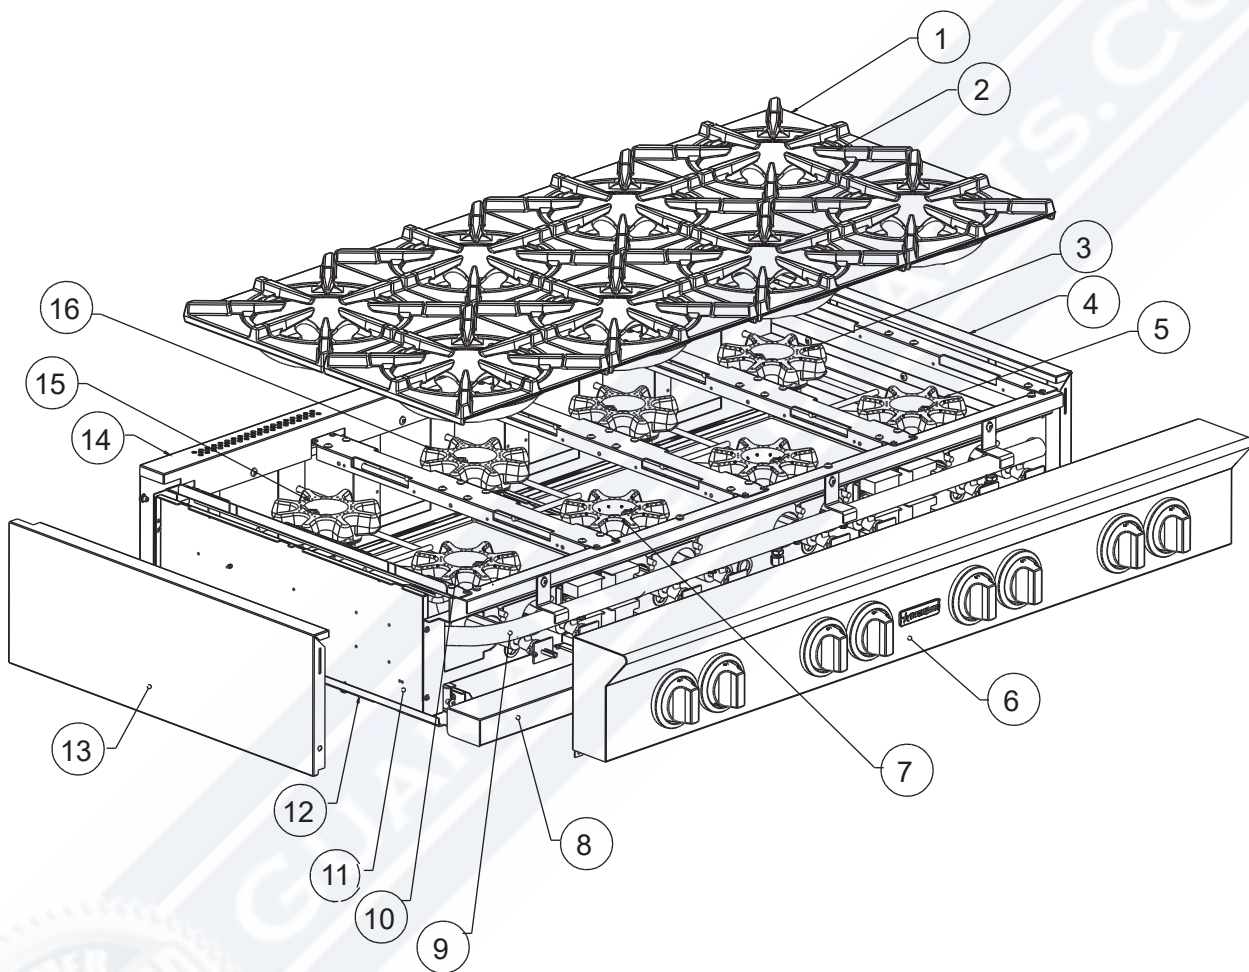

Cooktop Assembly BSPRT488B

Reference Number	Part Number	Part Name	Quantity
1	700801	GRATE-TOP, MATTE BLACK	8
2	700901	GRATE-RING, MATTE BLACK	8
3	600087	SA REAR 18K 22K BURNER	1
4	113225	BODY SIDE RANGE TOP RGT 48	1
5	704504	S/S BURNER SUPPORT	4
6	600358	SA PLAT PLATE RNG TOP RAIL 48	1
7	600030	SA FRONT 25K BURNER	2
8	600373	SA GREASE PAN ASSY 48 BSP	1
9	600278	SA MANIFOLD PLAT RANGETOP 48	1
10	600086	SA FRONT 18K 22K BURNER	2
11	600338	SA COMMON TOP SECTION 48	1
12	101346	BURNER BOX BOTTOM PATCH 2	1
13	113226	BODY SIDE RANGE TOP LEFT 48	1
14	118308	BACKGUARD GRATE HGT V2 48	1
15	600083	SA REAR SIMMER BURNER	1
16	600084	SA REAR 15K BURNER	2

Cooktop Assembly BSPRT6010B

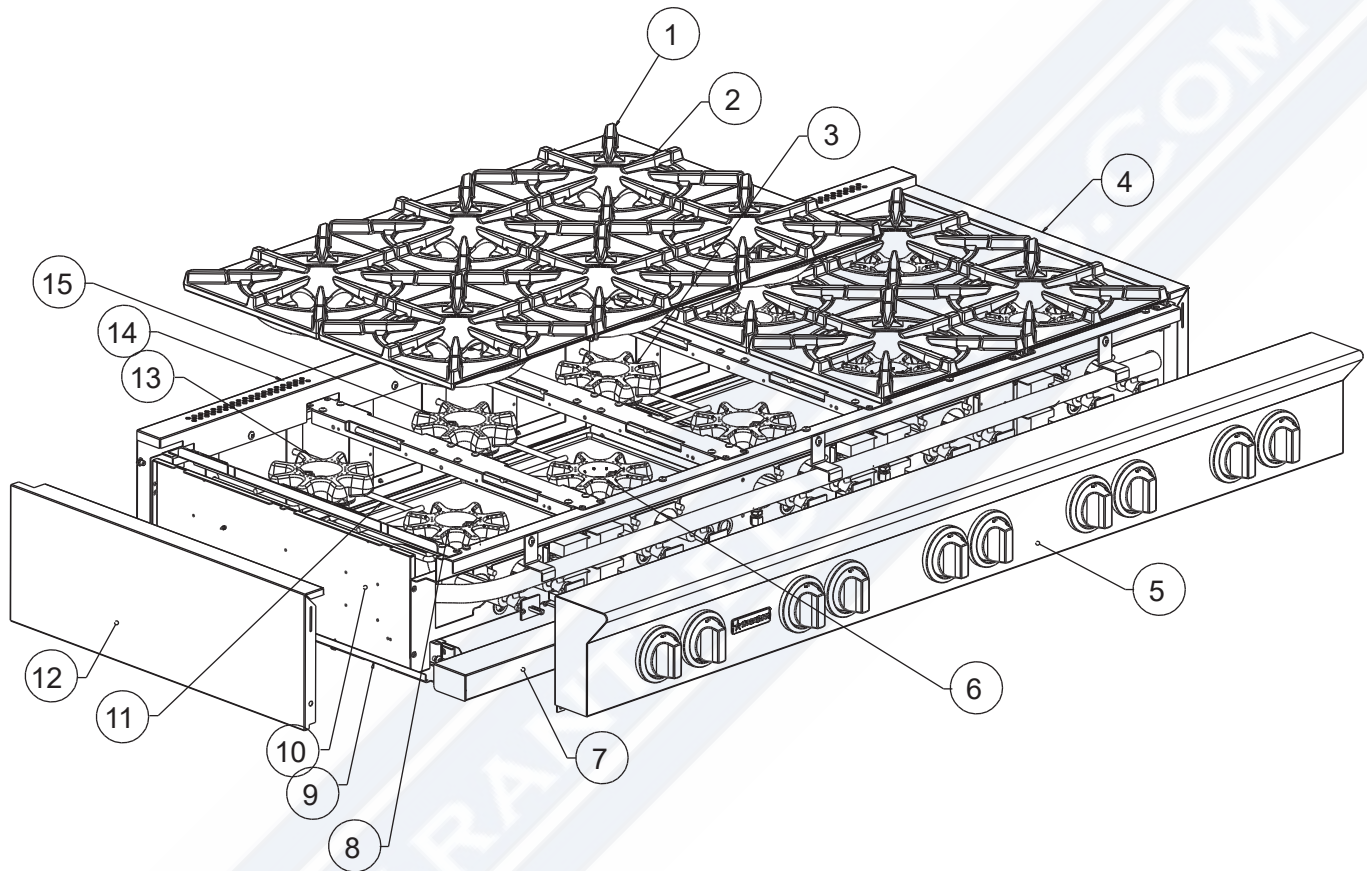


Cooktop Assembly BSPRT6010B

Reference Number	Part Number	Part Name	Quantity
1	700801	GRATE-TOP, MATTE BLACK	8
2	700901	GRATE-RING, MATTE BLACK	8
3	600087	SA REAR 18K 22K BURNER	2
4	113227	BODY SIDE RANGE TOP RGT 60	1
5	600359	SA PLAT PLATE RNG TOP RAIL 60	1
6	600030	SA FRONT 25K BURNER	2
7	600374	SA GREASE PAN ASSY 60 BSP	1
8	600086	SA FRONT 18K 22K BURNER	3
9	101347	BURNER BOX BOTTOM PATCH 3	1
10	600339	SA COMMON TOP SECTION 60	1
11	704504	S/S BURNER SUPPORT	5
12	113228	BODY SIDE RANGE TOP LEFT 60	1
13	600083	SA REAR SIMMER BURNER	1
14	118317	BACKGUARD GRATE HEIGHT 60 BSP	1
15	600084	SA REAR 15K BURNER	2




Burner Box Assembly BSPRT488B

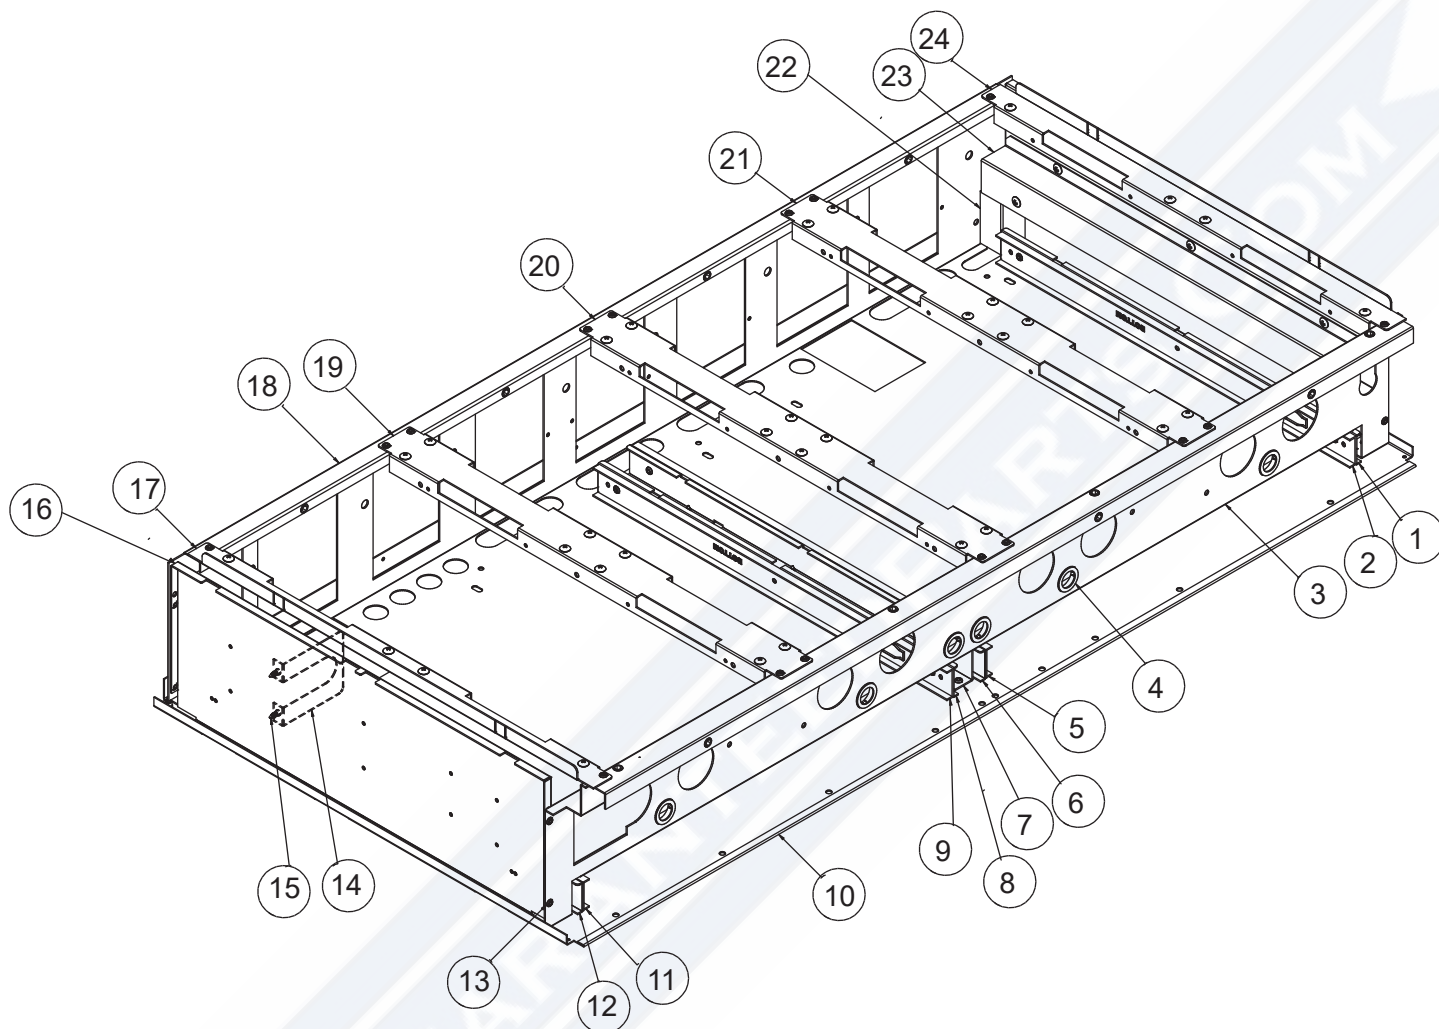

Burner Box Assembly BSPRT488B

Reference Number	Part Number	Part Name	Quantity
1	101650	DRIP TRAY BRACKET	4
2	747803	Slide, Bottom Section	4
3	100233	BURNER BOX FRONT 8B V2 48	1
4	741201	1" SNAP BUSHING	6
5	747803	Slide, Bottom Section	4
6	101650	DRIP TRAY BRACKET	4
7	101343	CENTER SUPPORT BRACKET 48-60	1
8	101650	DRIP TRAY BRACKET	4
9	747803	Slide, Bottom Section	4
10	101333	BURNER BOX BOTTOM V2 48	1
11	747803	Slide, Bottom Section	4
12	101650	DRIP TRAY BRACKET	4
13	306301	RIVET, 3/16" COUNTERSINK BLIND	34
14	113110	MANIFOLD SUPPORT	1
15	303201	SCR. #10 X 1/2" PH TRUSS HD ZP	22
16	101507	BURNER BOX INSUL PANEL BSP	2
17	101217	Top Support Side OB	2
18	100223	BURNER BOX BACK V2 48	1
19	101215	Top Support Center OB	3
20	101215	Top Support Center OB	3
21	101215	Top Support Center OB	3
22	101381	WIRE WAY, BOTTOM	1
23	101382	WIRE WAY, TOP	1
24	101217	Top Support Side OB	2


Burner Box Assembly BSPRT6010B

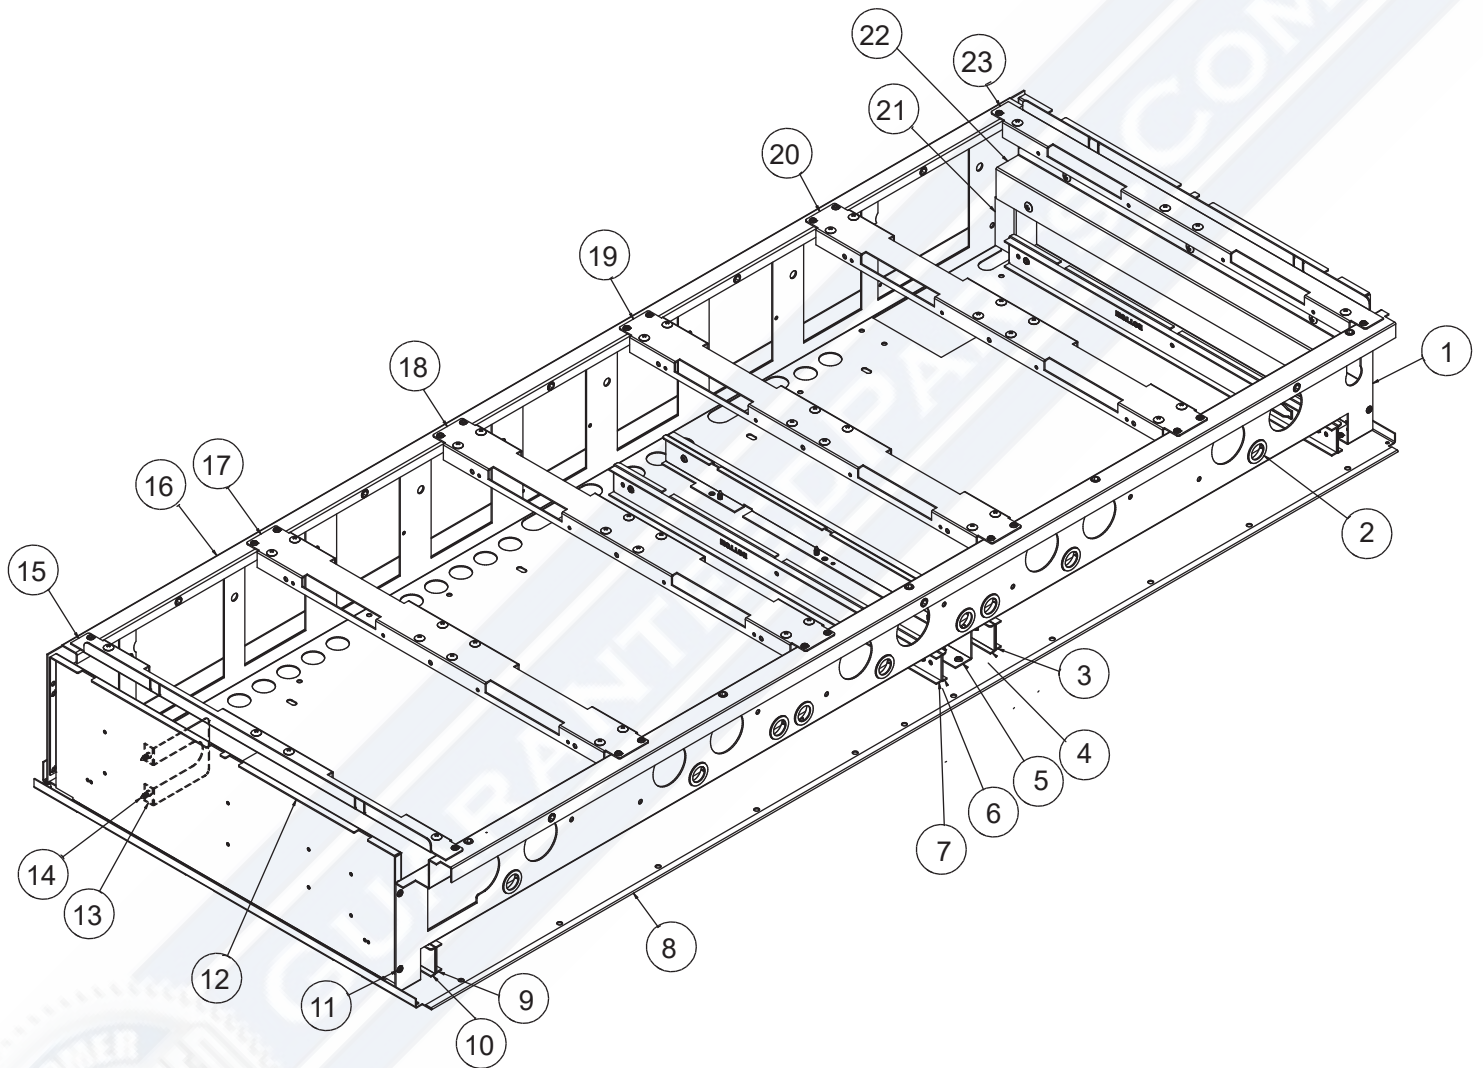

Burner Box Assembly BSPRT6010B

Reference Number	Part Number	Part Name	Quantity
1	100234	BURNER BOX FRONT 60 BSP	1
2	741201	1" SNAP BUSHING	9
3	747803	Slide, Bottom Section	4
4	101650	DRIP TRAY BRACKET	4
5	101343	CENTER SUPPORT BRACKET 48-60	1
6	101650	DRIP TRAY BRACKET	4
7	747803	Slide, Bottom Section	4
8	101334	Burner Box Bottom 60	1
9	747803	Slide, Bottom Section	4
10	101650	DRIP TRAY BRACKET	4
11	306301	RIVET, 3/16" COUNTERSINK BLIND	37
12	101507	BURNER BOX INSUL PANEL BSP	2
13	113110	MANIFOLD SUPPORT	1
14	303201	SCR. #10 X 1/2" PH TRUSS HD ZP	22
15	101217	Top Support Side OB	2
16	100224	Burner Box Back 60	1
17	101215	Top Support Center OB	4
18	101215	Top Support Center OB	4
19	101215	Top Support Center OB	4
20	101215	Top Support Center OB	4
21	101381	WIRE WAY, BOTTOM	1
22	101382	WIRE WAY, TOP	1
23	101217	Top Support Side OB	2

Top Rail Assembly BSPRT488B

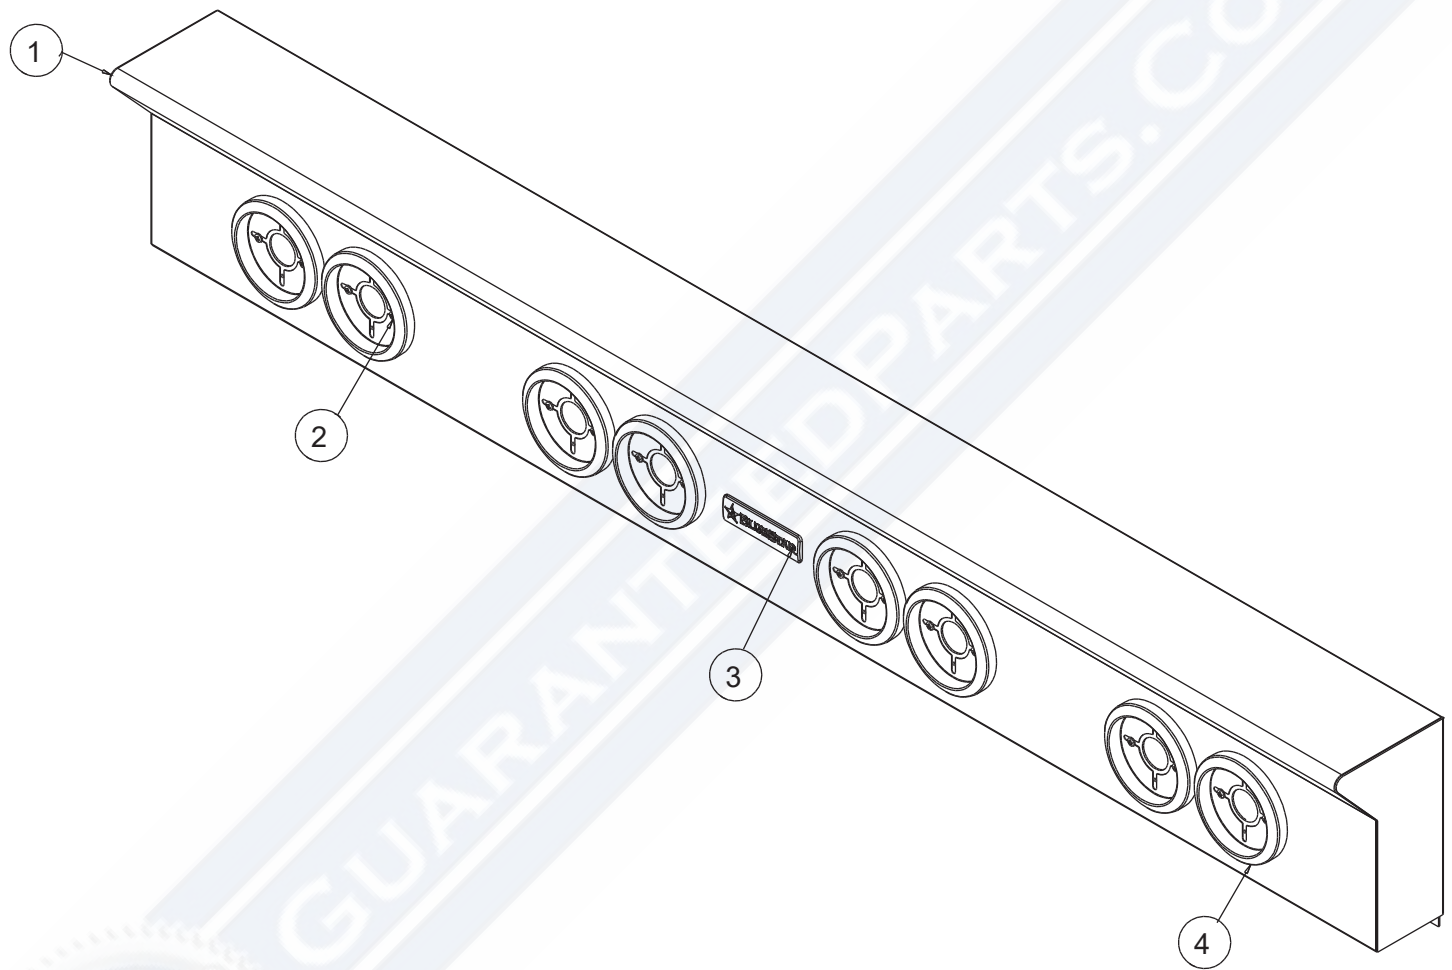


Top Rail Assembly BSPRT488B

Reference Number	Part Number	Part Name	Quantity
1	502719	WA PLATE RAIL RANGETOP 48	1
2	305201	SCREW 6-32 x PAN HEAD	16
3	742410	BS BADGE - SMALL	1
4	732101	LARGE BEZEL	8
N/S	304001	Push Nut Black Logo Clip	2

GUARANTEEDPARTS.COM



Top Rail Assembly BSPRT6010B

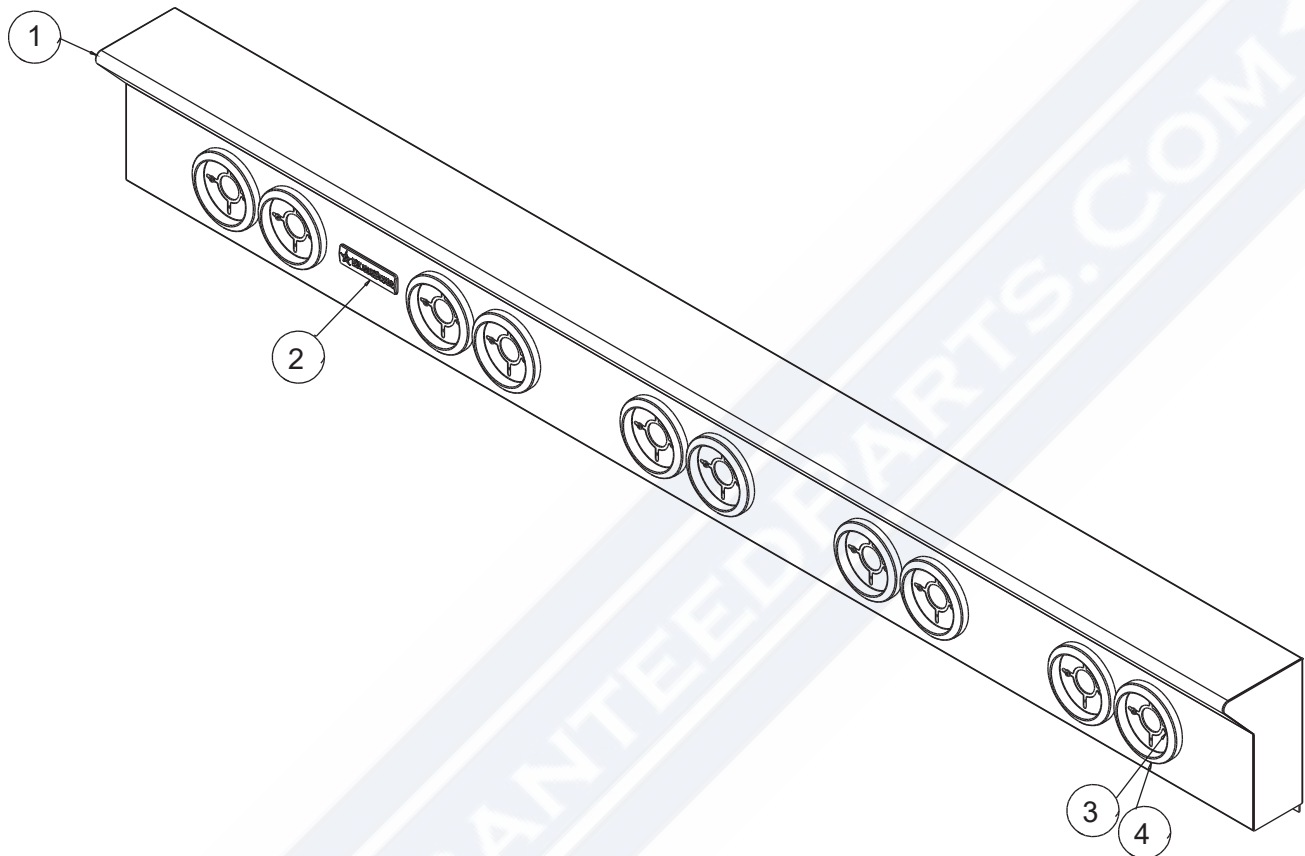


Top Rail Assembly BSPRT6010B

Reference Number	Part Number	Part Name	Quantity
1	502719	WA PLATE RAIL RANGETOP 48	1
2	742410	BS BADGE - SMALL	1
3	305201	SCREW 6-32 x PAN HEAD	20
4	732101	LARGE BEZEL	10
N/S	304001	Push Nut Black Logo Clip	2

GUARANTEEDPARTS.COM



Grease Pan Assembly BSPRT488B

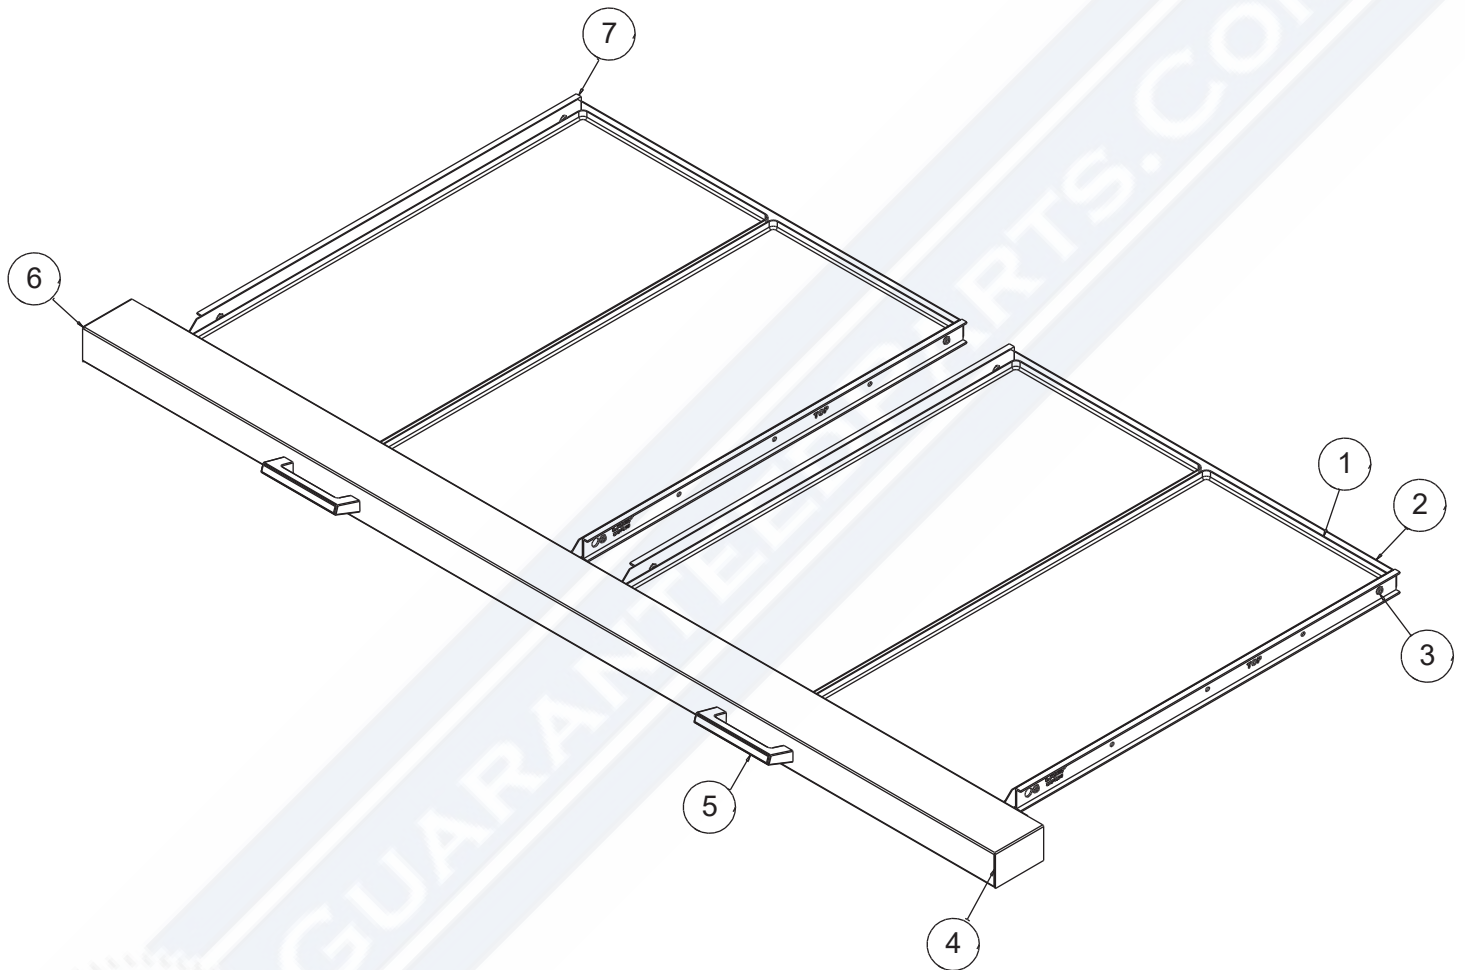


Grease Pan Assembly BSPRT488B

Reference Number	Part Number	Part Name	Quantity
1	704505	GREASE PAN INSERT	4
2	101682	GREASE PAN 24"	2
3	306301	RIVET, 3/16" COUNTERSINK BLIND	8
4	101693	GREASE PAN HNDL DIVERter 48	1
5	703006	Grease Pan Sm Handle BSP	2
6	101688	GREASE PAN HANDLE 48	1
7	747803	Slide, Top Section	4

GUARANTEEDPARTS.COM



Grease Pan Assembly BSPRT6010B

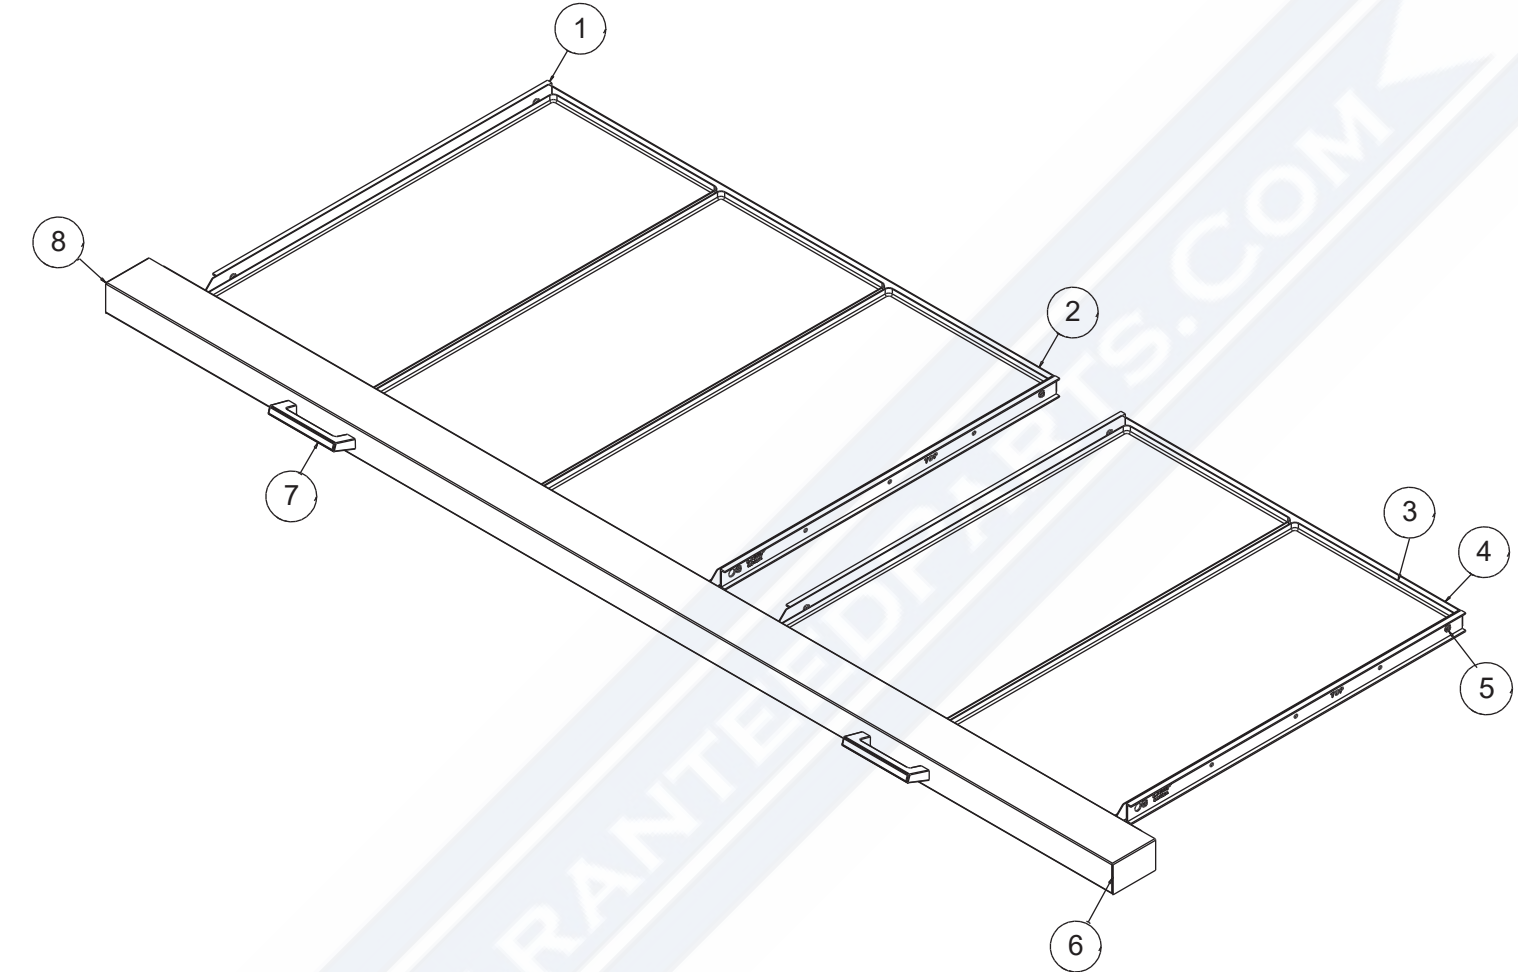


Grease Pan Assembly BSPRT6010B

Reference Number	Part Number	Part Name	Quantity
1	747803	Slide, Top Section	4
2	101684	GREASE PAN 36"	1
3	704505	Grease Pan Insert	5
4	101682	GREASE PAN 24"	1
5	306301	RIVET, 3/16" COUNTERSINK BLIND	8
6	101694	GREASE PAN HNDL DIVERter 60	1
7	703006	Grease Pan Sm Handle BSP	2
8	101689	GREASE PAN HANDLE 60	1

GUARANTEEDPARTS.COM



Front 18K 22K Burner Assembly

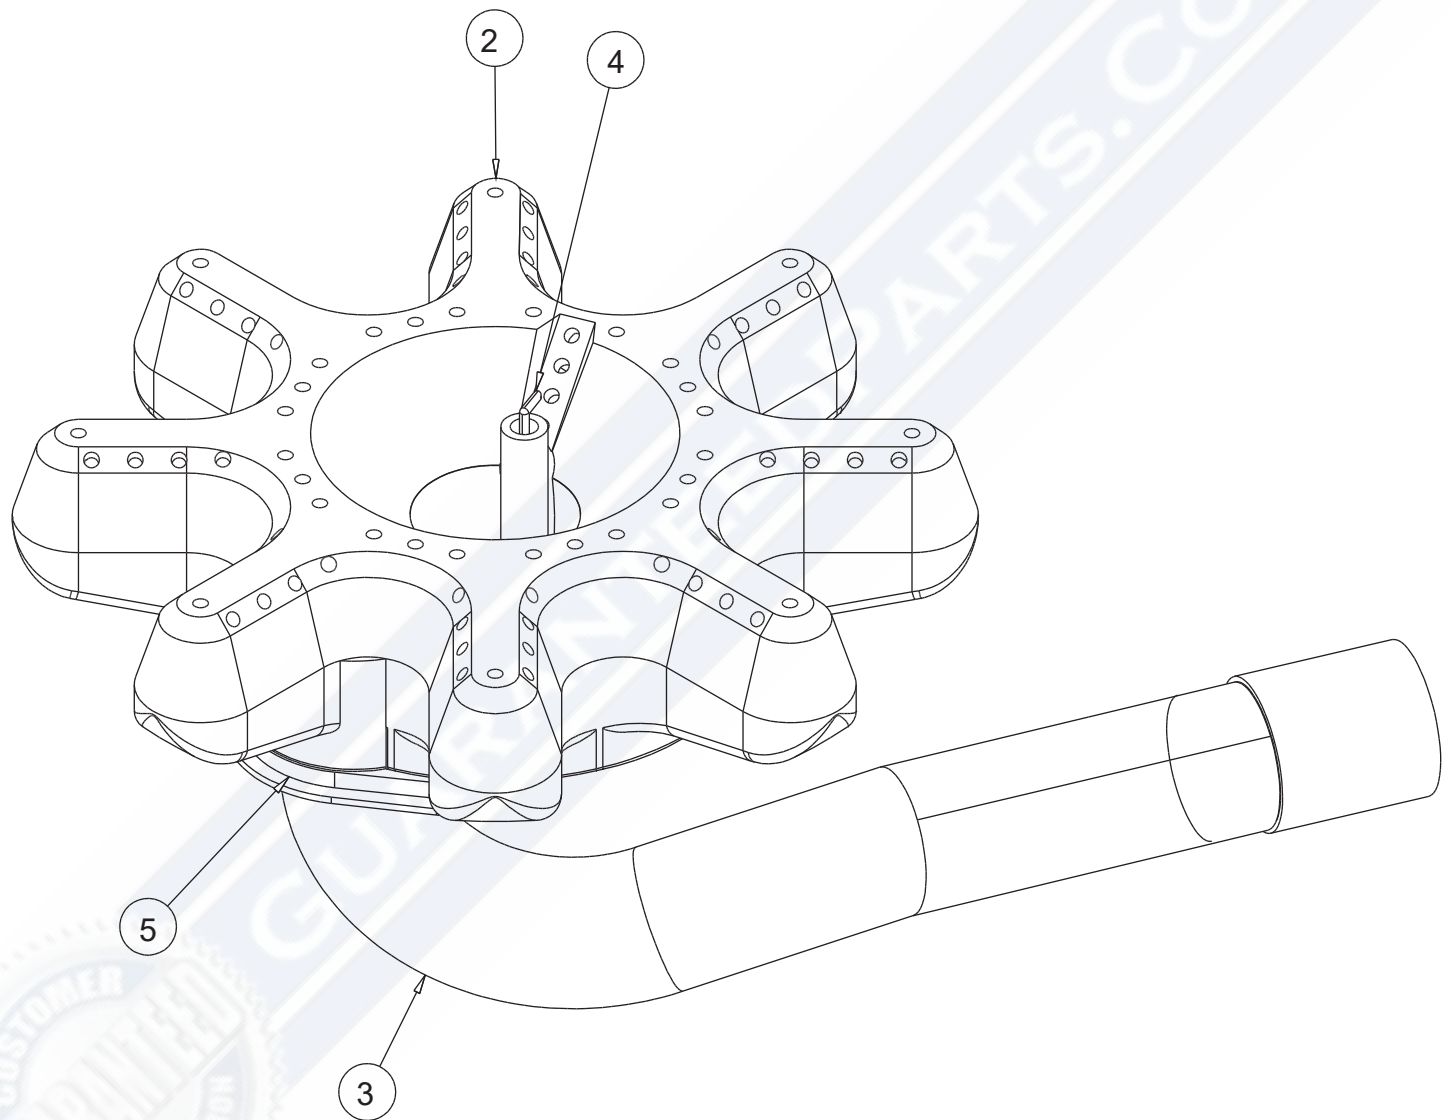


Front 18K 22K Burner Assembly

Reference Number	Part Number	Part Name	Quantity
1	304202	SCREW 10-24 x 3/8 PH TRUSS SS	2
2	729801	18K/22K 8 FINGER STAR BURNER	1
3	733801	0029006B01 1" OD FRONT MIXER T	1
4	741801	ELECTRODE SIM/15K/18K/22K	1
5	734301	GASKET FOR VENTURI	1



Front 25K Burner Assembly

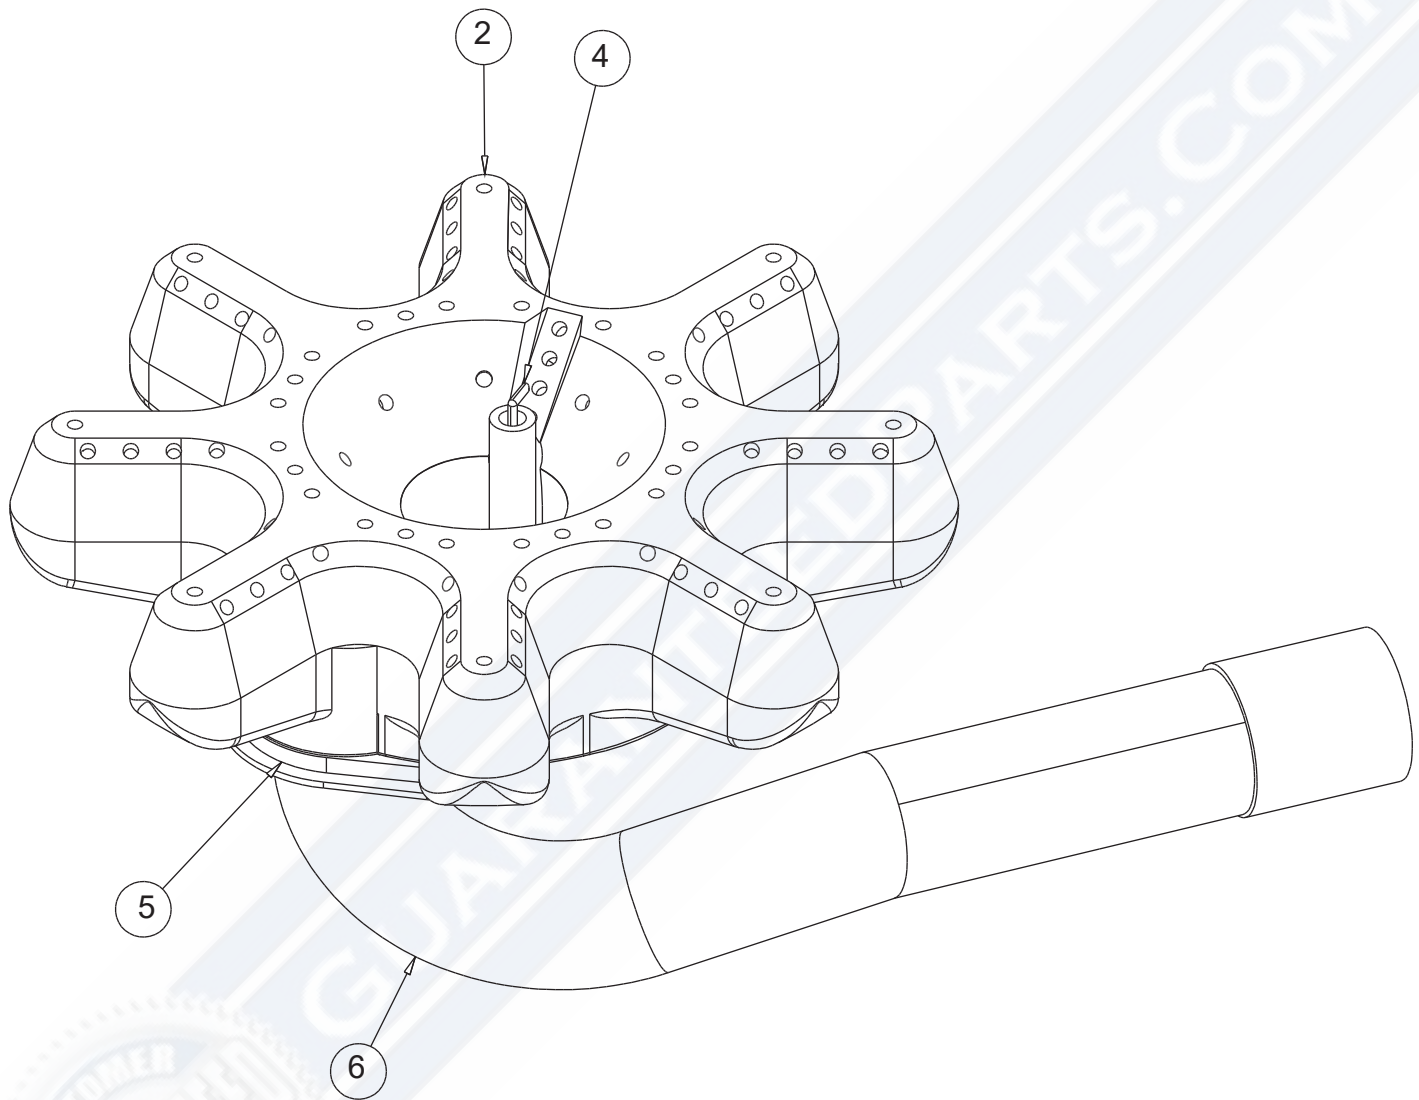


Front 25K Burner Assembly

Reference Number	Part Number	Part Name	Quantity
1	304202	SCREW 10-24 x 3/8 PH TRUSS SS	2
2	729804	25K STAR BURNER	1
3	733801	0029006B01 1" OD FRONT MIXER T	1
4	741801	ELECTRODE SIM/15K/18K/22K	1
5	734301	GASKET FOR VENTURI	1

GUARANTEEDPARTS.COM



Rear 18K 22K Burner Assembly

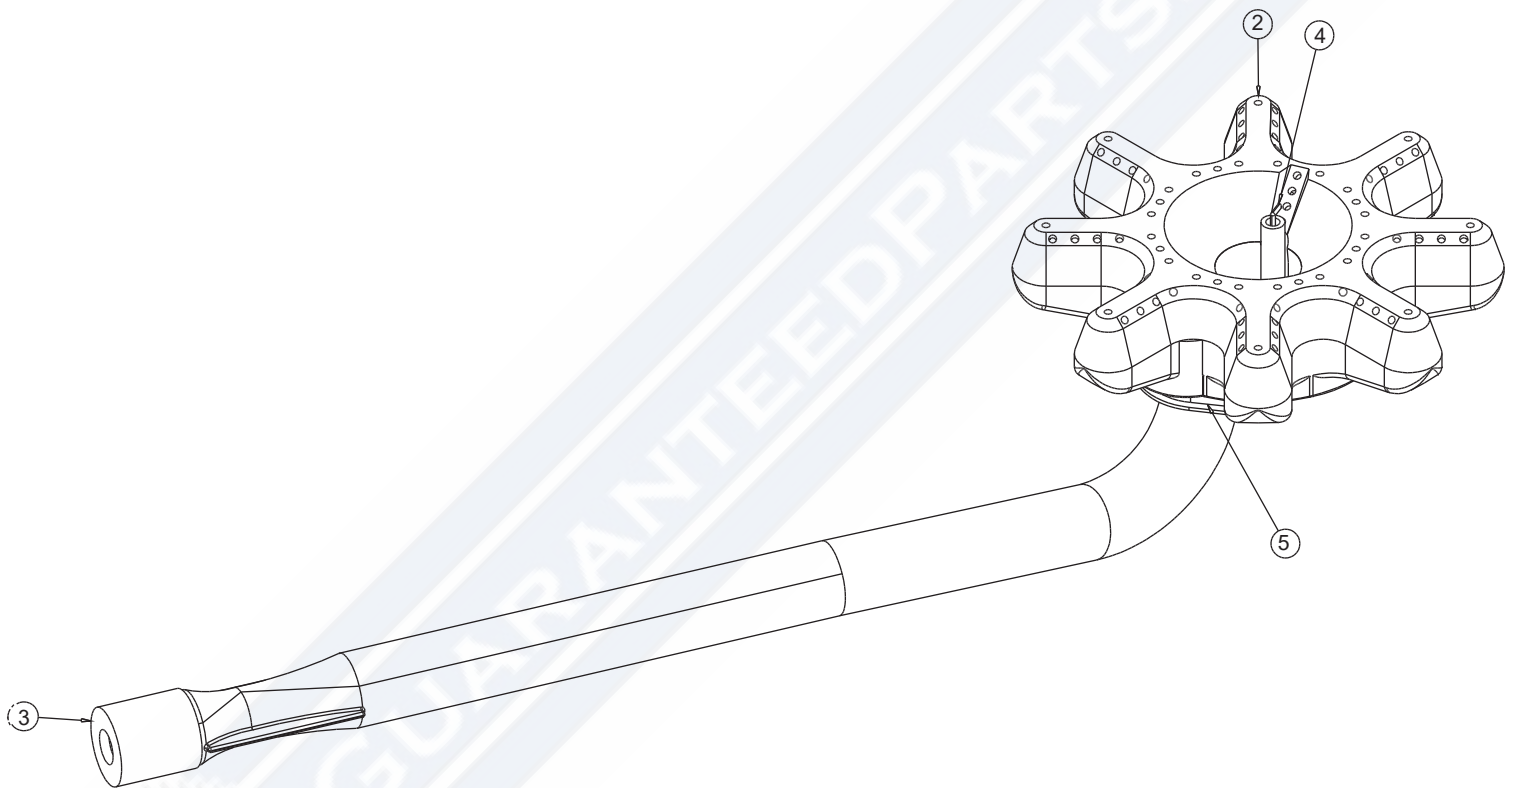


Rear 18K 22K Burner Assembly

Reference Number	Part Number	Part Name	Quantity
1	304202	SCREW 10-24 x 3/8 PH TRUSS SS	2
2	729801	18K/22K 8 FINGER STAR BURNER	1
3	733802	0029007B01, 1" OD REAR MIXER	1
4	741801	ELECTRODE SIM/15K/18K/22K	1
5	734301	GASKET FOR VENTURI	1



Rear Simmer Burner Assembly

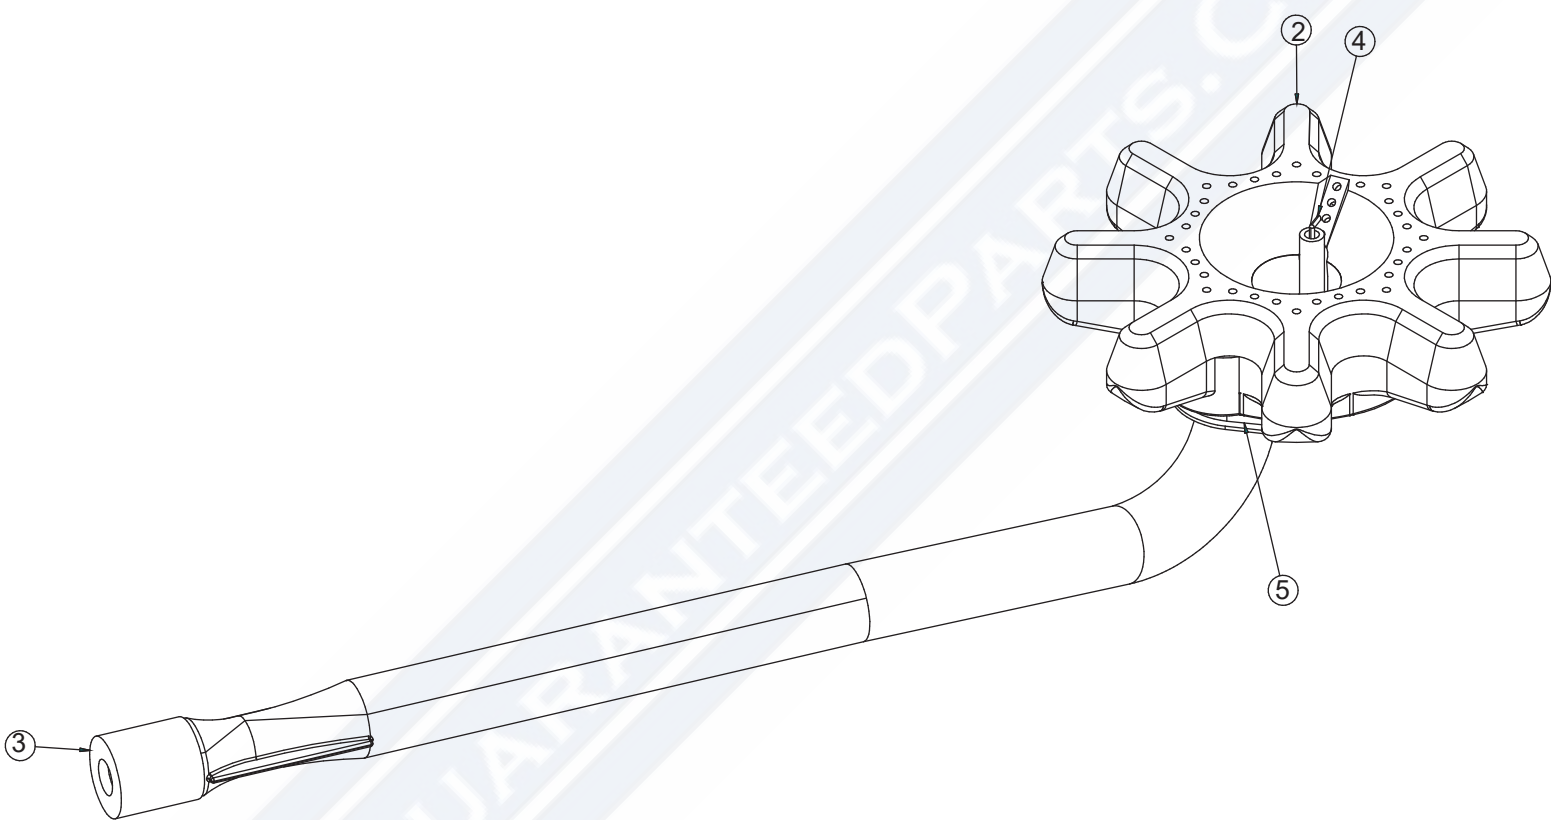

Rear Simmer Burner Assembly

Reference Number	Part Number	Part Name	Quantity
1	304202	SCREW 10-24 x 3/8 PH TRUSS SS	2
2	729803	9.5 K STAR BURNER / SIMMER	1
3	733802	0029007B01, 1" OD REAR MIXER	1
4	741801	ELECTRODE SIM/15K/18K/22K	1
5	734301	GASKET FOR VENTURI	1



Orifice Chart

Part Number	Description	Fuel Type	Burner Type	Sea Level	2000 ^	3000^	4000^	5000^	6000^	7000^	8000^	9000^	10000^
709512	Orifice Hood 1.25mm	Nat	Surface Simmer	1.25									
709570	Orifice Hood #70	LP	Surface Simmer	70	70	71	71	71	71	72	72	72	72
709547	Orifice Hood #47	Nat	Surface 22k BTU	47	48	48	49	49	49	50	50	51	51
709555	Orifice Hood #55	LP	Surface 22k BTU	55	55	55	55	56	56	56	56	56	57
709551	Orifice Hood #51	Nat	Surface 15k BTU	51	51	52	52	52	52	53	53	53	54
709559	Orifice Hood #59	LP	Surface 15k BTU	59	60	61	61	62	62	63	64	64	65
709548	Orifice Hood #48	Nat	Surface 18k BTU	48	49	49	49	50	50	50	51	51	52
709512	Orifice Hood 1.25mm	LP	Surface 18k BTU	1.25									
709543	Orifice Hood #43	Nat	Surface Platinum 25k BTU	43	44	44	44	45	45	46	47	47	48
709555	Orifice Hood #55	LP	Surface Platinum 25k BTU	55	55	55	55	56	56	56	56	56	57
735550	IR burner elbow & orifice #50	Nat	IR Broiler	50	51	51	51	51	52	52	52	53	53
735556	IR burner elbow & orifice #56	LP	IR Broiler	56	56	56	57	57	57	58	59	59	60
718742	Oven burner orifice #42	Nat	Bake Burner	42	42	43	43	43	44	44	45	46	47
718752	Oven burner orifice #53	LP	Bake Burner	53	54	54	54	54	54	54	55	55	55
781010	Power Burner Orifice BLANK	S.O.	Power Burner Platinum - Order to gas size, Nat - .096 / LP - .056										
		Nat	Griddle										
		LP	Griddle										
		Nat	Char Grill										
		LP	Char Grill										
		Nat	French Top										
		LP	French Top										
		Nat	Salamander										
		LP	Salamander										