



The Life of the Kitchen.®

PARTS CATALOG


EF42BDCBSS

Page #	Sheet Title
1	Cabinet
3	Compressor
6	Controls
8	Shelves & Accessories (Fresh Food)
10	Evaporator Compartment
12	Shelves & Accessories (Freezer)
14	Fresh Food Door
16	Freezer Door
18	Fountain
20	Ice Maker
22	Ice Bin
25	Wire Diagram

Revised 10-08-2009

Technical Service | 1440 Bridgegate Drive | Diamond Bar, CA 91765 | PH 800-353-2267 | FAX 909-612-1702


EF42BDCBSS - Cabinet

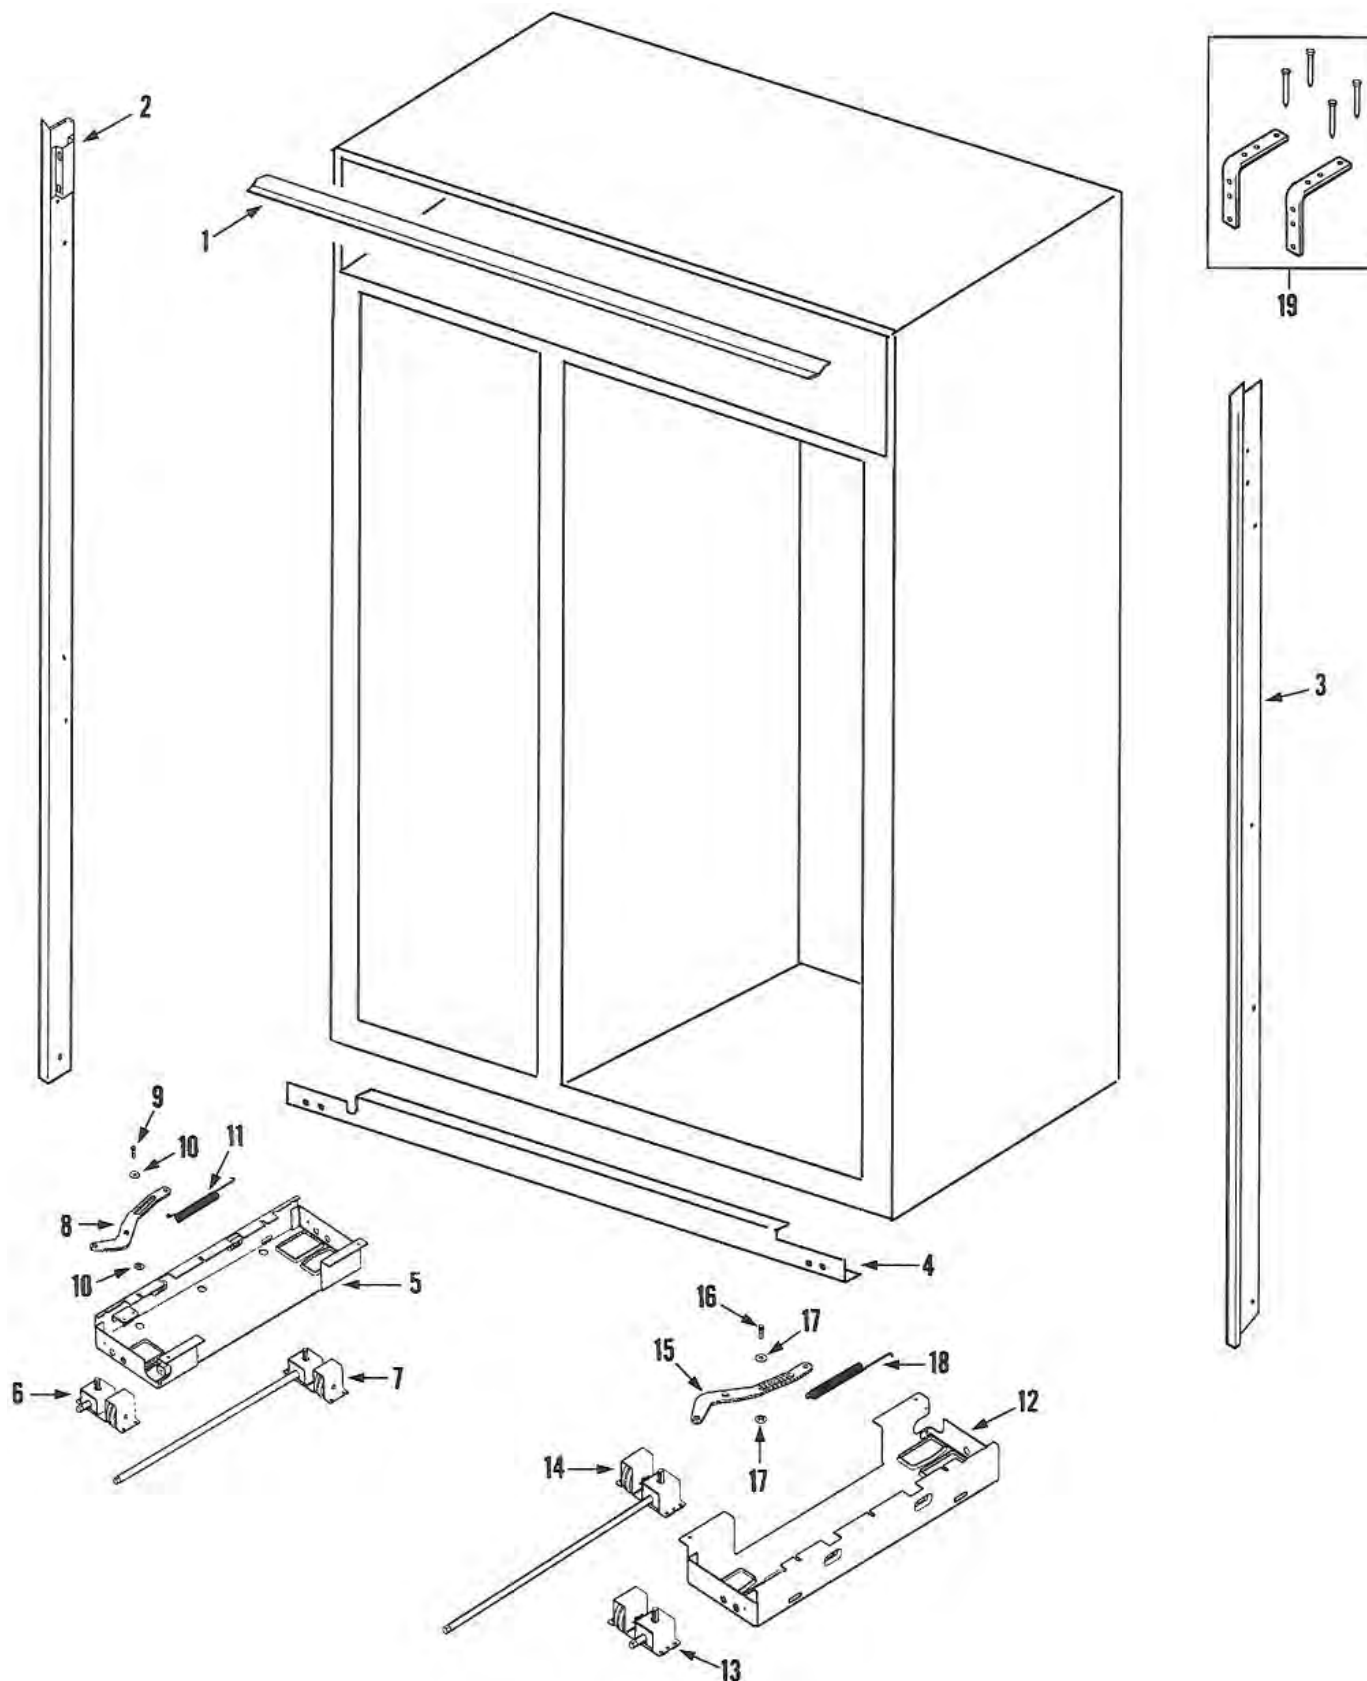

EF42BDCBSS - Cabinet Parts

Ref #	Dacor #	Whirlpool #	Description
1	103120	67006160	Trim, Cabinet Upper (SLV)
-	102916	67001330	Screw, Trim
2	103130	67006161	Trim, Cabinet Side (LT-SLV)
-	102915	67001328	Screw, Trim
3	103256	67006162	Trim, Cabinet Side (RT-SLV)
-	102915	67001328	Screw, Trim
4	103634	67001623	Kick Plate
-	103036	67001540	Screw, Kick Plate
5	103116	67003441	Wheel, Asy (LT)
-	103199	400022-1	Screw, Wheel Asy.
-	102895	61002819	Screw, Wheel Asy.
6	103117	67003442	Gear Asy., Wheel (FRT)
-	102895	61002819	Screw, Gear Asy.
7	103118	67003443	Gear Asy., Wheel (Rear)
-	102895	61002819	Screw, Gear Asy.
8	103029	67001518	Arm, Door Closer
9	103030	67001519	Screw, Closer Arm
10	103031	67001520	Bushing, Closer Arm
11	103032	67001521	Spring w/ Dampner, Door Closer
12	103260	67003444	Wheel Asy. (RT)
-	103199	400022-1	Screw, Wheel Asy.
-	102895	61002819	Screw, Wheel Asy.
13	103129	67003445	Gear Asy., Wheel (FRT)
-	102895	61002819	Screw, Gear Asy.
14	103121	67003446	Gear Asy., Wheel (Rear)
-	102895	61002819	Screw, Gear Asy.
15	103029	67001518	Arm, Door Closer
16	103030	67001519	Screw, Closer Arm
17	103031	67001520	Bushing, Closer Arm
18	106446	67001526	Spring, w/ Damper, Door Closer
19	103033	67001527	Bracket, Asy., Anti-Tip

EF42BDCBSS - Compressor

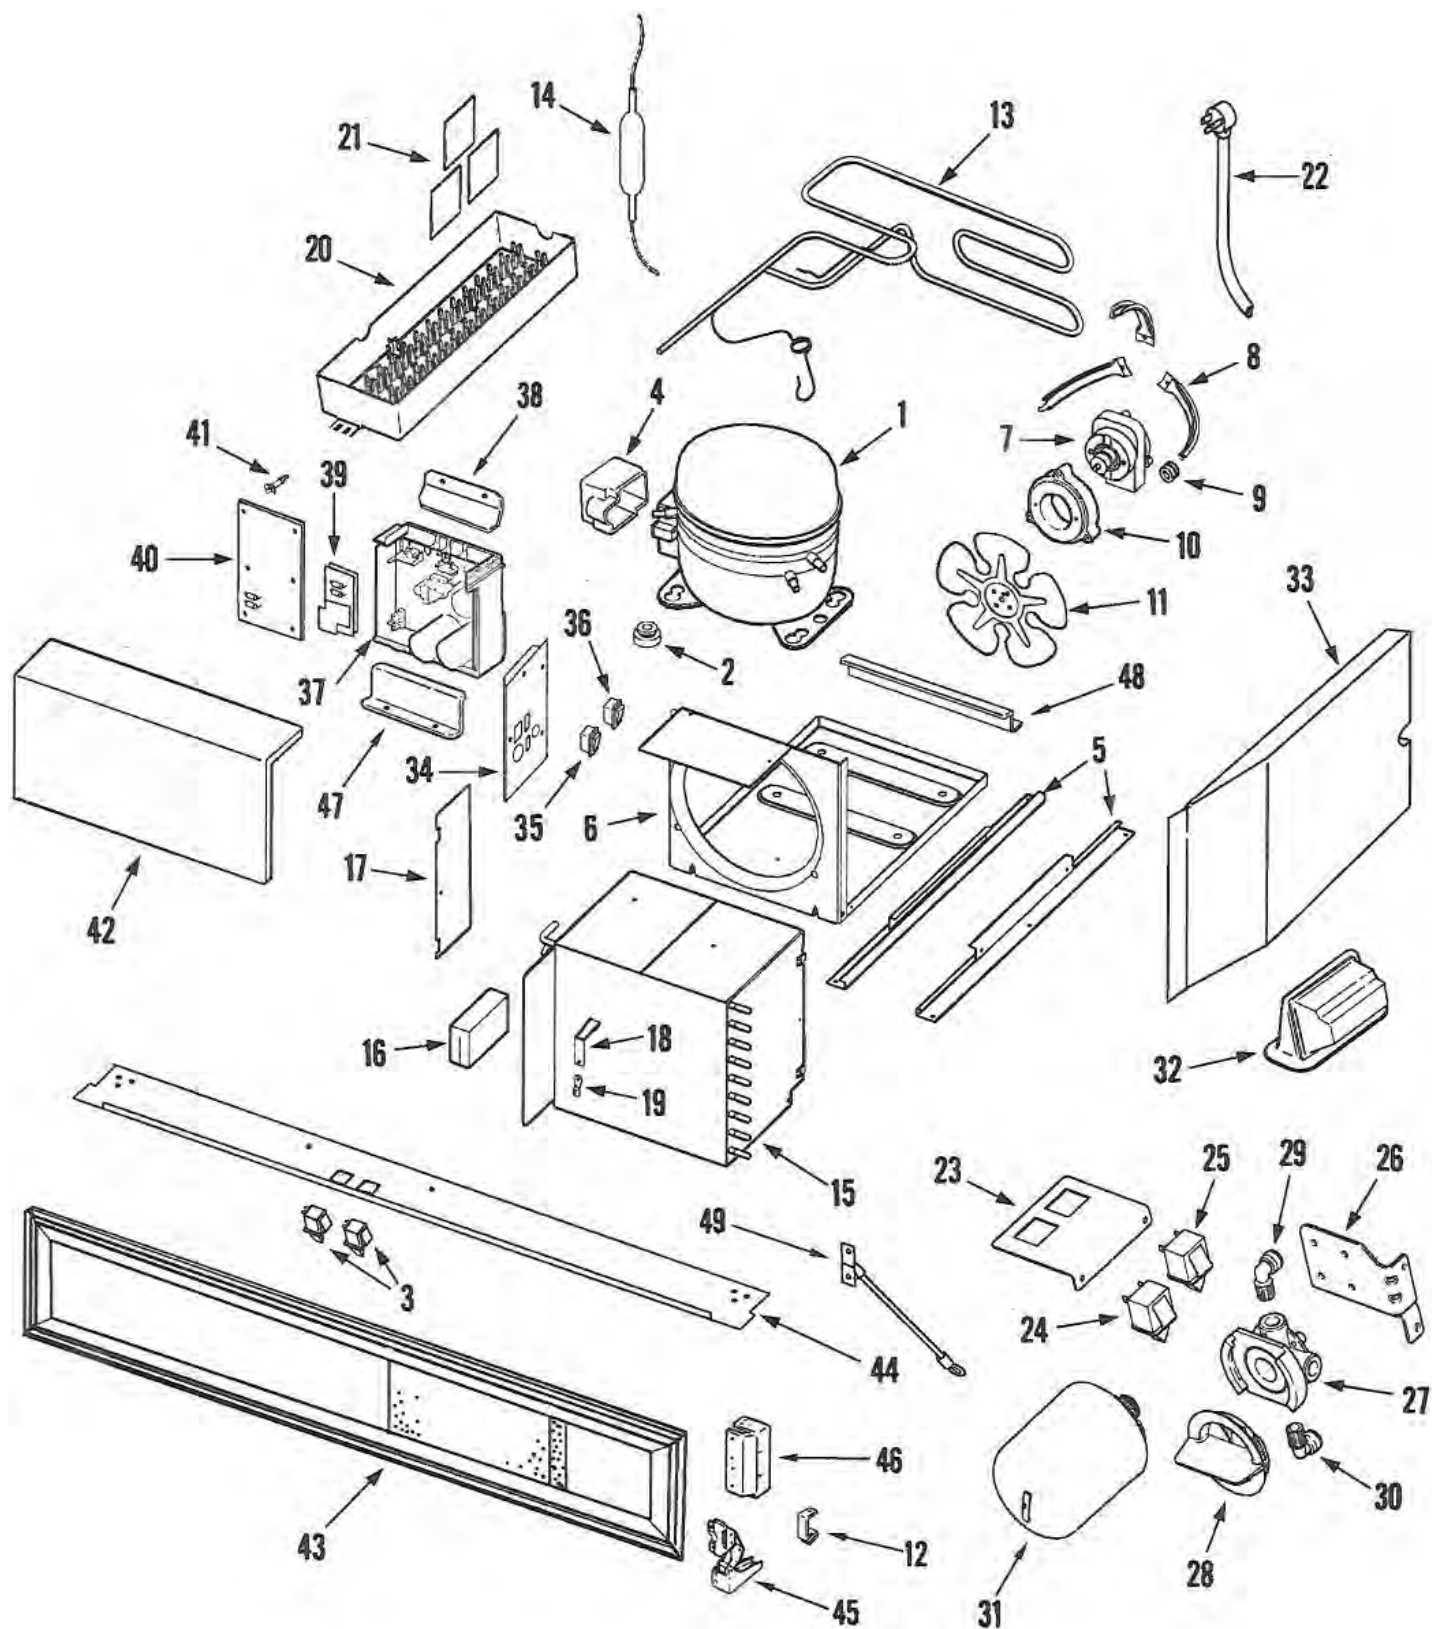

EF42BDCBSS - Compressor Parts


Ref #	Dacor #	Whirlpool #	Description
1	106735	12002741	Compressor Kit (Inc. Compressor, Terminal Cover & Drier)
-	102918	67001333	Screw, Compressor MTG.
2	102906	61005241	Grommet, Compressor
3	102941	67001368	Switch, Light
-	103097	67002538	Shim, Light Switch
4	102894	61002138	Cover, Terminal
5	102919	67001334	Rail, Compressor
-	103263	400017-1	Screw, Rail
6	102920	67001335	Pan, Compressor MTG.
7	102913	61006190	Motor, Condenser Fan
-	102907	61005324	Screw, Motor
8	102891	61001414	Bracket, Fan Motor
9	102805	61004743	Grommet, Bracket
10	102908	61005325	Adapter, Fan Motor
-	102921	67001336	Screw, Adapter
11	106449	61006191	Blade, Condenser
12	72510CH		Dacor Logo
13	103078	67001894	Heat Exchanger Asy.
14	103264	13900-1	Drier
15	103265	67005115	Condenser
16	102922	67001339	Baffle, Condenser Seal
17	102923	67001340	Extension, Condenser
-	102895	61002819	Screw, Extension
18	102924	67001341	Clip, Thermister
19	102925	67001342	Thermister
-	103205	65275-33	Screw, Thermister
20	102926	67001343	Pan, Drain
-	102895	61002819	Screw, Pan (FRT)
21	103094	67002534	Wick, Condensation
22	103095	67002535	Cord, Power w/ Harness
23	102927	67001347	Bracket, Filter Switch
-	102895	61002819	Screw, Bracket
24	103108	67003198	Switch, Water Filter Sense
25	103108	67003198	Switch, Water Shut Off Sense
26	102928	67001349	Bracket, Water Filter
-	102895	61002819	Screw, Bracket to Wall
-	102929	67001350	Screw, Bracket to Head
27	102931	67001352	Head, Water Filter
28	102901	61003791	Plug, Filter Bypass
29	102930	67001351	Fitting, Water Filter
30	102930	67001351	Fitting, Water Filter
31	103190	67006273	Filter, Water



EF42BDCBSS - Compressor Parts (Cont.)

Ref #	Dacor #	Whirlpool #	Description
32	102932	67001353	Valve Asy., Pressure Relief
-	102895	61002819	Screw, Relief Asy.
-	103083	67001904	Screen
33	102933	67001354	Divider, Machine Compartment
34	102934	67001355	Bracket, Electrical
-	102895	61002819	Screw, Bracket
35	102935	67001356	Switch, Main Shut Off
36	102936	67001357	Switch, C/F Temp. Display
37	103270	67006163	Board, Compressor (Inverter)
38	103173	67006252	Retainer, Upper
-	102895	61002819	Screw, Retainer
39	102937	67001360	Supply, Power
40	103272	67006253	Board, Main Display
41	103034	67001528	Standoffs, Circuit Board
42	103133	67006164	Cover, Circuit Board
-	102895	61002819	Screw, Cover
43	103274	67006165	Cover, Machine Compt. (STNLS)
-	103137	67006168	Protector, Edge
44	103071	67001838	Trim, Cabinet Top (SLV)
-	102895	61002819	Screw, Trim
45	103138	67006169	Hinge (LT)
-	103139	67006170	Hinge (RT)
-	102895	61002819	Screw, Hinge to Cover (Hex)
-	102915	67001328	Screw, Hinge to Cabinet (Phil)
46	103140	67006171	Bracket, Hinge
47	103175	67006254	Retainer, Lower
-	102895	61002819	Screw, Retainer
48	103177	67006256	Bracket, Comp. Pan Rear
-	102892	61001885	Screw, Bracket
-	106453	67001363	Wire Harness, Compressor
-	102938	67001365	Wire Harness, Power Supply
-	102939	67001366	Wire Harness, Temp. Switch
-	103135	67006166	Wire Harness, Comp. Board
-	103136	67006167	Wire Harness, PC Board


EF42BDCBSS - Controls

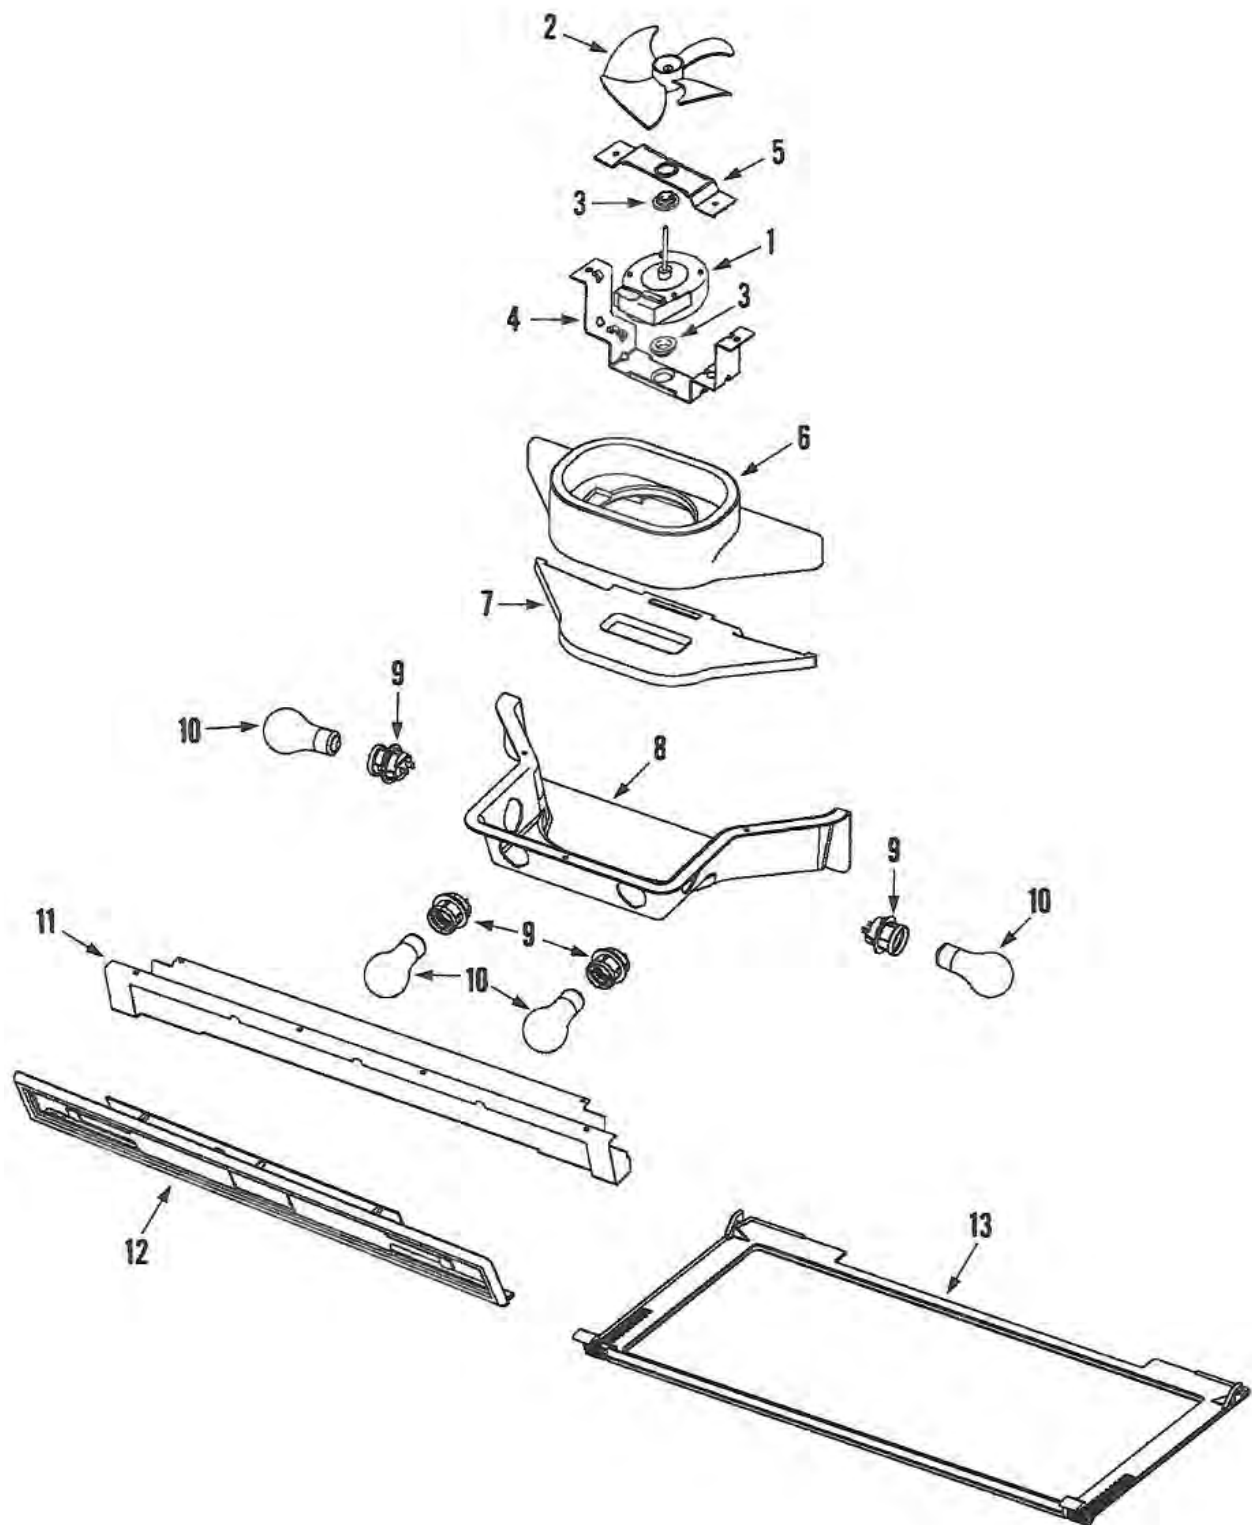

EF42BDCBSS - Controls Parts

Ref #	Dacor #	Whirlpool #	Description
1	103111	67003241	Motor, Fan
-	103199	400022-1	Screw, Motor
2	102942	67001370	Blade, Fan
3	102910	61005341	Bushing, Fan
4	102943	67001371	Bracket, Fan
-	102905	61005240	Screw, Bracket
5	103286	67006173	Retainer, Fan
6	102944	67001372	Diverter, Discharge (Top)
7	102945	67001373	Diverter, Discharge (Btm)
8	102946	67001374	Housing, Control
-	102895	61002819	Screw, Housing
9	102893	61001945	Receptacle, Bulb
10	102690	67003883	Blub, Light
11	103050	67001608	Bracket, Display
-	103197	400022-1	Screw, Bracket
-	102948	67001377	Screw, Bracket
12	103284	67006174	Display Asy., Main
13	103067	67001807	Shield, Light
-	102950	67001380	Screw, Shield
-	103122	67003449	Wire Harness, Control HSG.


EF42BDCBSS - Shelves & Accessories (Fresh Food)

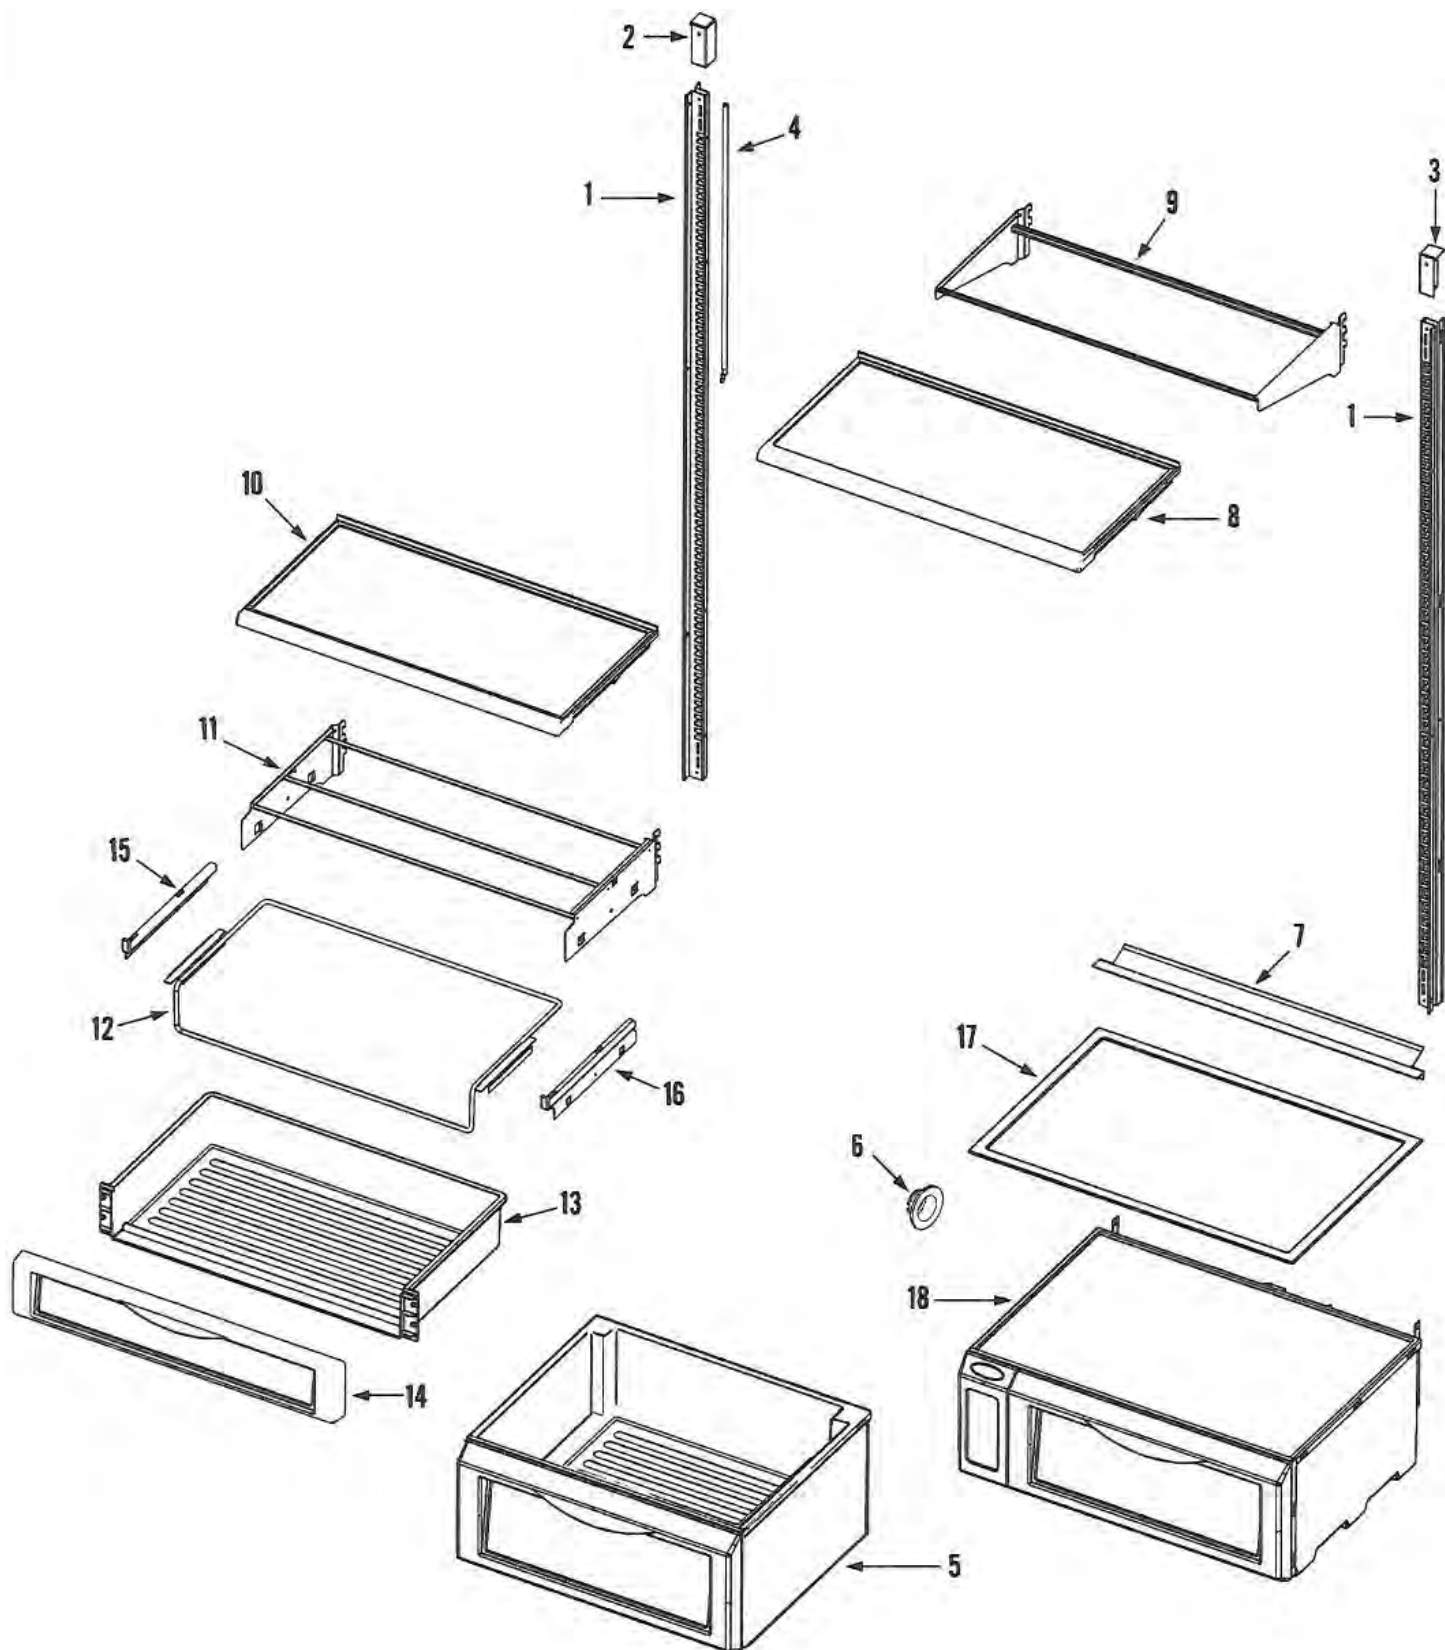

EF42BDCBSS - Shelves & Accessories (Fresh Food) Parts

Ref #	Dacor #	Whirlpool #	Description
1	102951	67001385	Rail, Shelf Support
-	102895	61002819	Screw, Rail (Rear)
-	102952	67001386	Screw, Rail (FRT)
2	102953	67001387	End Cap, Rail (LT)
-	102954	67001388	Screw, End Cap
3	102955	67001389	End Cap, Rail (RT)
-	102954	67001388	Screw, End Cap
4	102956	67001390	Thermister
-	102895	61002819	Screw, Thermister
5	103128	67006046	Pan Asy., Crisper
6	102900	61003725	Retainer, Duct
7	103143	67006176	Diverter, Air (Upr Crisper)
8	103142	67006175	Shelf, Spillproof
9	103066	67001804	Frame, Shelf
10	103142	67006175	Shelf, Deli
11	103073	67001842	Frame, Deli Shelf
12	103054	67001616	Cradle, Deli Pan
13	103052	67001614	Pan, Deli (Snack Tray)
14	103053	67001615	Front, Deli Pan
-	102911	67002798	Screw, Front
15	102962	67001399	Glide, Deli Pan (LT)
-	102954	67001388	Screw, Glide
16	102963	67001400	Glide, Deli Pan (RT)
-	102954	67001388	Screw, Glide
17	103046	67001593	Shelf, Spillproof
18	103290	67006223	Crisper Asy. (LWR-4 Buttons)
-	103291	67006224	Crisper Asy. (UPR-3 Buttons)
-	103075	67001871	Blanket, LWR Crisper


EF42BDCBSS - Evaporator Compartment

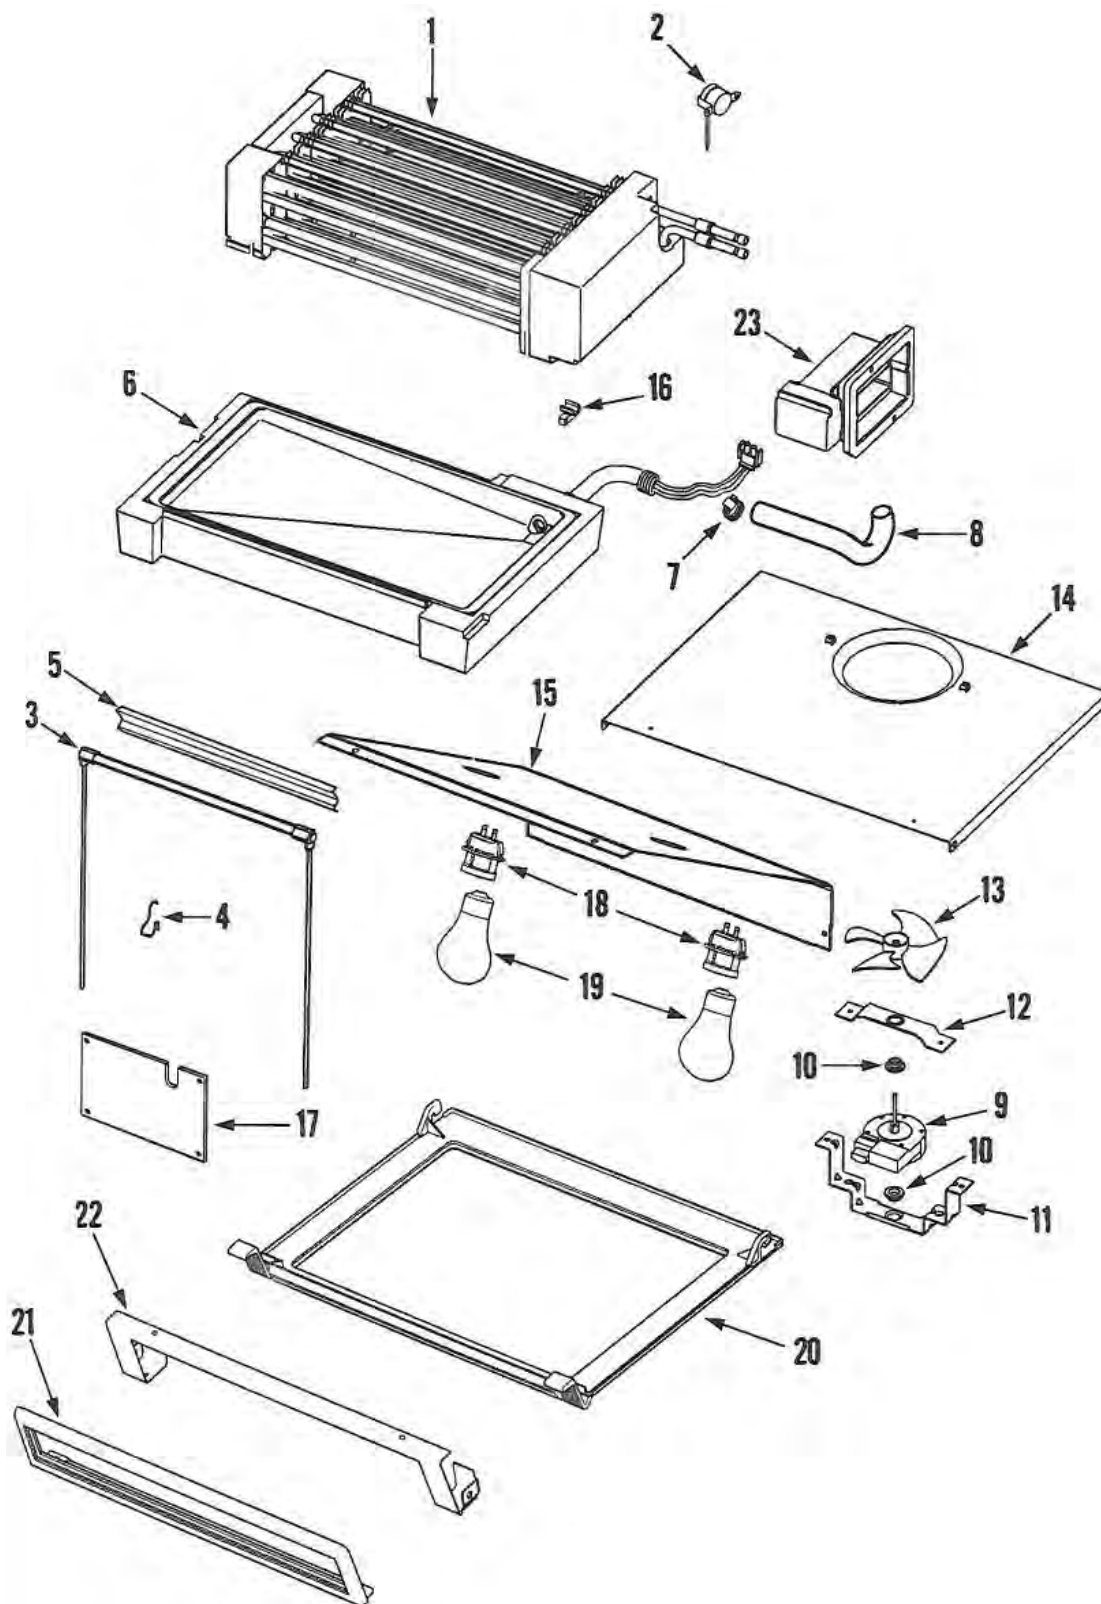

EF42BDCBSS - Evaporator Compartment Parts

Ref #	Dacor #	Whirlpool #	Description
1	103247	67002142	Evaporator Asy.
2	102965	67001404	Thermostat, Defrost
-	102895	61002819	Screw, Thermostat
3	103060	67001634	Heater, Defrost
4	103127	67005457	Clip, Defrost Heater
5	103062	67001637	Shield, Defrost Heater
6	103110	67003238	Tray Asy., Evaporator Drain
-	103061	67001635	Seal, Tray Asy.
7	102967	67001408	Clamp, Drain Tube
8	102968	67001409	Tube, Drain
9	103111	67003241	Motor, Fan
-	103199	400022-1	Screw, Motor
10	102910	61005341	Bushing, Fan
11	102943	67001371	Bracket, Fan
-	102905	61005240	Screw, Bracket
12	103286	67006173	Retainer, Fan
13	102969	67001410	Blade, Fan
14	103089	67002137	Cover, Asy., Evaporator
15	103295	67006177	Diffuser, Air
-	102954	67001388	Screw, Diffuser
-	102970	67001412	Gasket, Diffuser
16	103087	67001995	Thermister
17	103059	67001633	Insulation, Velora
-	102899	61003316	Retainer, Insulation
18	102893	61001945	Receptacle, Bulb
19	102690	67003883	Blub, Light
20	103051	67001611	Shield, Light
-	102950	67001380	Screw, Shield
21	103144	67006178	Facade
-	102948	67001377	Screw, Facade
22	103058	67001628	Bracket, Facade
-	102895	61002819	Screw, Bracket
23	103081	67001900	Damper Asy., Auto
-	102911	67002798	Screw, Damper Asy.
-	103123	67003456	Wire Harness, Freezer


EF42BDCBSS - Shelves & Accessories (Freezer)

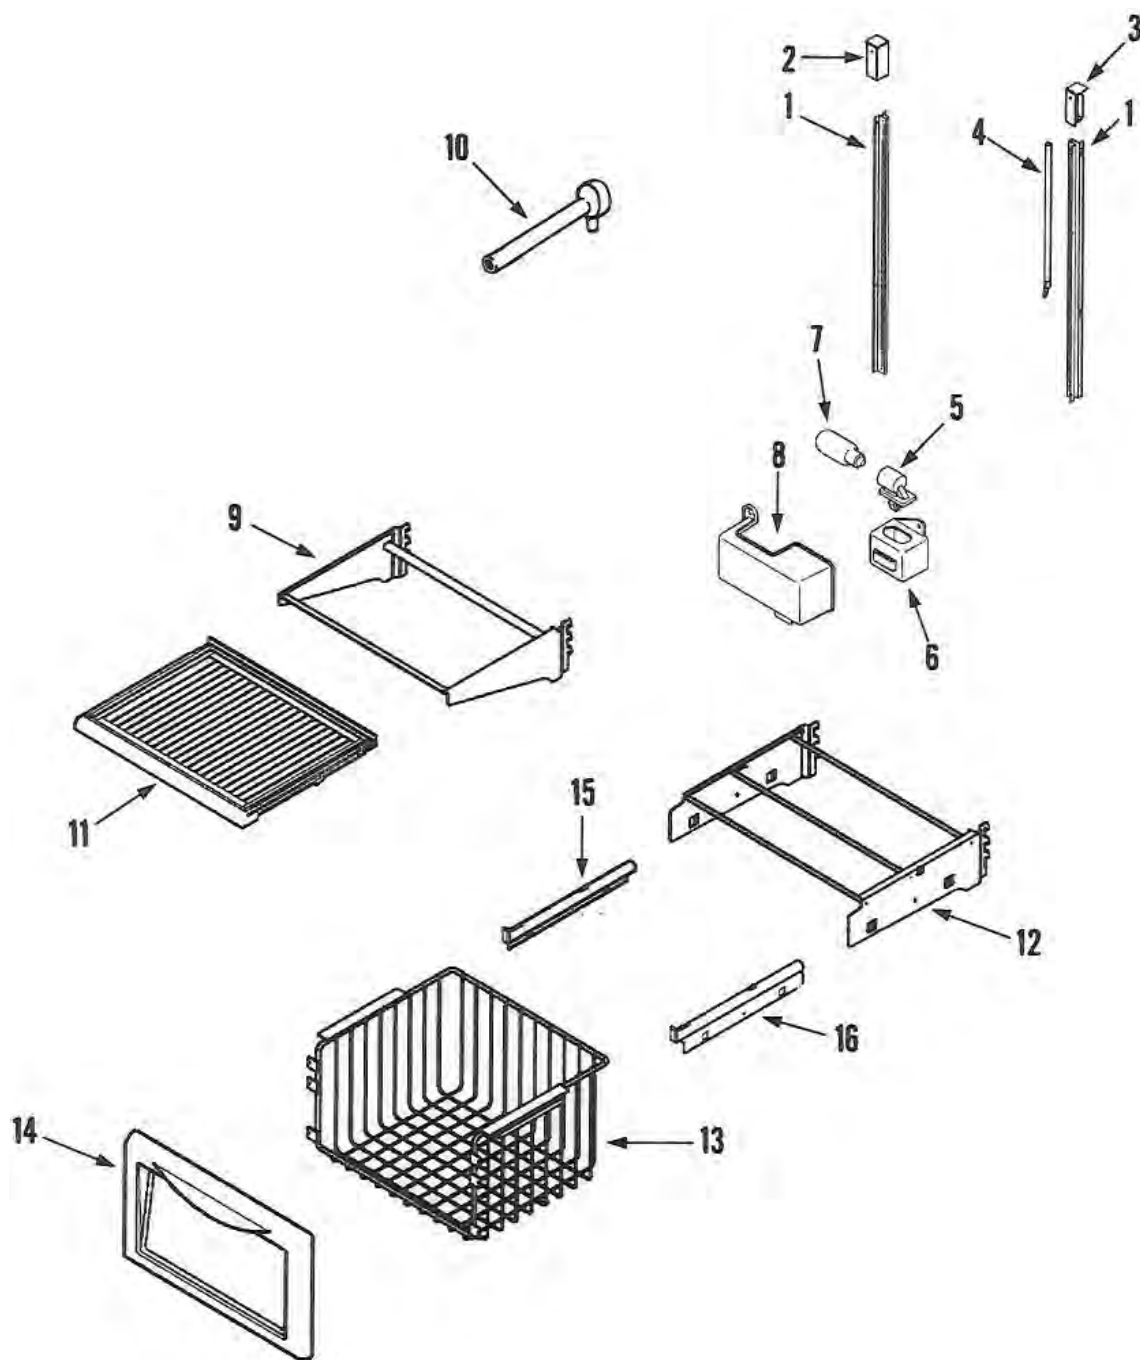

EF42BDCBSS - Shelves & Accessories (Freezer) Parts

Ref #	Dacor #	Whirlpool #	Description
1	103231	67001535	Rail, Shelf Support
-	102895	61002819	Screw, Rail (Rear)
-	102952	67001386	Screw, Rail (FRT)
2	102953	67001387	End Cap, Rail (LT)
-	102954	67001388	Screw, End Cap
3	102955	67001389	End Cap, Rail (RT)
-	102954	67001388	Screw, End Cap
4	106484	67001537	Thermister
-	102895	61002819	Screw, Thermister
5	102896	61003237	Receptacle, Bulb
6	102974	67001419	Adapter, Receptacle
-	102895	61002819	Screw, Adapter
7	103166	67006179	Bulb, Light
8	102975	67001420	Shield, Light
-	102895	61002819	Screw, Shield
9	103065	67001803	Frame, Shelf
10	103096	67002537	Grommet, Fill Tube
11	103068	67001809	Shelf, Freezer
12	103115	67003246	Frame, Basket
13	103125	67004829	Basket, Freezer
14	103049	67001598	Front, Basket
-	106312	61005481	Screw, Front
15	102962	67001399	Glide, Basket (LT)
-	102954	67001388	Screw, Glide
16	102963	67001400	Glide, Basket (RT)
-	102954	67001388	Screw, Glide


EF42BDCBSS - Fresh Food Door

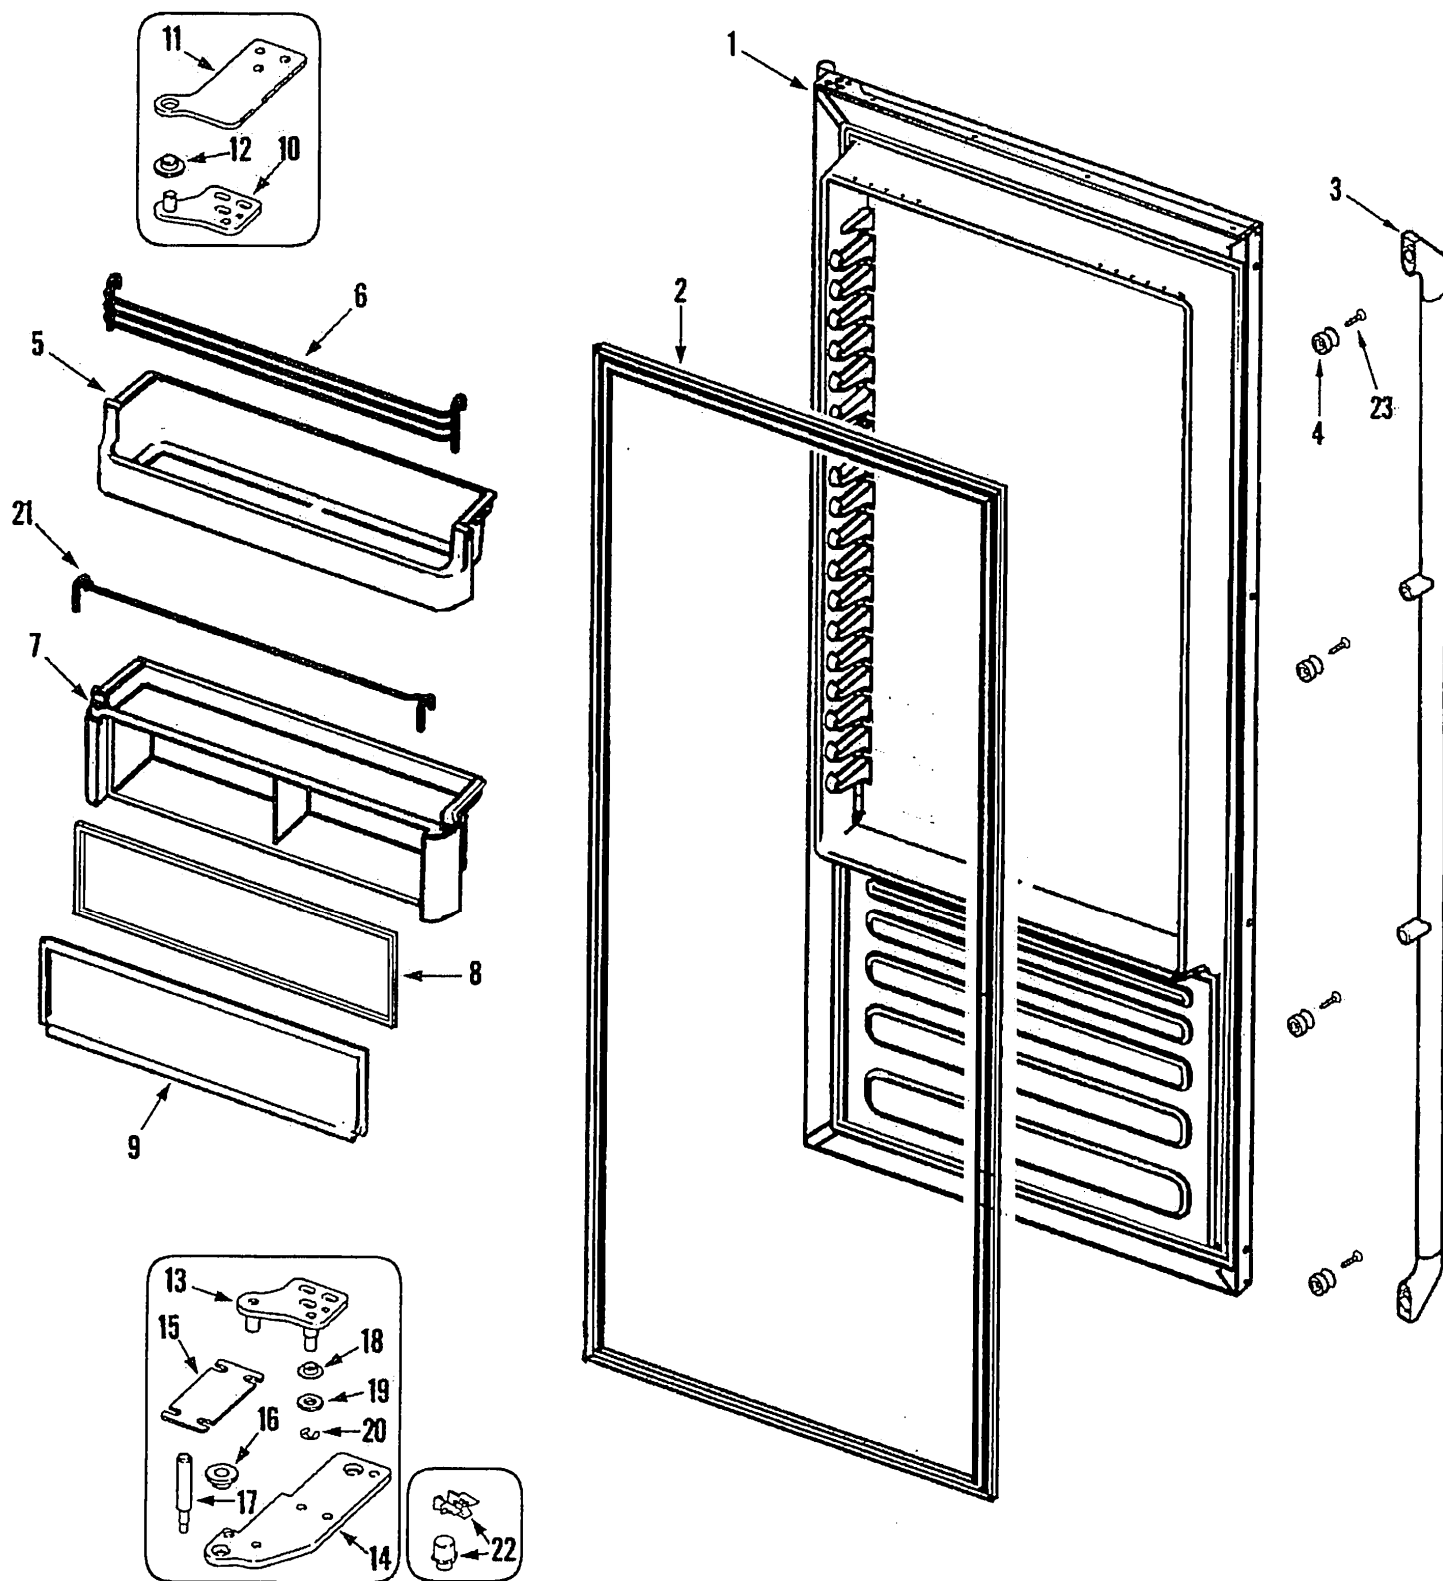

EF42BDCBSS - Fresh Food Door Parts

Ref #	Dacor #	Whirlpool #	Description
1	103091	67002146	Door Asy, Fresh Food (STNLS)
2	106470	67001595	Seal, F.F. Door
3	103146	67006180	Handle Asy.
-	102618	67006181	Screw, Set (End Cap)
-	102619	67006182	Screw, Set (Stand off & End Cap)
-	103148	67006184	Screw, Stand off to Handle
4	103149	67006189	Mount, Handle
5	103041	67001561	Shelf, Pick Off
6	103445	67006183	Wire, Pick Off Shelf
7	103043	67001565	Compartment, Dairy
8	103044	67001579	Seal, Dairy Door
9	103090	67002138	Door Asy, Dairy
10	102996	67001446	Hinge, Upper
-	102997	67001447	Screw, Hinge
-	103012	67001466	Screw, Hinge
11	102998	67001448	Plate, Upper Hinge
-	102999	67001449	Screw, Plate
12	103000	67001450	Bushing, Upper Hinge
13	103446	12002137	Hinge, Lower
-	102997	67001447	Screw, Hinge
-	103012	67001466	Screw, Hinge
14	103001	67001452	Plate, Lower Hinge
-	103035	67001531	Screw, Plate
15	103455	67001453	Shim, Lower Hinge
16	103003	67001454	Bushing, Lower Hinge
17	103005	67001456	Stud, Lower Hinge
-	103004	67001455	Nut, Hinge Stud
18	103006	67001458	Bushing, Closer
19	103007	67001459	Spacer, Closer
20	103008	67001460	Retainer, Closer Extension
21	103098	67002546	Wire, Dairy Compartment
22	103057	67001626	Stop Asy, Door
23	103150	67006190	Screw, Handle Mount


EF42BDCBSS - Freezer Door

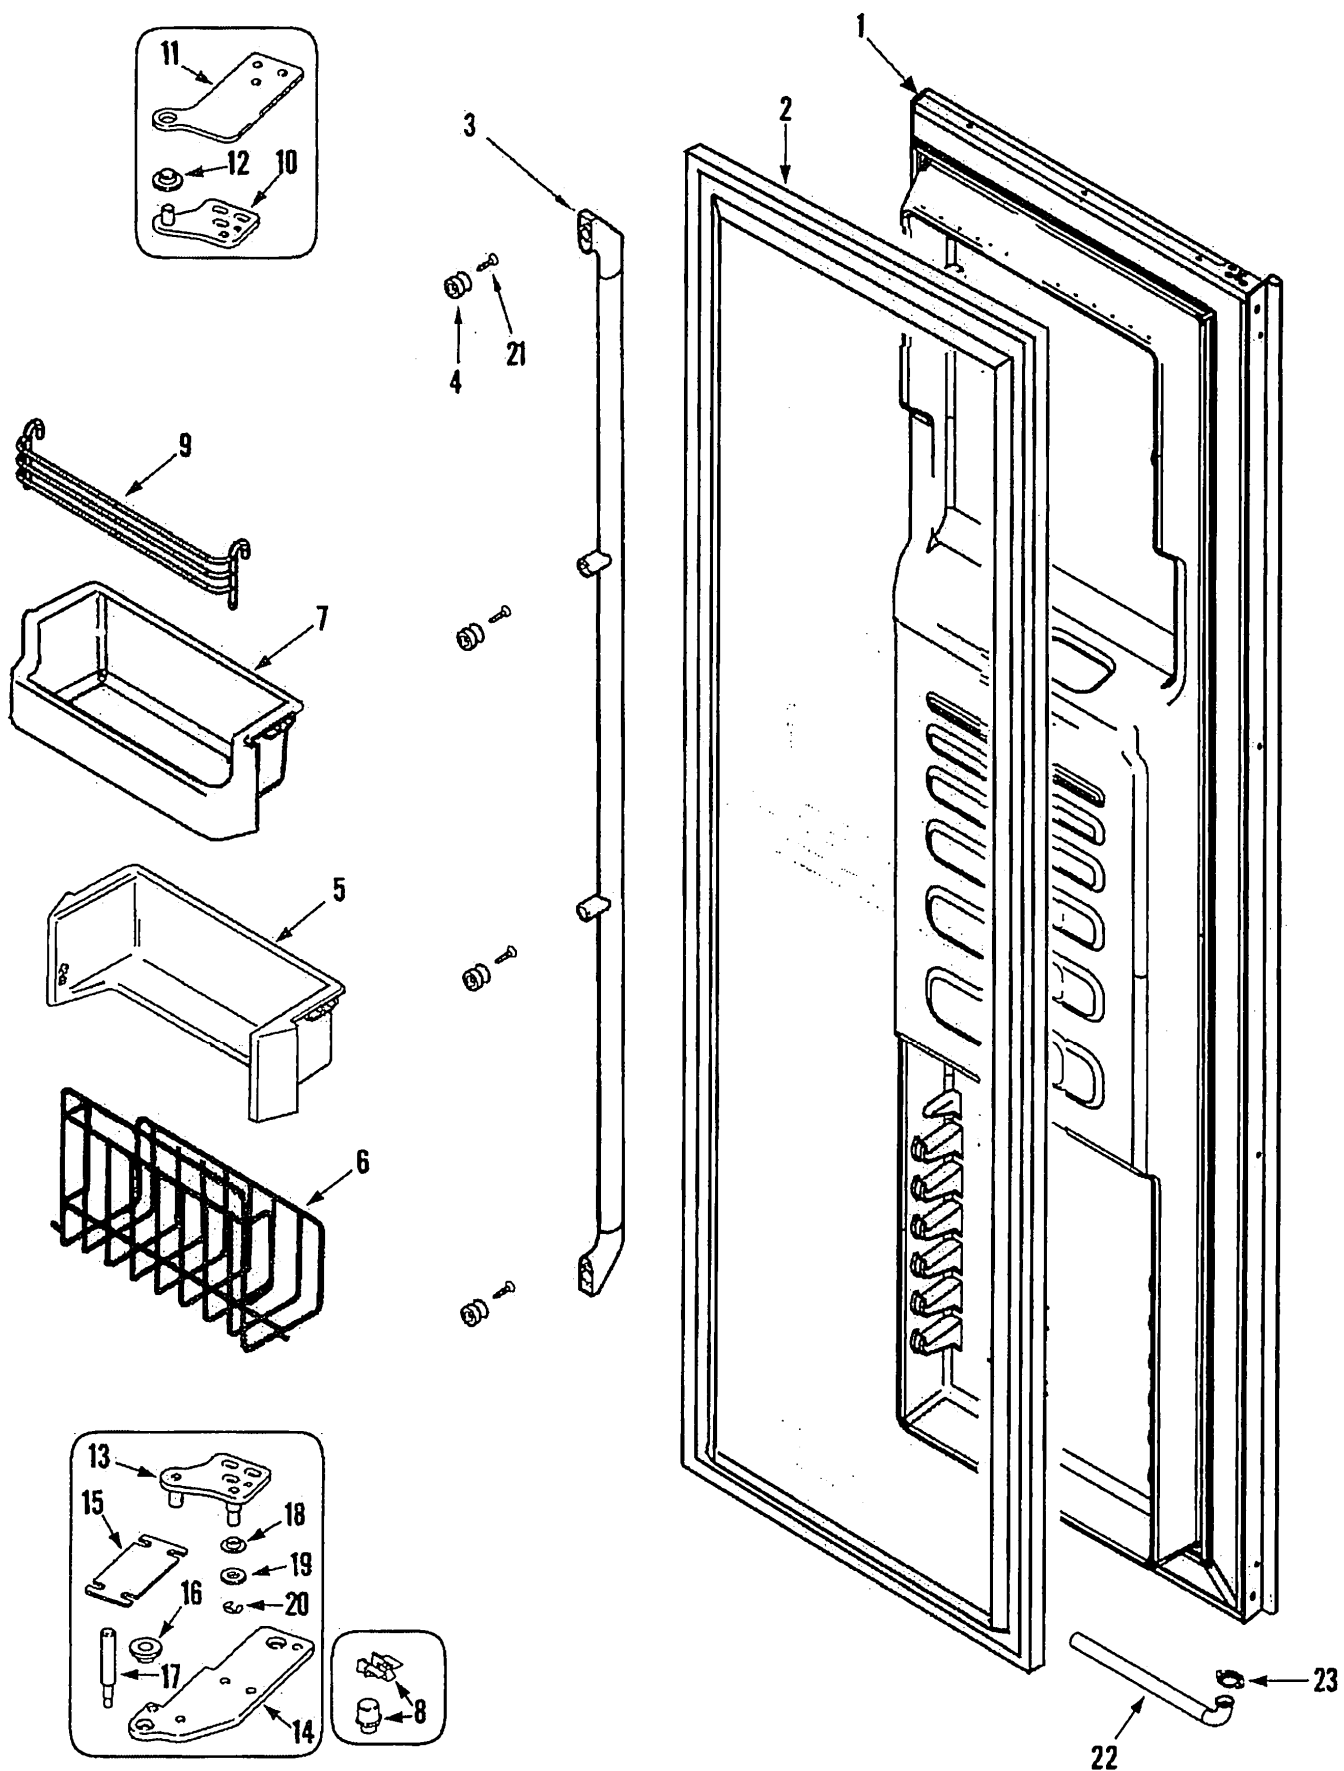

EF42BDCBSS - Freezer Door Parts

Ref #	Dacor #	Whirlpool #	Description
1	103248	67002145	Door Asy, Freezer (STNLS)
2	103047	67001596	Seal, Freezer Door
3	103146	67006180	Handle Asy.
-	102618	67006181	Screw, Set (End Cap)
-	102619	67006182	Screw, Set (Stand off & End Cap)
-	103148	67006184	Screw, Stand off to Handle
4	103149	67006189	Mount, Handle
5	103045	67001584	Frame, Basket
6	103100	67002548	Basket, Tilt
7	103042	67001562	Shelf, Pick Off
8	103057	67001626	Stop Asy, Door
9	103151	67006191	Wire, Pick Off Shelf
10	103014	67001471	Hinge, Upper
-	102997	67001447	Screw, Hinge
-	103012	67001466	Screw, Hinge
11	102998	67001448	Plate, Upper Hinge
-	102999	67001449	Screw, Plate
12	103000	67001450	Bushing, Upper Hinge
13	103307	67003242	Hinge, Lower
-	102997	67001447	Screw, Hinge
-	103012	67001466	Screw, Hinge
14	103015	67001473	Plate, Lower Hinge
-	103035	67001531	Screw, Plate
15	103455	67001453	Shim, Lower Hinge
16	103003	67001454	Bushing, Lower Hinge
17	103005	67001456	Stud, Lower Hinge
-	103004	67001455	Nut, Hinge Stud
18	103006	67001458	Bushing, Closer
19	103007	67001459	Spacer, Closer
20	103008	67001460	Retainer, Closer Extension
21	103150	67006190	Screw, Handle Mount
22	103245	67001972	Conduit, Pivoting
23	103244	67001971	Bearing, Conduit
-	103103	67002819	Screw, Bearing


EF42BDCBSS - Fountain

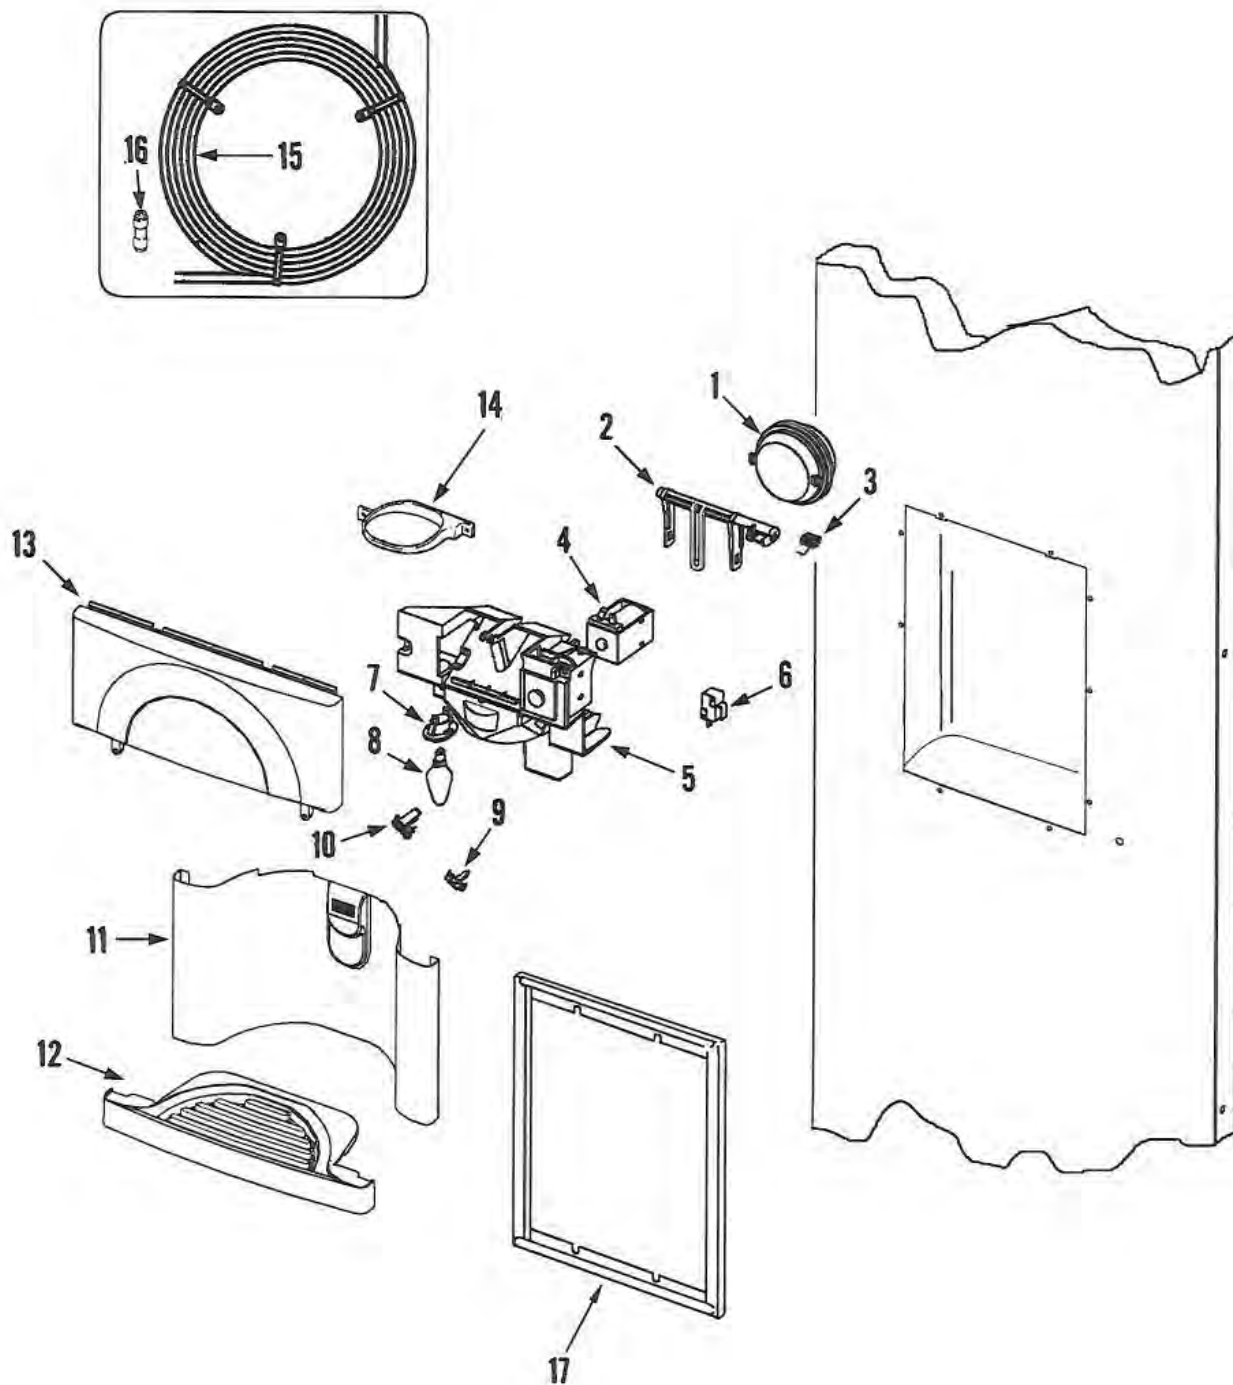

EF42BDCBSS - Fountain Parts

Ref #	Dacor #	Whirlpool #	Description
1	103084	67001964	Door Asy., Ice
2	103070	67001837	Strike, Center
3	103308	61004388	Spring, FTN. Return
4	103069	67001835	Solenoid
-	102898	61003297	Screw, Solenoid
5	102902	61003803	Bracket, Fountain (BLK)
-	103309	415013-35	Screw, Bracket
-	102904	61004757	Foam Seal
6	102912	61005520	Switch, Limit
-	103310	415041-35	Screw, Switch
7	102897	61003291	Receptacle, Bulb
8	103204	63179-1	Bulb, Light
9	106486	67001549	Actuator
10	103037	67001550	Holder, Actuator
11	103039	67001553	Liner Pad Asy., (BLK)
-	103085	67001969	Screw, Liner
12	103038	67001551	Grill (BLK)
13	103171	67006192	Escutcheon Asy. (BLK)
-	103313	415014-35	Screw, Escutcheon
14	103076	67001881	Guard, Chip (BLK)
-	103086	67001970	Screw, Guard
15	103077	67001893	Coil., Water
-	102895	61002819	Screw, Coil
16	103460	61001266	Union, Reducing (5/16"-3/8")
17	103105	67002955	Collar, Escutcheon (BLK)
-	103063	67001640	Wire Harness, FTN. Bracket
-	106487	67001641	Wire Harness, FTN.
-	103240	67001642	Wire Harness, FTN. Switch


EF42BDCBOL - Ice Maker

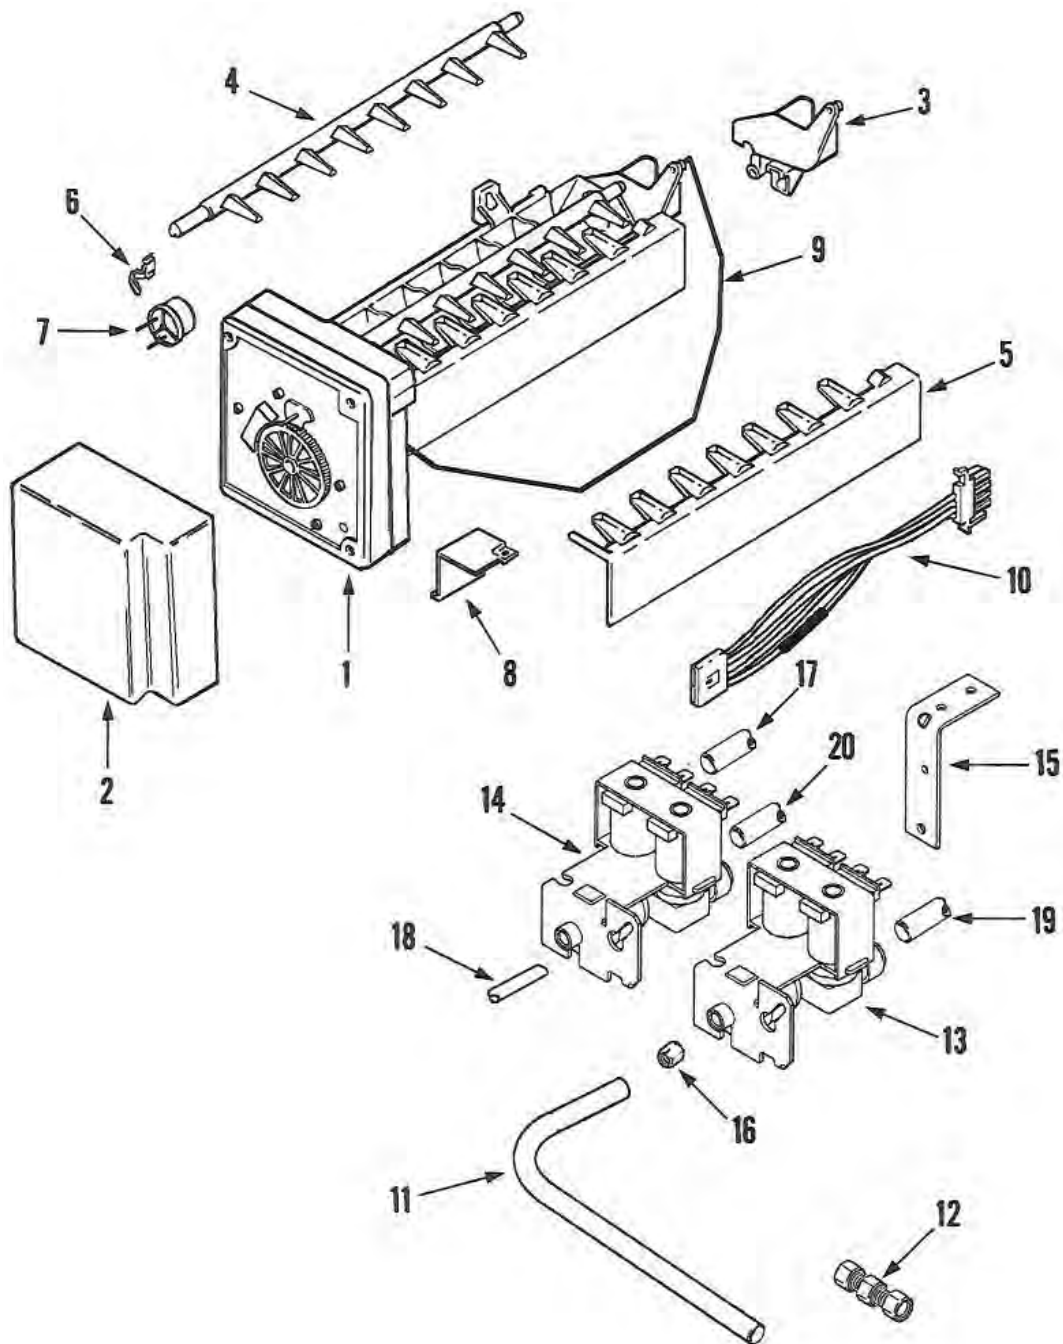

EF42BDCBSS - Ice Maker Parts

Ref #	Dacor #	Whirlpool #	Description
1	103040	67001557	Ice Maker Asy. (115v)
-	103309	415013-35	Screw, Ice Maker
2	103026	67001486	Cover, Ice Maker
3	102843	95100-1	Inlet, Water
4	102841	95101-1	Ejector, Ice
5	102842	95102-1	Stripper, Ice
6	102849	95104-1	Retainer, Thermostat
7	103207	95092-1	Thermostat
-	103208	95093-1	Cement, Alumilastic (4 oz.)
8	102847	95107-1	Bracket, Module & Heater
-	102848	95108-1	Screw, Bracket
9	103234	67001538	Arm, Sensor
10	103239	67001639	Wire Harness, Ice Maker
11	103024	67001484	Tube, Copper Inlet
12	103203	54267-1	Union, Compression
13	103018	67001478	Valve, Water (Filter)
-	102895	61002819	Screw, Valve
14	103227	67001435	Valve, Water (Ice Maker)
-	102895	61002819	Screw, Valve
15	103020	67001480	Bracket, Water Valve
-	102895	61002819	Screw, Bracket
16	103025	67001485	Nut & Sleeve Asy.
17	103228	67001493	Tubing, Valve to Ice Maker
-	103457	61001161	Clamp, Tubing
18	103022	67001482	Tubing, Valve to Filter Outlet
19	103023	67001483	Tubing, Valve to Filter Inlet
20	103319	67187-25	Tubing, Valve to Coil

EF42BDCBSS - Ice Bin

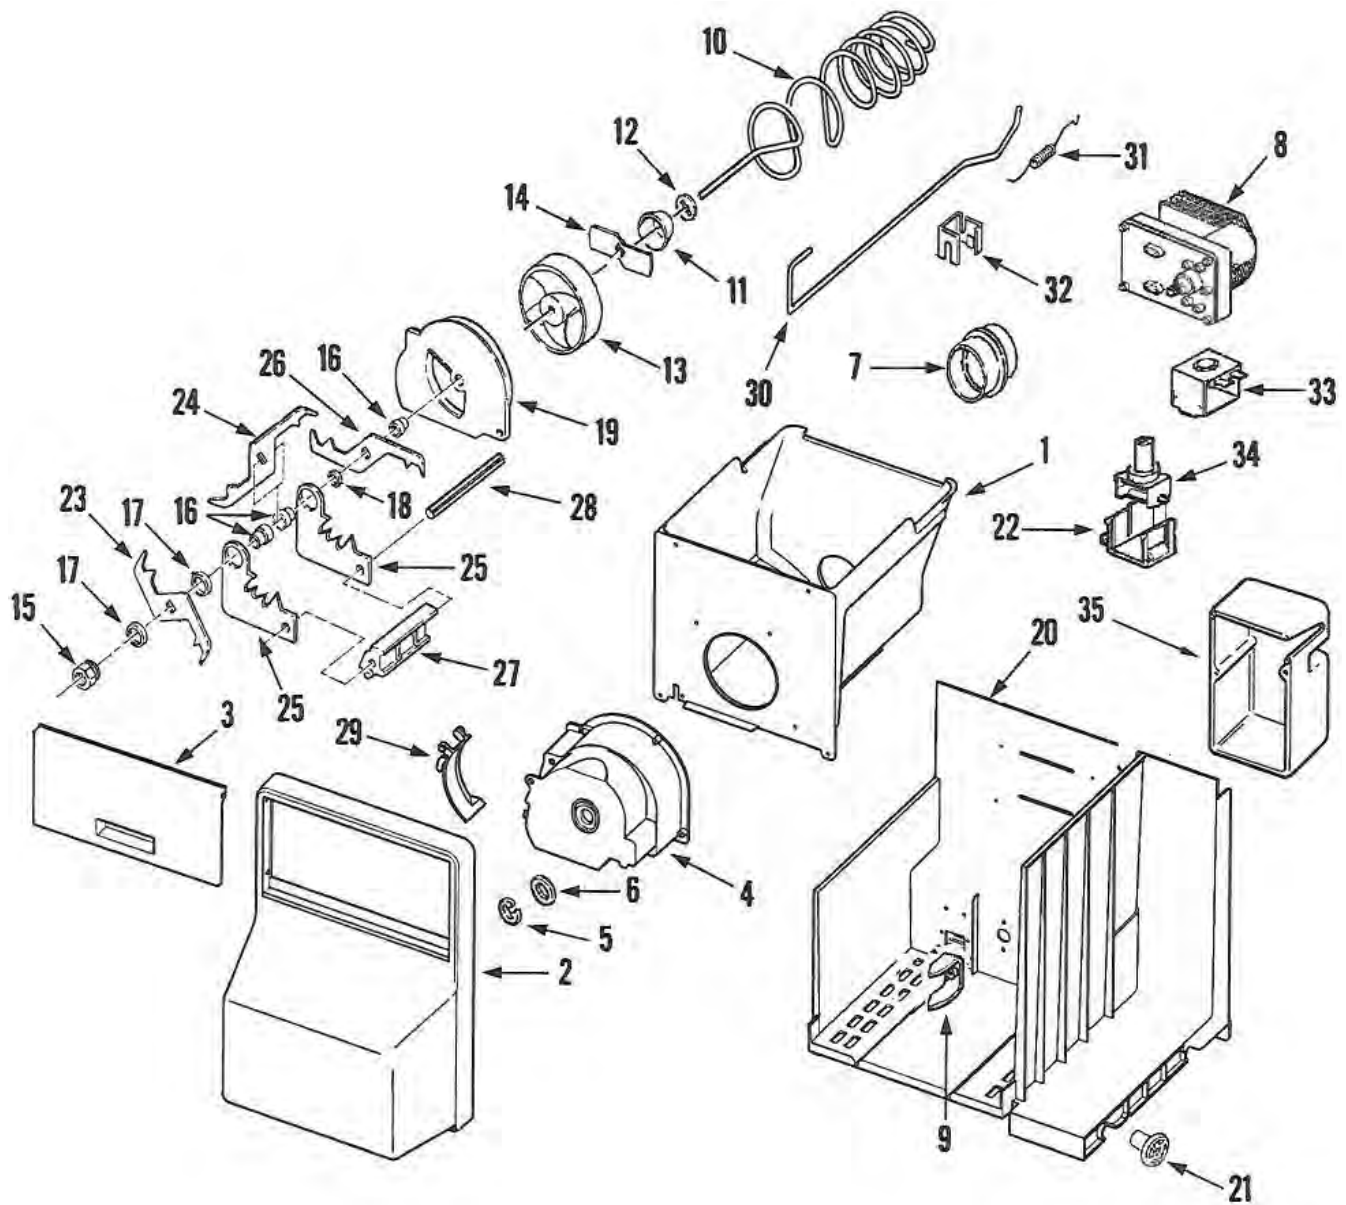

EF42BDCBSS - Ice Bin Parts

Ref #	Dacor #	Whirlpool #	Description
1	103229	67001533	Bin, Ice
2	103236	67001542	Front, Ice Bin
-	103309	415013-35	Screw, Bin Front
3	103232	67001536	Door, Ice Access
4	103217	61004804	Housing, Crusher
-	103309	415013-35	Screw, Housing
-	103220	61004869	Seal, Housing
5	103320	69704-1	Ring, Snap
6	103321	69703-1	Washer, Retainer
7	103210	61003336	Ring, Drive
8	103472	12001773	Motor Asy., Auger (w/ Yoke)
-	103322	61003324	Screw, Motor
9	103323	63052-1	Yoke
10	103230	67001534	Auger
11	103324	69699-1	Cone, Ice Deflector
12	103325	69698-1	Washer, Cone Stop
13	103326	70036-1	Impeller
14	103327	69755-1	Plate, Drive
15	103328	69709-1	Nut, Auger
16	103423	69697-1	Bearing, Spacer
17	103330	69696-1	Spacer, Blade
18	103331	69696-2	Spacer, Blade
19	103332	69701-1	Plate, Impeller
20	103333	67006193	Enclosure
-	103199	400022-1	Screw, Enclosure
21	103221	61005080	Support, Enclosure
-	103199	400022-1	Screw, Support
22	103430	69715-1	Guide, Yoke
-	103334	400026-12	Screw, Guide
23	103335	69702-3	Blade, Crusher
24	103433	69702-2	Blade, Crusher
25	103337	69706-1	Blade, Crusher
26	103338	69702-1	Blade, Crusher
27	103339	69708-1	Lock, Fixed Blade
28	103340	69705-1	Pin, Blade Lock
29	103341	69718-1	Door, Ice Crusher
30	103237	67001543	Rod, Crusher Control
31	103218	61004808	Spring, Control Rod
32	103219	61004809	Bracket, Control Rod
33	103222	61005253	Solenoid
-	103322	61003324	Screw, Solenoid

EF42BDCBSS - Ice Bin Parts

Ref #	Dacor #	Whirlpool #	Description
34	103223	61005844	Yoke Asy.
35	103440	67006272	Cover, Solenoid
-	103441	67004873	Cover, Ice Maker Bottom
-	103442	67004875	Spacer, Cover
-	103346	67004876	Screw, Cover

EF42BDCBSS - Wire Diagram

NOTES:

POWER SUPPLY DC GROUND AND CABINET EARTH GROUND ARE NOT THE SAME.

FOUNTAIN HEATERS (IF APPLICABLE) ARE FOAMED IN PLACE AND ARE NOT SERVICEABLE.

COMPONENT RESISTANCE (OHMS)	
DRAIN TUBE HEATER	882
FOIL DRIP PAN HEATER 42°	1863
FOIL DRIP PAN HEATER 48°	1323
GLASS DEFOREST HEATER 42°	34.94
GLASS DEFOREST HEATER 48°	30.28
CZT HEATER	113
DEFOREST THERMOSTAT	240K
UPPER FOUNTAIN HEATER	338
LOWER FOUNTAIN HEATER	845

