

**Oven Control Panel Parts List  
Single and Double Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	805081 811231	Control Head, 30, Sngl, Sst Control Head, Sngl, SS 30, SVCE (Rohs, Intl Only)
	805104 812068	Control Head, 30, Dbl, Sst Control Head, Dbl, SS 30, SVCE (Rohs, Intl Only)
	805106 811232	Control Head, 30, Sngl, Plt Control Head, Sngl, Plt 30, SVCE (Rohs, Intl Only)
	805107 811229	Control Head, 30, Dbl, Plt Control Head, Dbl, Plt 30, SVCE (Rohs, Intl Only)
	805109 811233	Control Head, 30, Sngl, Blk Control Head, Sngl, Blk 30, SVCE (Rohs, Intl Only)
	805110 811230	Control Head, 30, Dbl, Blk Control Head, Dbl, Blk 30, SVCE (Rohs, Intl Only)
2	805178	Wall Oven Display Pinion Rpl. Pkg.
3	809725 809727 809726	Motor, Drive Assy., Sst Motor, Drive Assy., Plt Motor, Drive Assy., Blk
4	801231 801738 801740	C-Channel Bottom, 30", Sst C-Channel Bottom, 30", Plt C-Channel Bottom, 30", Blk
5	801230 801737 801739	C-Channel Top, 30", Sst C-Channel Top, 30", Plt C-Channel Top, 30", Blk
6	802964	Pin, Stop, Control Panel
7	801538	Screw, 8-32x1/2"
8	802791 801555 801556	Mtg, Control Panel, Rt SS Mtg, Control Panel, Rt Black Mtg, Control Panel, Rt Plat.
9	803484	Bearing, Flange, Control Panel
10	801920	Bracket, Switch, Control Panel
11	801549	Screw, 8-18x1/2"
12	809116	Switch, Actuation, Control Panel
13	801677	Screw, 2-56x3/8"
14	800704	Plunger, Control Display


**36" Oven Control Panel Parts List  
Single Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	805105 811234	Control Head, 36, Sngl, Sst Control Head, Sngl, Sst 36, SVCE (Rohs, Intl Only)
	805108 811235	Control Head, 36, Sngl, Plt Control Head, Sngl, Plt 36, SVCE (Rohs, Intl Only)
	805111 811236	Control Head, 36, Sngl, Blk Control Head, Sngl, Blk 36, SVCE (Rohs, Intl Only)
2	805178	Wall Oven Display Pinion Rpl. Pkg.
3	809725 809727 809726	Motor, Drive Assy., Sst Motor, Drive Assy., Plt Motor, Drive Assy., Blk
4	801525 801742 801744	C-Channel Bottom, 36", Sst C-Channel Bottom, 36", Plt C-Channel Bottom, 36", Blk
5	801526 801741 801743	C-Channel Top, 36", Sst C-Channel Top, 36", Plt C-Channel Top, 36", Blk
6	802964	Pin, Stop, Control Panel
7	801538	Screw, 8-32x1/2"
8	802791 801555 801556	Mtg, Control Panel, Rt SS Mtg, Control Panel, Rt Black Mtg, Control Panel, Rt Plat.
9	803484	Bearing, Flange, Control Panel
10	801920	Bracket, Switch, Control Panel
11	801549	Screw, 8-18x1/2"
12	809116	Switch, Actuation, Control Panel
13	801677	Screw, 2-56x3/8"
14	800704	Plunger, Stainless Steel

**Not Shown**

803319 Spring, Ribbon Cable, Short  
803357 Mount, Cable-Tie, Adhesive

Oven Control Panel Exploded View  
Single and Double Oven

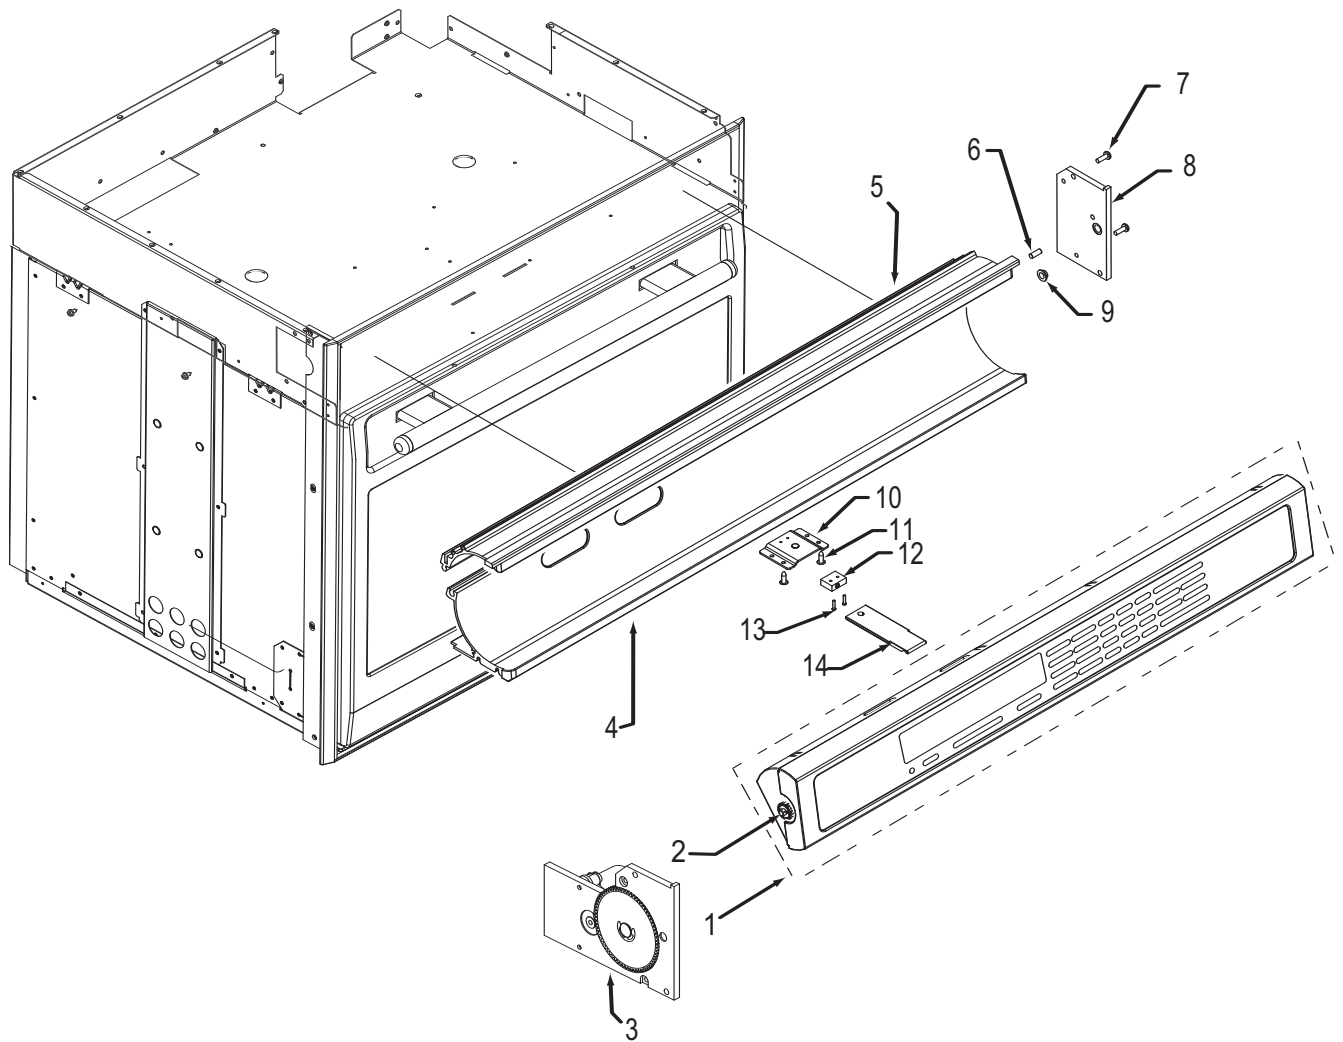

**30" Oven Modules Parts List  
Single and Double Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	801542	Screw, 8-18x3/8"
2	800381	Fan, Cooling, Upper
3	808579	Bracket, Air Diverter Top
4	801363	Control Board, Stepper Motor
6	801912	Strain Relief, Plastic
7	800385	Cover, Latch
8	803356	Plate, Mounting Hardware
9	807053	Board, Relay"
10	812454	Controller, Oven, Single, 30"
	812456	Controller, Oven, Single, 30" International
	812455	Controller, Oven, Double, 30"
	812457	Controller, Oven, Double, 30" International
11	808583	Bracket-Z, Latch, Top Oven
12	808586	Bracket, Support, Top Module
13	808581	Bracket, Cord, Power
15	800263	Latch, Motorized
16	807542	Pan, Module, 30"
17	N/A	
18	808588	Bracket, Air Diverter, DO
19	820129	Bracket-Z, Latch, Bottom Oven, DO


**36" Oven Modules Parts List  
Single Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	801542	Screw, 8-18x3/8"
2	800381	Fan, Cooling, Upper
3	801224	Bracket, Air Diverter Top
4	801363	Control Board, Stepper Motor
5	800950	Transformer, Light
6	801912	Strain Relief, Plastic
7	800385	Cover, Latch
8	803356	Plate, Mounting Hardware
9	807053	Board, Relay
10	813873	Oven controller, Single 36"
	813874	Oven controller, Single 36" International
11	820130	Bracket-Z, Latch
12	808586	Bracket, Support, Top Module
13	808581	Bracket, Cord, Power
14	804554	Switch, Thermostat, 36"
15	800263	Latch, Motorized
16	807543	Pan, Module, 36"

**Not Shown**

809449	Cable, Relay to Controller, 28"
809450	Cable, Relay to Controller, 21"
801714	Power Cord Conduit, Single
812348	Power Cord Conduit, Double

Oven Modules Exploded View  
Single and Double Oven

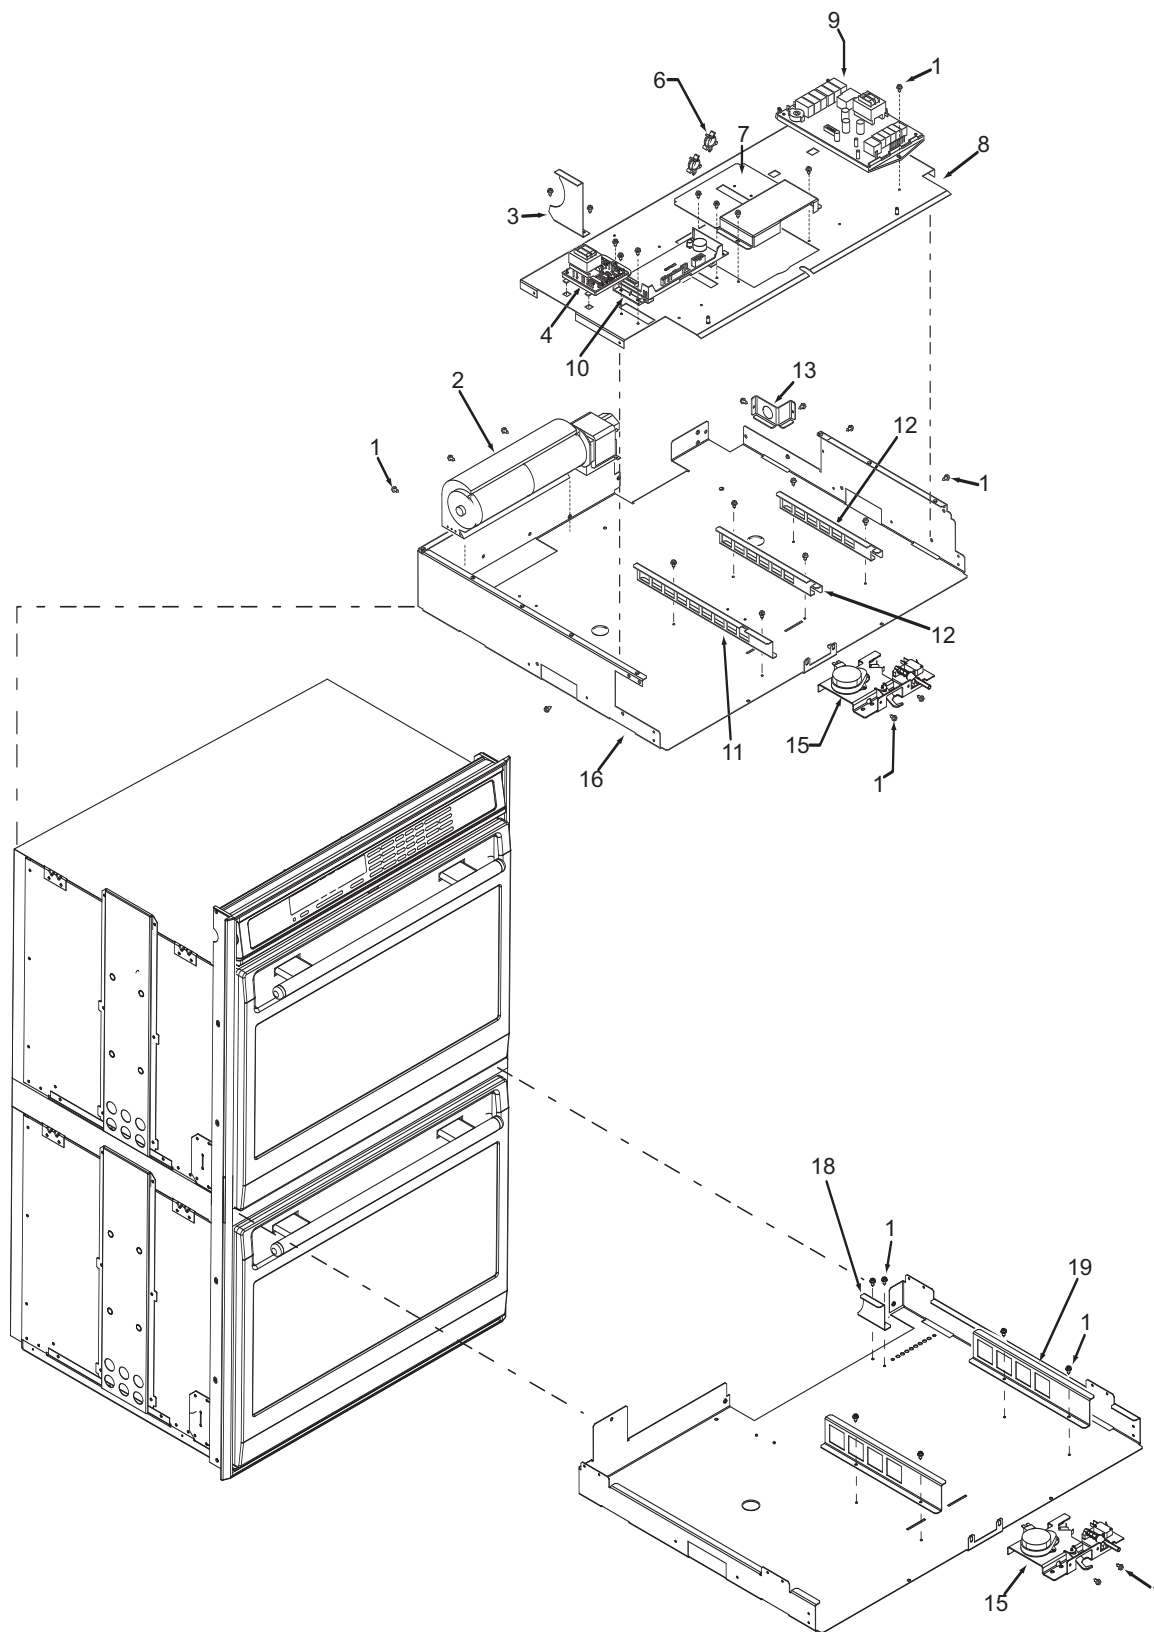

**30" Oven Cavity Parts List  
Single and Double Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	N/A	Cavity, Oven (Contact Factory)
2	812453	Light, Oven
3	808638	Cover, Probe Switch
4	808639	Switch, Probe
5	808640	Catalyst, Smoke
6	808641	Sensor, Temperature
7	809820	Fan, Convection Assy., Cw
8	801544	Screw, 8-32x1/2"
9	808642	Pan, Broil Element
10	808643	Element, Broil, 30"
11	808648	Guide, Rack, Right
12	811453	Screw, Shoulder, 8-18
13	808647	Guide, Rack, Left
14	802704	Screw, 8-32x1/2 Lo Profile
15	808650	Convection Baffle Assembly, 30"
16	808652	Probe, Temperature
17	808653	Rack, Oven 30"
18	808654	Rack, Oven Flat 30"
19	808656	Stone, Pizza
20	808657	Rack, Pizza Stone, 30"
21	803373	Clip, Retainer Hinge
22	802929	Screw 6-20X5/8 PH TRS HD T-AB, Black
23	803323	Cover, Plate
24	804712	Accessory Pkg Broiler Pan Set
25	808659	Gasket, Cavity, 30"
26	808649	Mica Washer w/o Adhesive
27	809818	Fan, Convection Assy., Ccw


**36" Oven Cavity Parts List  
Single Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	N/A	Cavity, Oven (Contact Factory)
2	812453	Light, Oven
3	808638	Cover, Probe Switch
4	808639	Switch, Probe
5	808640	Catalyst, Smoke
6	808641	Sensor, Temperature
7	809820	Fan, Convection Assy., Cw
8	801544	Screw, 8-32x1/2"
9	808642	Deflector, Pan Broil
10	808643	Element, Broil, 36"
11	806518	Guide, Rack, Right
12	806523	Screw, Shoulder, 8-18
13	806517	Guide, Rack, Left
14	802704	Screw, 8-32x1/2 Lo Profile
15	802900	Convection Baffle Assembly, 36"
16	808652	Probe, Temperature
17	802989	Rack, Oven 36"
18	803063	Rack, Oven Flat 36"
19	808656	Stone, Pizza
20	800736	Rack, Pizza Stone, 36"
21	803373	Clip, Retainer Hinge
22	802929	Screw 6-20X5/8 PH TRS HD T-AB, Black
23	803323	Cover, Plate
24	804712	Accessory Pkg Broiler Pan Set
25	806928	Gasket, Cavity, 36"
26	808649	Mica Washer w/o Adhesive
27	809818	Fan, Convection Assy., Ccw

**Not Shown**

812452	Light Bulb
808655	Pizza Peel
808651	Hard Fiber Flat Washer

**Oven Cavity Exploded View  
Single and Double Oven**

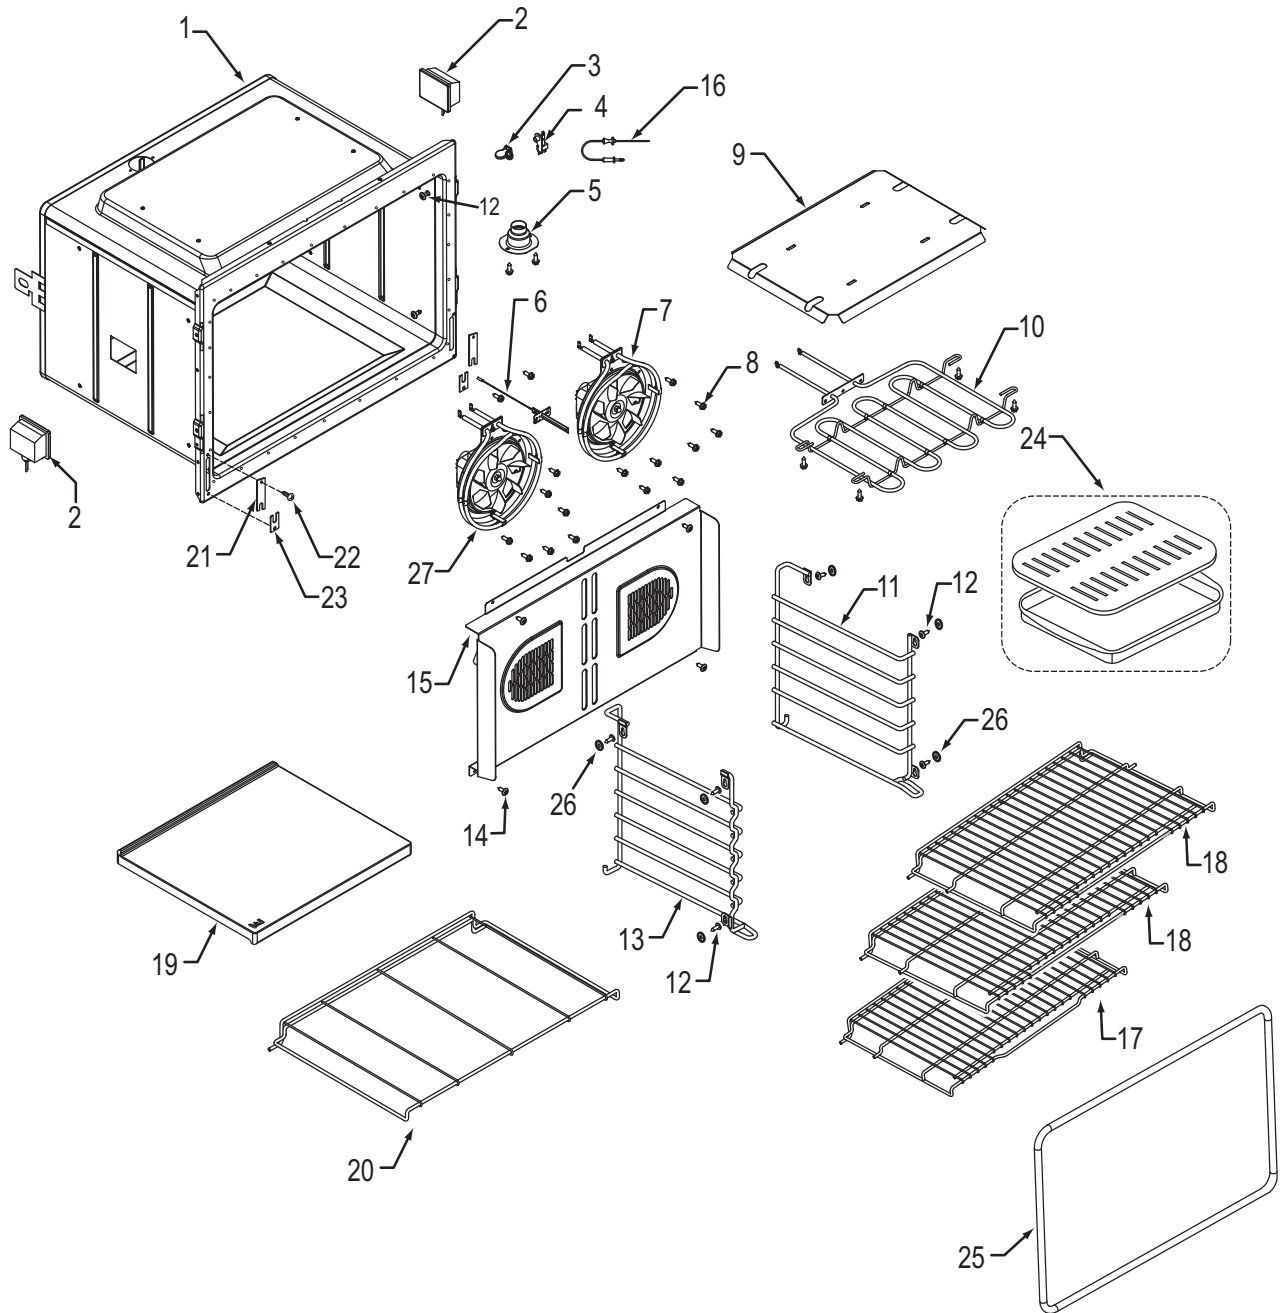


**30" Oven Door Parts List  
Single and Double Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		*Special order, Call Factory Parts Department
2	800523	Left Door Rack Guide, 30", assy
3	802929	Sems Ph Hd Washer, 6-20x5/8
4	800522	Right Door Rack Guide, 30"
5	803379	Screw, 8-18x1/2"
6	809816	Weldment, Liner, Door 30"
7	801102	Striker Plate, Door Latch
8	801542	Screw, 8-18x3/8"
9	800318	Gasket, Rope, Glass Pack, 30"
10	809115	Hydraulic Oven Door Hinge
11	809553	Triple Pane Oven Glass Pack, 30"
12	806610	Insulation, Door, Inner Top, 30"
13	806595	Insulation, Door, Inner, Sides, 30"
14	800319	Shield, Heat, Inner, Door, 30"
15	810794	Insulation, Door, Center, Top, 30"
16	820116	Heat Deflector, Center, 30"
17	803835	Shield, Heat, Door, 30"
18	N/A	
19	801540	Screw, 10-24x2-1/4"
20	800314	Bracket, Door, Outer, Mounting
21	802940	Door Skin, Outer w/window, 30" F/S
	803227	Door Skin, Outer w/window, 30" U/S
	803232	Door Skin, Outer w/window, 30" F/S, No Logo
	803235	Door Skin, Outer w/window, 30" U/S, No Logo
	803230	Door Skin, Outer w/window, 30" U/B
	803236	Door Skin, Outer w/window, 30" U/B, No Logo
	803231	Door Skin, Outer w/window, 30" U/P
	803237	Door Skin, Outer w/window, 30" U/P, No Logo
22	801204	Handle, Oven Door, Assy., 30", Sst
	801599	Handle, Oven Door, Assy., 30", Plt
	801600	Handle, Oven Door, Assy., 30", Blk
23	806606	Insulation, Door, Ctr., Bottom, 30"
24	806605	Insulation, Door, Ctr., Side, 30"
25	806615	Insulation, Door, Inner Top
26	800418	Nut, 8-32 Hex Nut W/Lock Washer
27	800689	Hinge, Wall Oven, 30"

**36" Oven Door Parts List  
Single Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		*Special order, Call Factory Parts Department
2	801816	Left Door Rack Guide, 36", assy
3	802929	Sems Ph Hd Washer, 6-20x5/8
4	801815	Right Door Rack Guide, 36"
5	803379	Screw, 8-18x1/2"
6	809817	Weldment, Liner, Door, 36"
7	801102	Striker Plate, Door Latch
8	801542	Screw, 8-18x3/8"
9	801764	Gasket, Rope, Glass Pack, 36"
10	809115	Hydraulic Oven Door Hinge
11	801448	Triple Pane Oven Glass Pack, 36"
12	806610	Insulation, Door, Inner Top, 36"
13	806617	Insulation, Door, Inner, Sides, 36"
14	801765	Shield, Heat, Inner, Door, 36"
15	810794	Insulation, Door, Center, Top
16	801766	Heat Deflector, Center, 36"
17	803378	Shield, Heat, Door, 36"
18	806613	Insulation, Door, Outer, 36"
19	801540	Screw, 10-24x2-1/4"
20	800314	Bracket, Door, Outer, Mounting
21	803245	Door Skin, Otr w/window, 36" U/S
	803246	Door Skin, Otr w/window, 36" U/B
	803247	Door Skin, Otr w/window, 36" U/P
22	801206	Handle, Oven Door, Assy., 36", Sst
	801893	Handle, Oven Door, Assy., 36", Plt
	801892	Handle, Oven Door, Assy., 36", Blk
23	806606	Insulation, Door, Ctr., Bottom
24	806623	Insulation, Door, Ctr., Side, 36"
25	806615	Insulation, Door, Inner Btm
26	800418	Nut, 8-32 Hex Nut W/Lock Washer
27	803335	Hinge, Wall Oven, 36"

**Oven Door Exploded View  
Single and Double Oven**

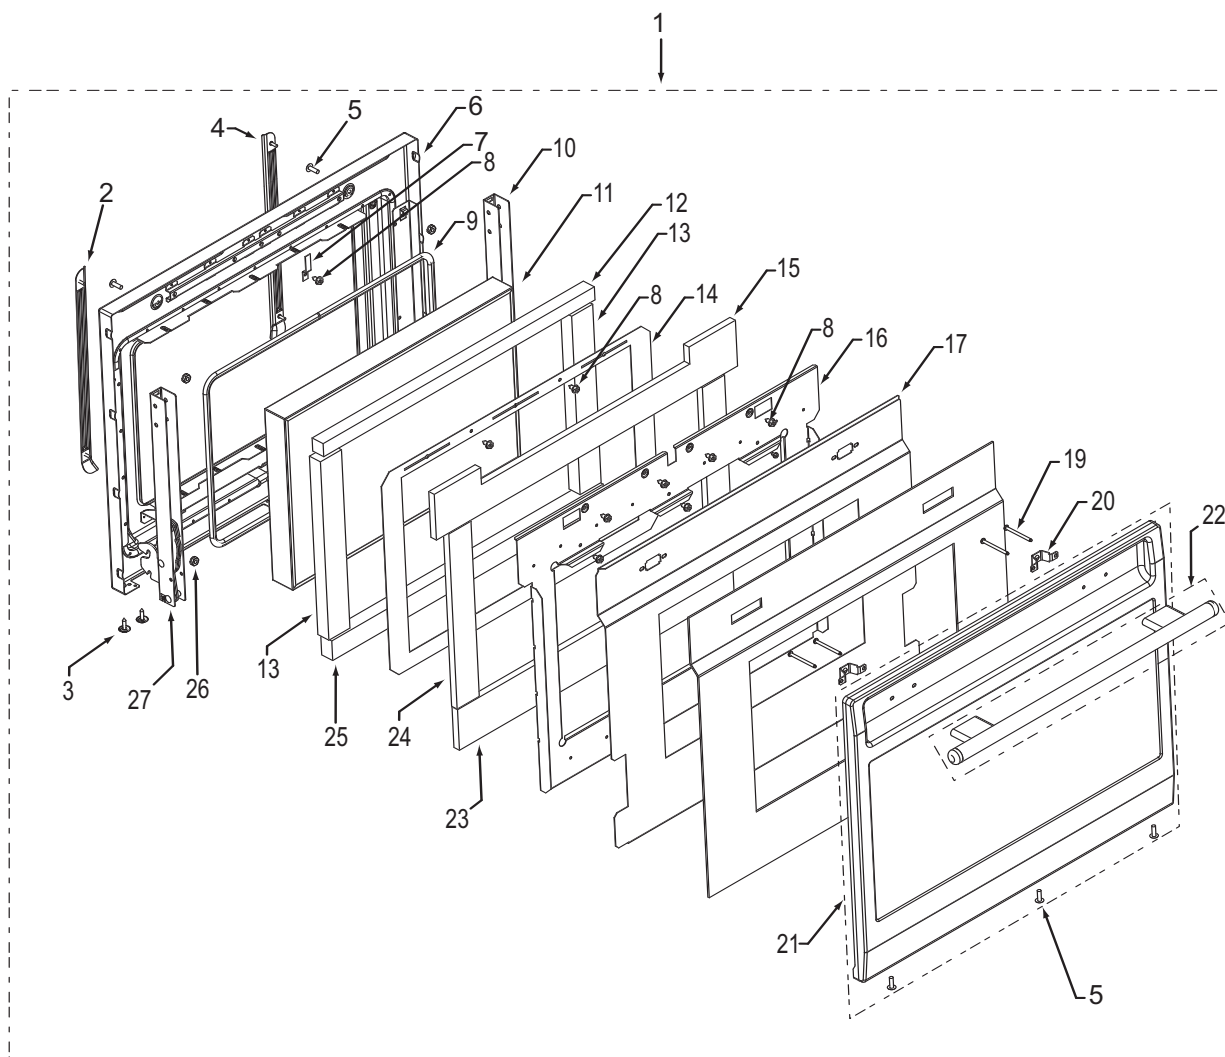



**30" Back View Parts List  
Single and Double Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	N/A	
2	800382	Stiffener, Top Module
3	801542	Screw, 8-18x3/8"
4	808602	Panel, Upper, Front
5	808603	Cover, Rear, Top Module
6	808604	Cover, Small, Top Module
7	808660	Catalyst, Sub Assembly
8	808607	Strain Relief, Metal
9	811669	Switch, Thermostat
10	808607	Convection Fan Shrd, Wall Oven
11	808609	Channel, Divider, Side Exhaust
12	803074	Channel, Divider, Air, Single
13	808610	Panel, Back, Single Oven
14	808626	Bake, Pan Assembly
15	808605	Element, Bake
16	808617	Panel, Back, Double Oven
17	808614	Channel, Divider Side, Exhaust, Lrg
18	812438	Cover, Back Panel, Small
19	801143	Fan, Cooling, Lower
20	808612	Cover, Fan, Cooling
21	N/A	
23	811669	Switch, Thermostat
24	807974	Panel, Back, Top Insulation

**36" Back View Parts List  
Single Oven**


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	801536	Face Plate, Venting, Upper, 36"
2	801582	Stiffener, Top Module, 36"
3	801542	Screw, 8-18x3/8"
4	801478	Panel, Top Module, Front, 36"
5	801331	Cover, Large, 36"
6	801803	Cover, Small, Top Module, 36"
7	808660	Catalyst, Sub Assembly
8	808607	Strain Relief, Metal, 36"
9	804554	Switch, Thermostat, 36" Single
10	808607	Convection Fan Shrd, Wall Oven
11	803334	Channel, Exhaust, 36"
12	803327	Channel, Cooling, 36"
13	801506	Panel, Cover, Back, 36"
14	802700*	Bake, Pan Sub Assembly, 36"
15	800360*	Element, Bake, 36"

**Not Shown**

803503	Plate, Vent Middle
812458	Wire Harness, Double Main
812459	Wire Harness, Single Main

\* See Bake Pan Assembly exploded view page 14.

**Oven Back Exploded View  
Single and Double Oven**

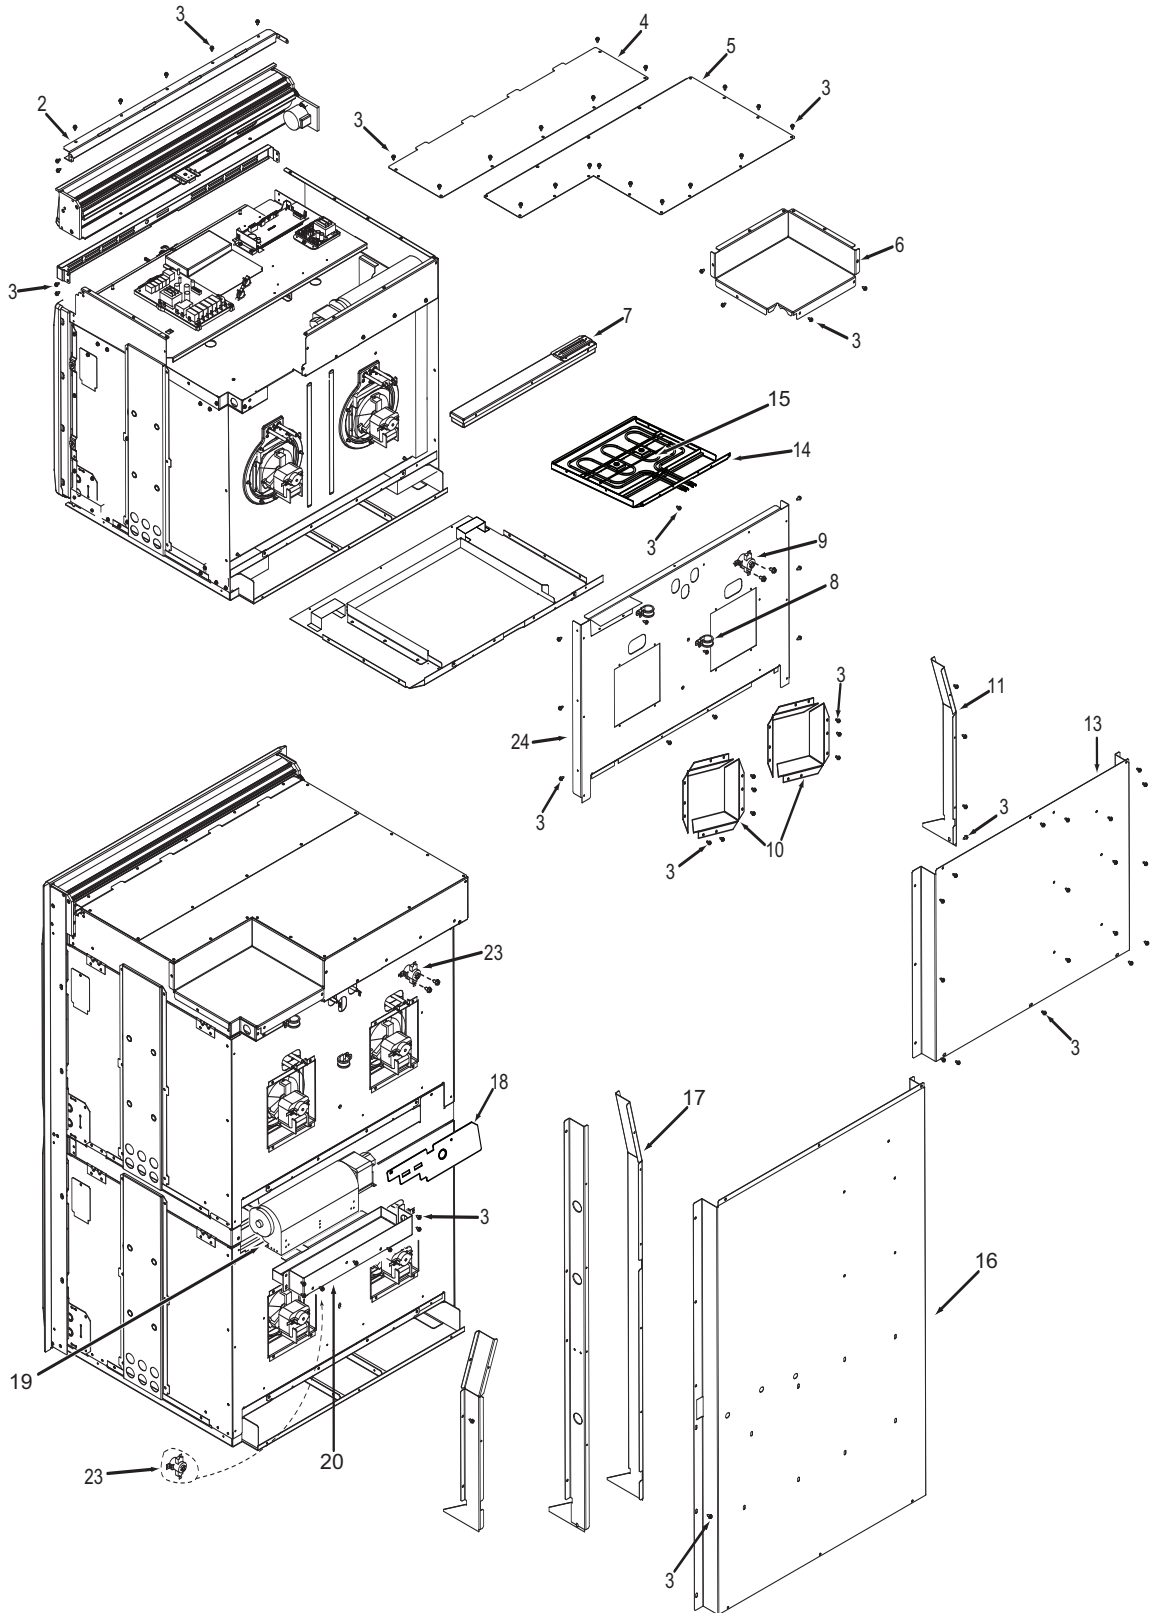


**30" Side and Base View Parts List  
Single and Double Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	820125	Channel, Upper Venting
2	800890	Cover, Temperature Probe
3	801721	Enclosure, Rt Side 30"
4	801475	Bracket, Hold Down
5	800926	Hinge, Pocket
6	800364	Stiffener, U-Wrap
7	808421	Base, Assembly
8	801720	Enclosure, Left Side, 30"
9	N/A	Insulation, Channel Plug


**36" Side and Base View Parts List  
Single Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	801335	Channel, Upper Venting
2	800890	Cover, Temperature Probe
3	801724	Enclosure, Rt Side
4	801475	Bracket, Hold Down
5	800926	Hinge, Pocket
6	800364	Stiffener, U-Wrap
7	804553	Base, Assembly, 36"
8	801723	Enclosure, Left Side,

Oven Side and Base Exploded View  
Single and Double Oven

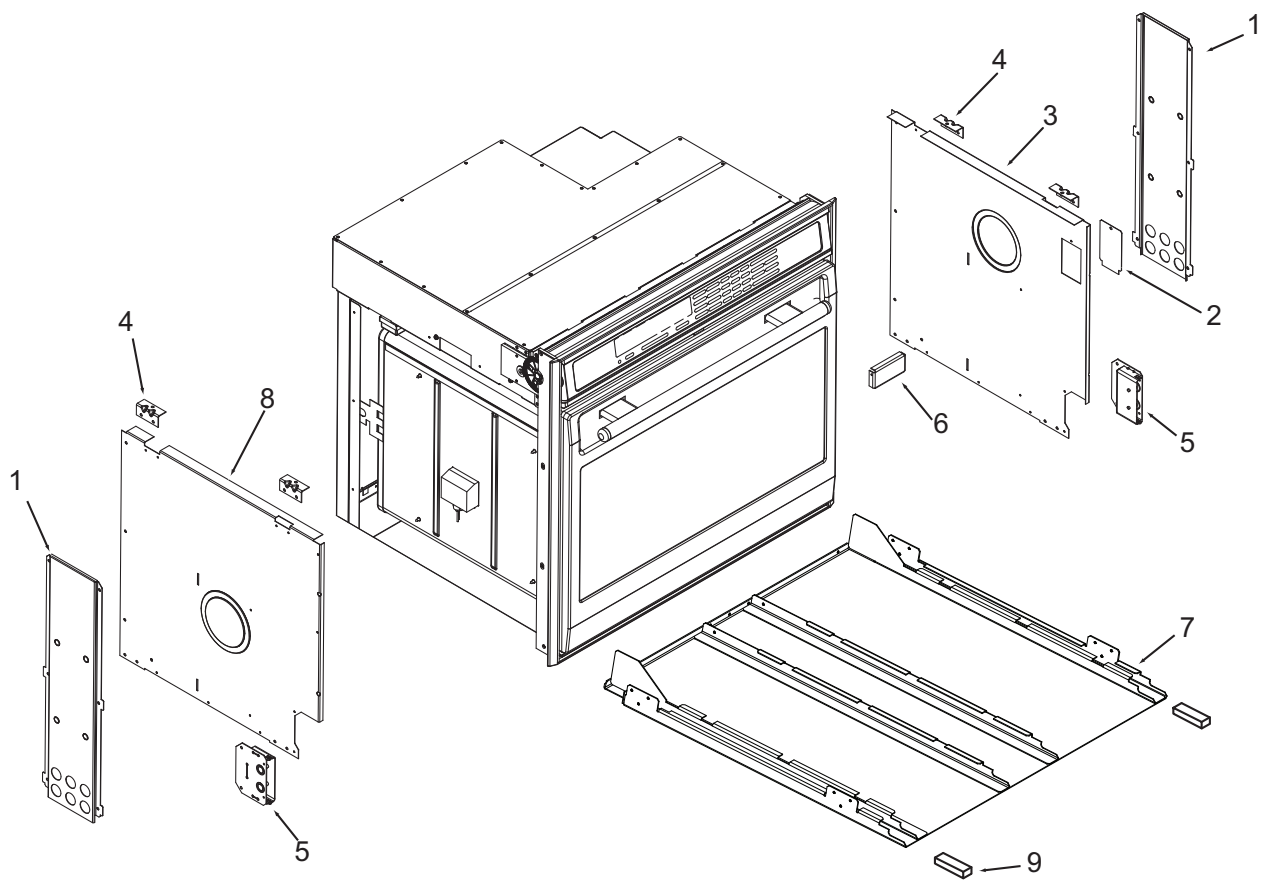



**Bake Pan Assembly Exploded View  
Single and Double Oven**

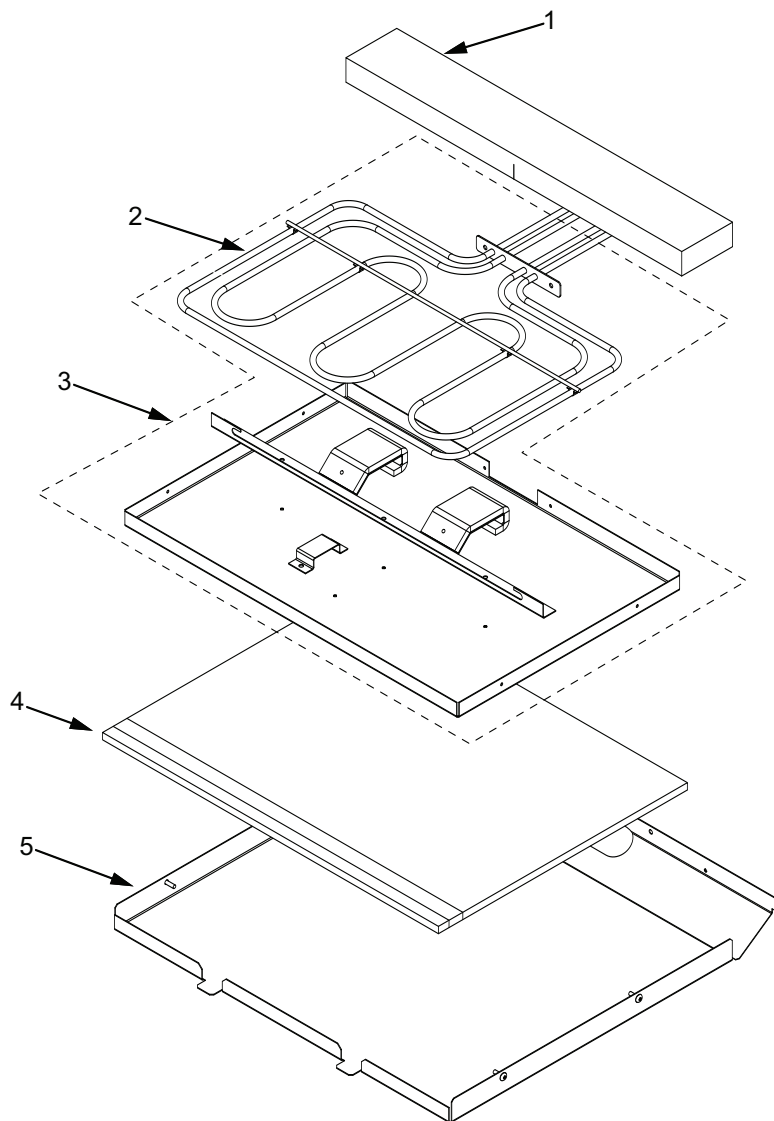

**Bake Pan Parts List  
Single and Double Oven**

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	808625	Insulation, Bake Pan Back
2	808605	Element, Bake - Mgo 3500
3	808626	Assy, Inner Bake Pan
4	808627	Insulation, Thk-Bake Pan
5	808628	Pan, Bake Element

**Trim Exploded View**

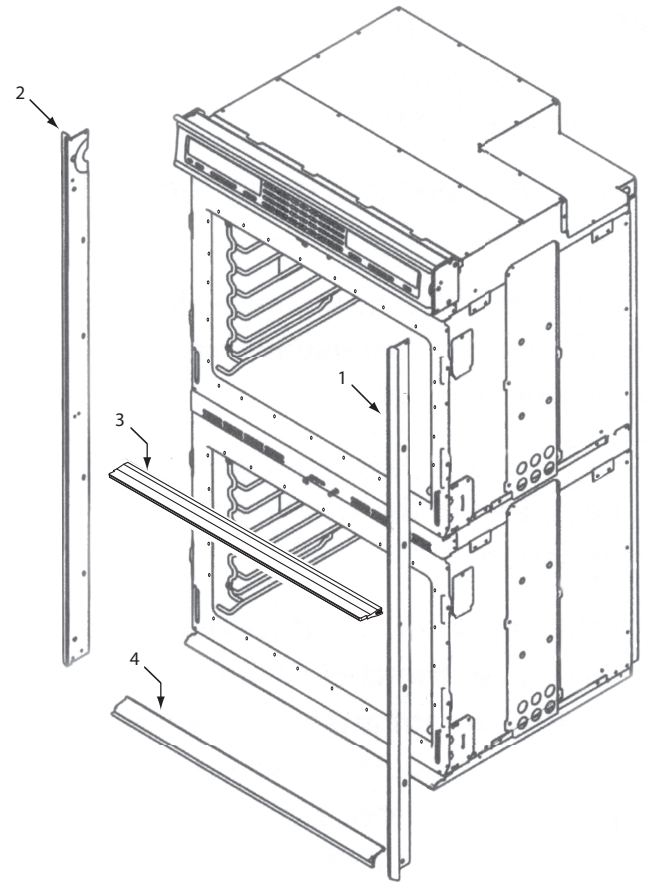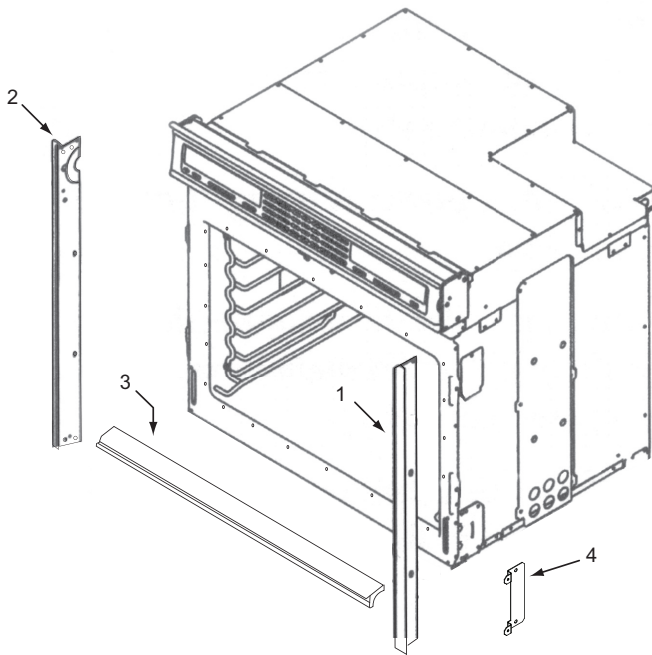

<b>Model #</b>	<b>Ref#</b>	<b>Part #</b>	<b>Description</b>
SO30F/S	1	800706	Extrusion, Side, Right
	2	800707	Extrusion, Side, Left
	3	805115	Extrusion, Bottom
SO36U/S	1	813876	Extrusion, Side, Right
	2	813875	Extrusion, Side, Left
	3	802731	Extrusion, Bottom
SO30U/B	1	800525	Extrusion, Side, Right
	2	800524	Extrusion, Side, Left
	3	805175	Extrusion, Bottom
SO36U/B	1	813878	Extrusion, Side, Right
	2	813877	Extrusion, Side, Left
	3	802743	Extrusion, Bottom
SO36	4	811218	Bracket, Trim Support

**Not Shown**

808629 Washer, .25 x .625, Fiber

<b>Model #</b>	<b>Ref#</b>	<b>Part #</b>	<b>Description</b>
DO30F/S	1	800389	Extrusion, Side, Right
	2	800390	Extrusion, Side, Left
	3	803720	Extrusion, Middle
	4	805115	Extrusion, Bottom
DO30U/S	1	800389	Extrusion, Side, Right
	2	800390	Extrusion, Side, Left
	2	803966	Extrusion, Side, Left
	4	805115	Extrusion, Bottom
SO30U/P	1	800518	Extrusion, Side, Right
	2	800519	Extrusion, Side, Left
	4	805174	Extrusion, Bottom
SO36U/P	1	813880	Extrusion, Side, Right
	2	813879	Extrusion, Side, Left
	4	802744	Extrusion, Bottom
DO30U/P	1	805186	Extrusion, Side, Right
	2	805185	Extrusion, Side, Left
	3	805184	Extrusion, Middle
	4	805174	Extrusion, Bottom
DO30U/B	1	805183	Extrusion, Side, Right
	2	805182	Extrusion, Side, Left
	3	805181	Extrusion, Middle
	3	805175	Extrusion, Bottom